



Rbh Access Technologies RBH-N86-S RFID Proximity Reader User Guide

[Home](#) » [Rbh Access Technologies](#) » Rbh Access Technologies RBH-N86-S RFID Proximity Reader User Guide



Contents


- [1 Rbh Access Technologies RBH-N86-S RFID Proximity Reader](#)
- [2 INSTALLATION](#)
- [3 Cable Instruction](#)
- [4 FCC Warning:](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)




Rbh Access Technologies RBH-N86-S RFID Proximity Reader




INSTALLATION

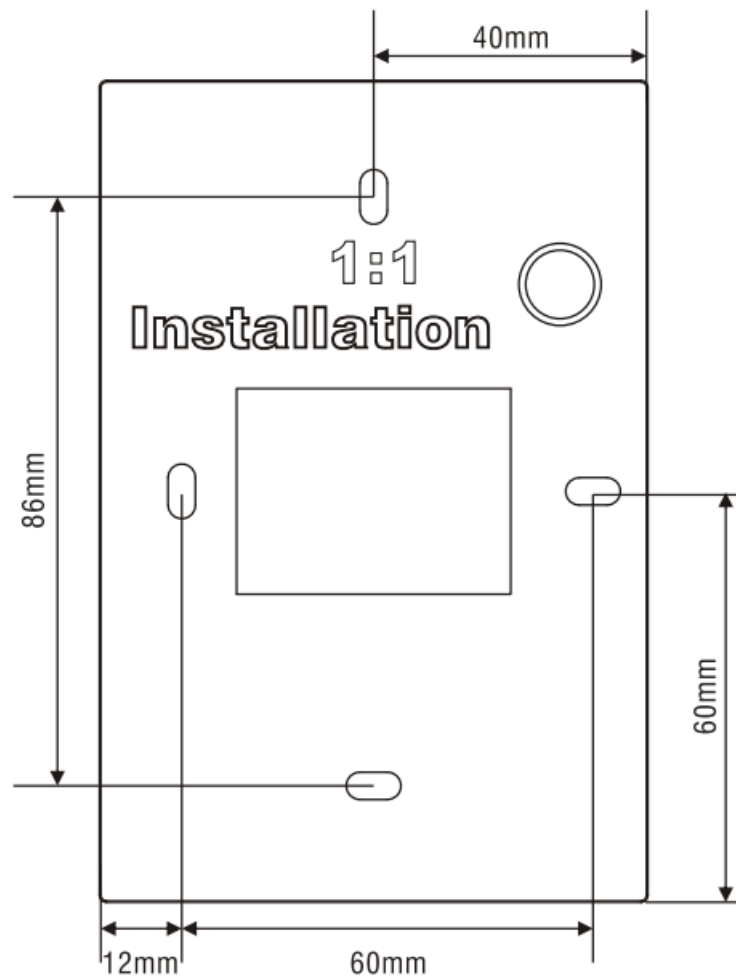


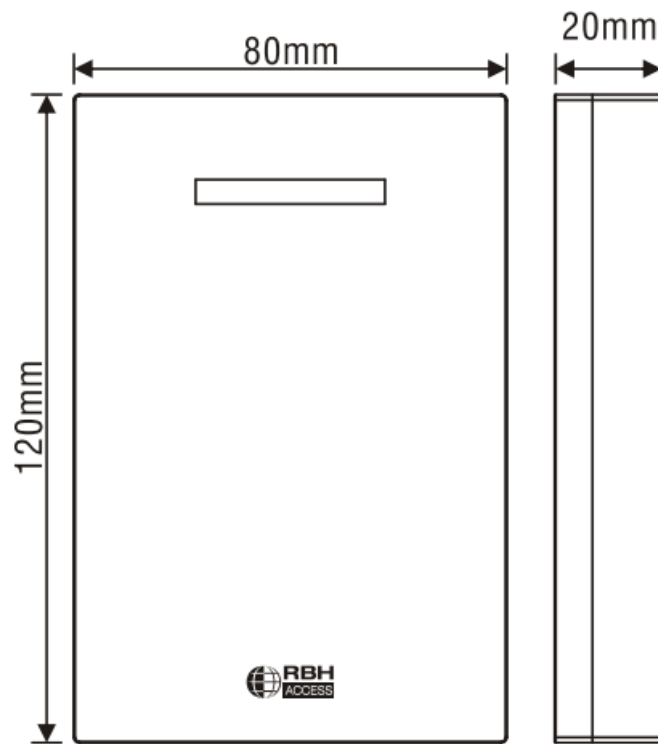


B. Installation Guide

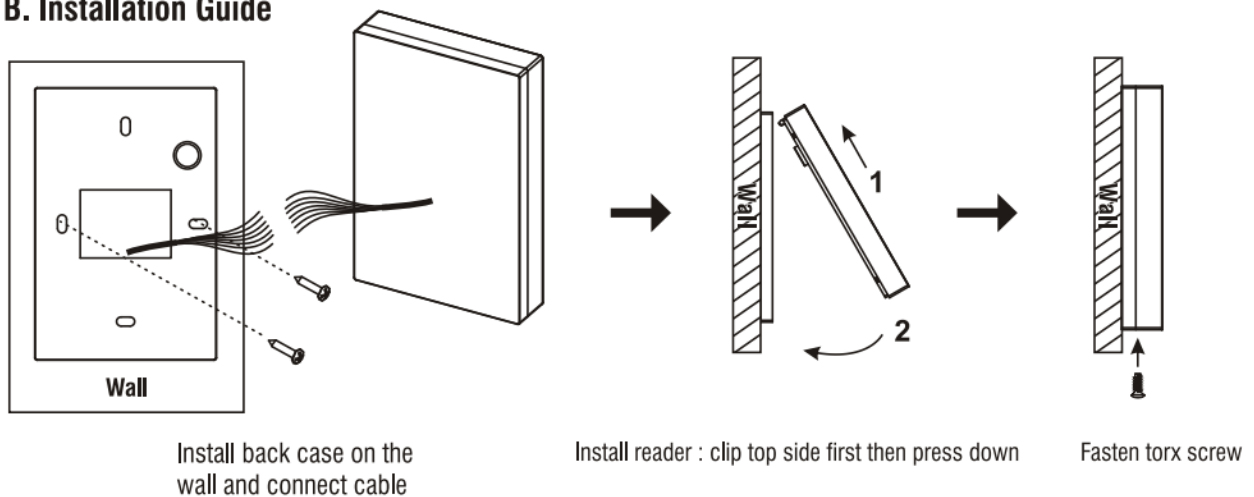

Cable Instruction

RED	VIN+ (Power Positive)	DC 9~24V
BLACK	GND (Power Negative)	
WHITE	DATA 1	Wiegand Cable
GREEN	DATA0	
BLUE	Green LED Control / Low Potential	
YELLOW	Red LED + Buzzer Control / Low Potential	
ORANGE	485-	
BROWN	485+	

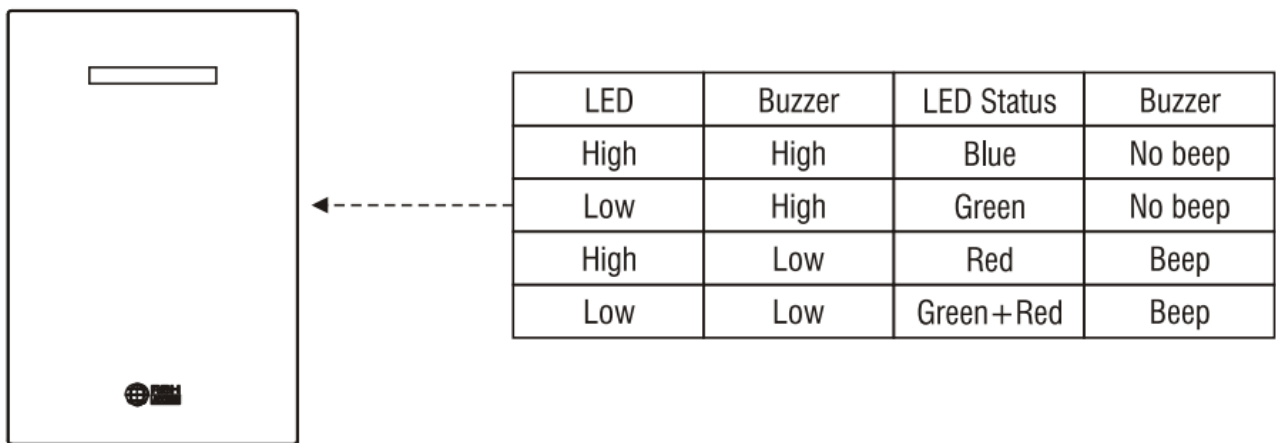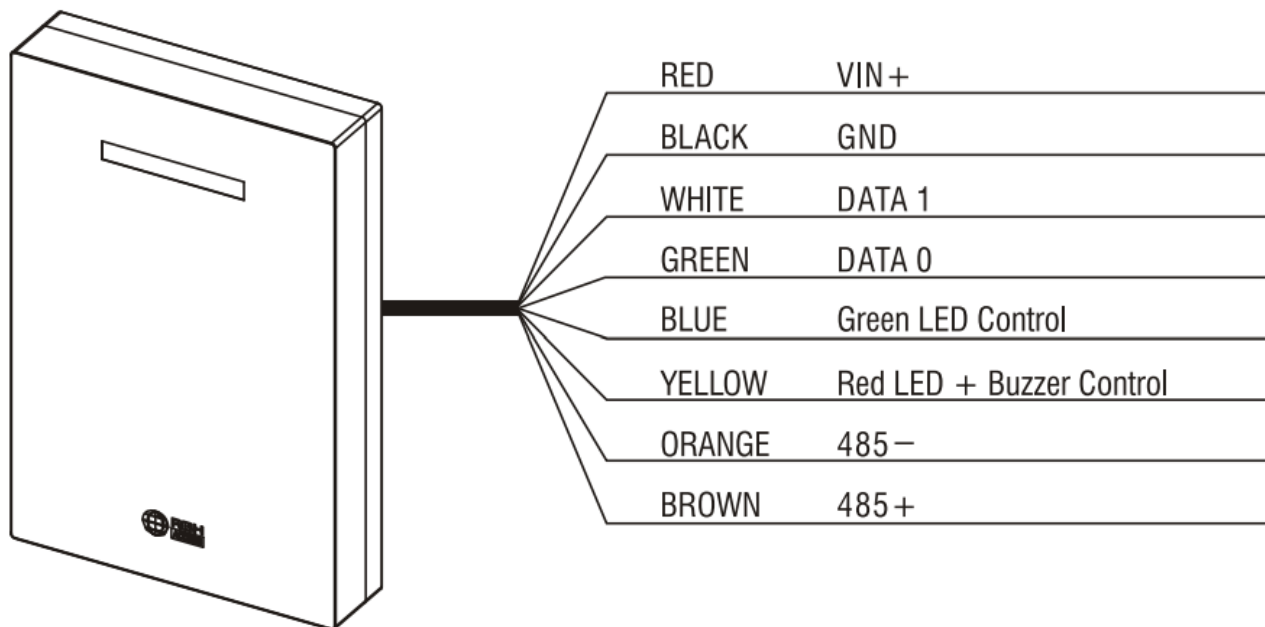

FCC Warning:


This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Documents / Resources

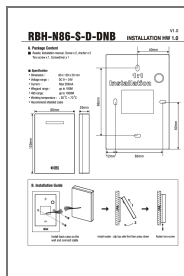

[Rbh Access Technologies RBH-N86-S RFID Proximity Reader](#) [pdf] User Guide
RBH-N86-S, RBHN86S, VBPRBH-N86-S, VBPRBHN86S, RBH-N86-S, RFID Proximity Reader