



RC1910 Replacement Remote Control Instructions

[Home](#) » [RC1910](#) » RC1910 Replacement Remote Control Instructions 



Contents

- [1 RC1910 Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC1910 Replacement Remote Control

[RC1910](#)



Original	Recharge
	Power
	Sleep
	Screen
	Presets
	TV/Radio /
	FAV
	Lang
	Subtitle
	TXT
	1
	2
	3
	4
	5
	6
	7
	8

Original	Recharge
	9
	EPG
	0
	Swap
	Photo/Music/Movi
	World
	Source
	Menu
	Up
	Left
	OK
	Right
	Down
	C
	Disp.
	Search Mode
	Return



Original	Recharge
	CH+ / Page+
	Info / Angle
	Vol+
	CH- / Page-
	Mute / Dimmer
	Vol-
	Rec / Rec Mode
	Pause / Step / Freeze
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	Play / Slow
	Stop / Hold
	>> / Tune+
	Red / Netflix / Search
	Zoom / Size
	Green / APP / Repeat

Original	Recharge
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random



<https://tout-telecommandes.fr/fr/1038799-18924-telecommande-de-remplacement-pour-RC-1910-30070046.html>

Documents / Resources



[RC1910 RC1910 Replacement Remote Control](#) [pdf] Instructions

RC1910 Replacement Remote Control, RC1910, Replacement Remote Control, Remote Control, Control

References

- [User Manual](#)