



RCA AH5WH Universal AC Adapter User's Guide

[Home](#) » [Support](#) » RCA AH5WH Universal AC Adapter User's Guide 

Contents

- [1 RCA AH5WH Universal AC Adapter](#)
- [2 Instructions](#)
- [3 12-Month Limited Warranty](#)
- [4 FREQUENTLY ASKED QUESTIONS](#)



RCA AH5WH Universal AC Adapter




The RCA brand Universal AC/DC Adapter allows you to power portable devices requiring 300mA or less (AH3WH) or 500mA or less (AH5WH) using a conventional AC electrical outlet.

Instructions

1. Set the voltage selector switch to the proper setting for your device. Refer to the device's user manual for the correct voltage requirement, or determine the voltage by multiplying the number of AA, AAA, C, or D batteries required by 1.5—for example, 4 batteries x 1.5m = 6 volts.

Note: The voltage setting may also be found next to the DC jack or on the device information plate.

2. Select the adapter plug tip that best fits the device.
3. Before inserting the plug tip into the AC adapter receptacle, you must first determine the correct polarity of your device. Polarity is represented by the following symbols.

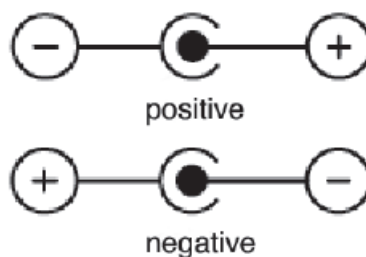

Note: Polarity information may be found next to the DC jack, user manual, or device information plate. The adapter plug tips have a positive (+) symbol on one side and a negative (-) symbol on the other side. The AC adapter receptacle says "TIP" on one side.



4. If your device has positive polarity, align the word "Tip" on the AC adapter receptacle with the (+) symbol on the adapter plug tip. See the diagram below.



If your device has negative polarity, align the word “Tip” on the AC adapter receptacle with the (-) symbol on the adapter plug tip. See the diagram below.



5. Connect the adapter plug tip to the DC jack of your device.
6. Plug the AC adapter into a 110/120-volt standard electrical outlet and operate the device as usual. Important: This power unit is intended to be correctly oriented in a vertical or floor mount position.
7. If your device does not work, IMMEDIATELY unplug the AC adapter and recheck the instructions carefully, particularly the voltage and polarity settings.

CAUTION:

1. Never attempt to power a device for which the voltage or polarity is unknown. Improper voltage or polarity settings may result in severe damage to the device or AC Adapter.
2. This AC adapter should never be used with any device that requires more than 300mA (AH3WH) or 500mA (AH5WH) of current.
3. Disconnect the AC adapter from the electrical outlet when not in use.

12-Month Limited Warranty

Audiovox Electronics Corporation (the “Company”) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced (at the Company’s option) without charge for parts and repair labor. To obtain repair or replacement within the terms of this Warranty, the product along with any accessories included in the original packaging is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below. Do not return this product to the Retailer.

This Warranty is not transferable and does not cover products purchased, serviced or used outside the United States or Canada. The Warranty does not extend to the elimination of externally generated static or noise. This Warranty does not apply to costs incurred for installation, removal, or reinstallation of the product, or, if in the Company’s opinion, the product has been damaged through acts of nature, alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable). This Warranty does not cover damage caused by an AC adapter not provided with the product.

THE EXTENT OF THE COMPANY’S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY’S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company

any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

- **U.S.A.:** Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788
- **CANADA:** Audiovox Return Center, c/o Genco, 6685 Kennedy Road, Unit 3, Door 16, Mississauga, Ontario L5T 3A5

© 2007 Audiovox Accessories Corporation 111 Congressional Blvd., Suite 350 Carmel, IN 46032 USA

FREQUENTLY ASKED QUESTIONS

DOWNLOAD THE PDF LINK: [RCA AH5WH Universal AC Adapter User's Guide](#)

[Manuals+.](#)