

RCA RCR504BE 4-device Universal Remote



RCA RCR504BE 4-device Universal Remote User Manual

[Home](#) » [RCA](#) » RCA RCR504BE 4-device Universal Remote User Manual 

Contents

- [1 RCA RCR504BE 4-device Universal Remote User Manual](#)
- [2 FCC statement](#)
- [3 Battery Installation](#)
- [4 Programming With Code Search](#)
- [5 Care and Maintenance](#)
- [6 90-Day Limited Warranty](#)
- [7 TV Codes](#)
- [8 References](#)



RCA RCR504BE 4-device Universal Remote User Manual



Congratulations on your purchase of the RCR504BE / CRCR504BE. This user-friendly remote makes juggling multiple remote controls a thing of the past! This one unit controls up to four components, including the most popular brands of TVs, VCRs or DVD players, satellite receivers, cable boxes, or digital TV converter boxes. The RCR504BE / CRCR504BE is easy to use and easy to program, and it gives you total control—at the touch of your fingertips!

FCC statement

Note: This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by VOXX Accessories Corporation could void the user's authority to operate the equipment.

Industry of Canada regulatory information
CAN ICES-3 (B)/NMB-3 (B)

Battery Installation

Your RCR504BE / CR504BE universal remote requires 2 new AAA alkaline batteries (sold separately).

To install the batteries

 
1. Turn the unit over, and remove the battery compartment cover.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.

Battery Precautions


- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them according to Local and National Regulations.

Programming with Direct Entry

To program your remote to control up to four components, follow these steps:

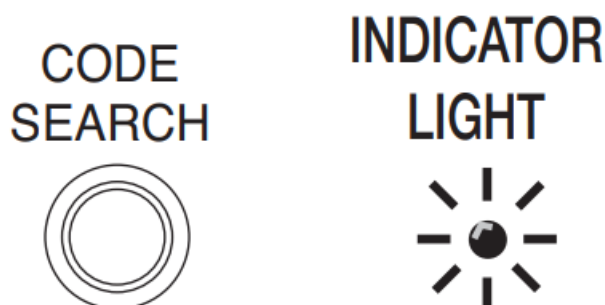

 1. Manually turn on the component you wish to program the remote to operate.
2. Find the four-digit code for your brand of TV, VCR, DVD, satellite receiver, cable box, or digital TV converter in the enclosed code lists.
3. Press and hold the CODE SEARCH key until the indicator light turns on. Release the CODE SEARCH key.
4. Press and release the TV, VCR or SAT·CBL·DTC key. The indicator light blinks and then remains lit.

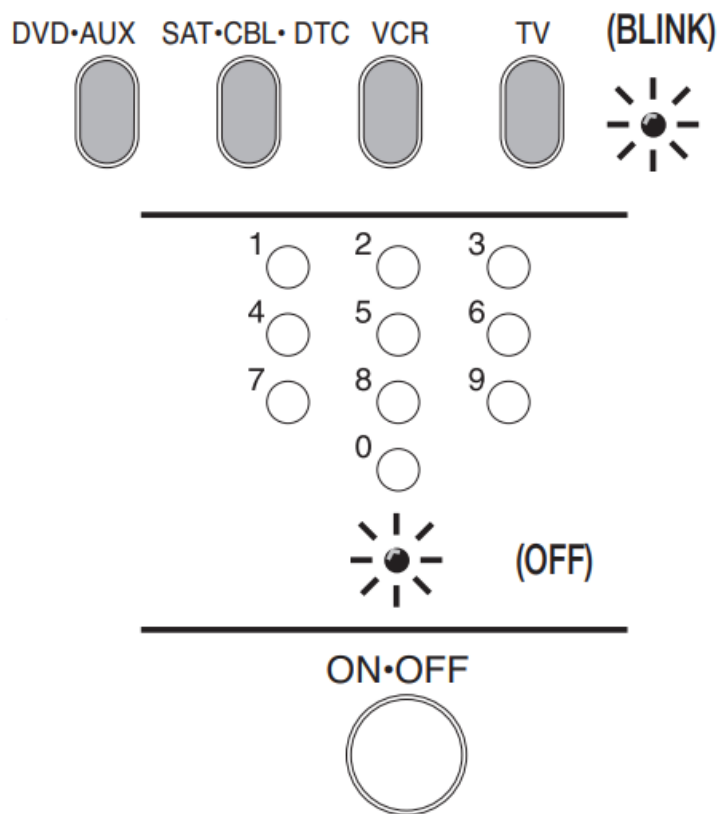

Note: DTC references digital TV converter. To program the DVD•AUX key: Press the DVD•AUX key.

5. To control a DVD, press the VCR key. To control a TV, press the TV key. To control a satellite receiver, cable box, or digital TV converter, press the SAT•CBL•DTC key. The indicator light stops blinking and remains lit.
6. Enter the four-digit code, using the numeric keypad. After the code is entered, the indicator light turns off.

 
Note: If the indicator light blinks multiple times, you've entered an invalid code. Start from step 2 again.

7. Aim the remote at the component and press the ON•OFF key. The component should turn off.

Note: If your component does not respond, try all the codes for your brands. If the codes do not work or your brand is not listed, try the Code Search Method that follows.

Programming With Code Search

If your TV, VCR, DVD, satellite receiver, cable box, or digital TV converter does not respond after you have tried all the codes for your brands, or if your brand is not listed, try searching for your code via the Code Search Entry Method. To program your remote via the Code Search Entry Method, follow these steps:

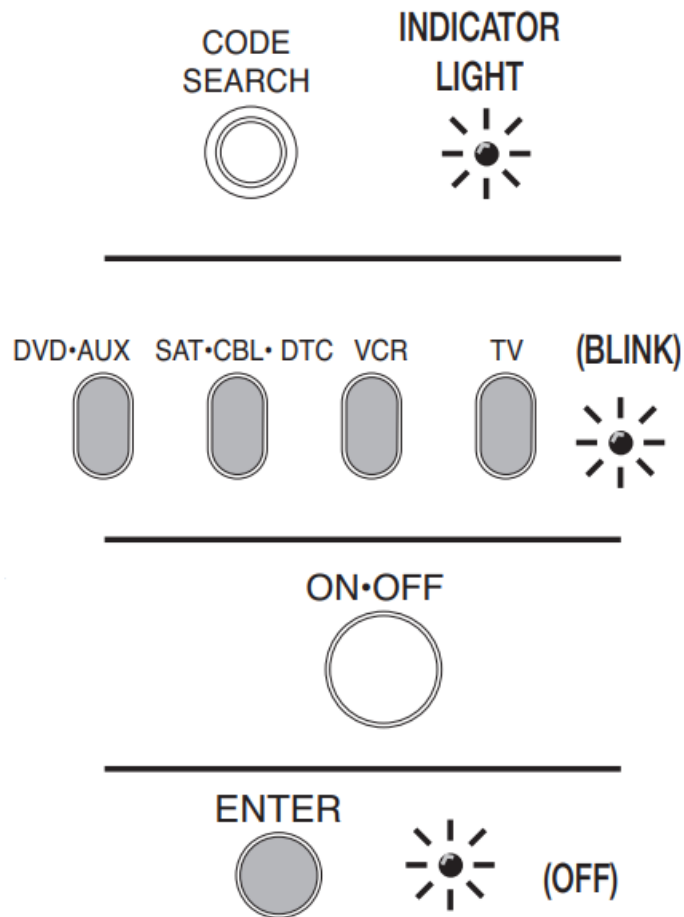

1. Manually turn on the component you wish to program the remote to operate.
2. Press and hold the CODE SEARCH key until the indicator light turns on.
3. Release the CODE SEARCH key.
4. Press and release the component key you wish the remote to control—TV, VCR or SAT-CBL-DTC key. The indicator light blinks once and remains lit.

Important: Find the ENTER key on your remote (don't press it yet). You will need to press this key quickly in step 6 below.

To program the DVD-AUX key: Press the DVD-AUX key, followed by the component key you wish the DVD-AUX key to control. For DVD, press the DVD-AUX key, followed by the VCR key. For an auxiliary component, press the DVD-AUX key, followed by the corresponding component key (TV, VCR, SAT-CBL-DTC).

5. Press and release the ON-OFF key until the component turns off.
Important: You may have to press the ON-OFF key up to 200 times.
6. As soon as the component turns off, press the ENTER key within 4 seconds. The indicator light turns off. Note: If you wait longer than 4 seconds to press ENTER, the remote goes to the next code—you will need to start the code search from step 1 again.


Menu Function – TV, VCR, DVD, SATCBLDTC

The Menu function on your remote is used to make changes to selected settings. The MENU key operates in TV, VCR, DVD and SAT-CBL-DTC Modes. Each menu varies from brand to brand. The TV Menu is used to make changes in the TV settings, such as changing colour, channels and timers. The SATCBLDTC Menu navigates through the Menu screens to make changes to settings. The VCR or DVD Menu you can navigate to languages, subtitles and more. While in Menu Mode, these keys function as follows:

Mode	Vol up/ down	Ch +/-
TV, SAT•CBL•DTC, VCR, DVD	Cursor moves right/left	Cursor moves up/down

To use the Menu function, follow these steps

 1. Press the component button whose menu you wish to access (TV, VCR, DVD•AUX or SAT•CBL•DTC).
2. Press the MENU key. The menu of the chosen component is shown.

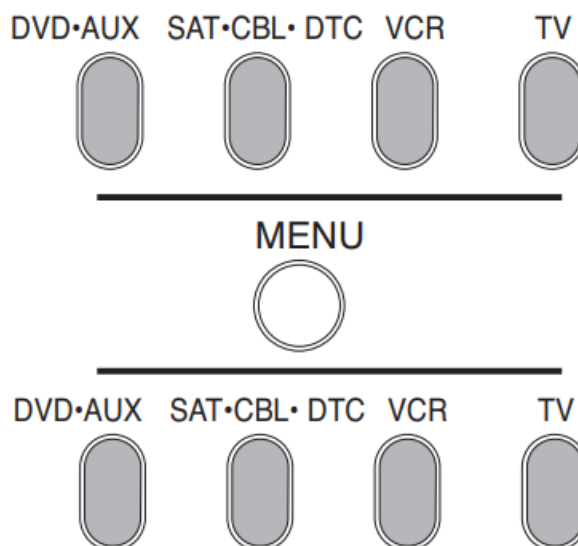

Note: Some functions of some brands may not be fully supported.

3. To exit the menu mode press the corresponding component key on the remote (TV, VCR, DVD•AUX or SAT•CBL•DTC).

Special Notes for Menu Use

1. In the Menu Mode of RCA, GE and PROSCAN TVs, pressing the MENU key selects the highlighted item. The numeric keys may also be used to select the menu choice.
2. For SONY components, pressing the ENTER key while in Menu Mode returns to the previous menu.

Accessing Digital Channels

Then press the INPUT (-) key and press the subchannel number (in this case, "1"). The INPUT key has two other functions as well: (1) it toggles through all the video sources connected to your TV; and (2) when the remote is in VCR mode, this button toggles between the VCR and the TV input.

Care and Maintenance

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the remote only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Keep the remote away from dust and dirt.
- Wipe the remote with a damp cloth occasionally to keep it looking new.

- Modifying or tampering with the remote's internal components can cause malfunction and invalidate its warranty.

90-Day Limited Warranty

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced with the new or reconditioned product (at the Company's option) without charge for parts and repair labour. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), and transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-[800-645-4994](tel:800-645-4994).

This Warranty does not cover products purchased, serviced or used outside the United States or Canada. This Warranty is not transferable and does not extend to costs incurred for installation, removal or reinstallation of the product. This Warranty does not apply if in the Company's opinion, the product has been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or the simultaneous use of different battery types (e.g. alkaline, standard or rechargeable).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER FOR THE PRODUCT. This Warranty is instead of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights, which vary from state/province to state/province.

TV Codes

Admiral	0463, 4030, 4111, 4221
Advent	1570
Affinity.....	3717, 3577, 3870
Aiwa.....	1362
Akai.....	1675
AOC... ..	1589, 3720, 1365, 2014, 2087, 4101
Apex Digital.....	2397, 4347, 4350
Ario	2397
Atvio.....	3638, 3636, 3657
Audiovox.....	1564, 1769, 0623
Auria	2087, 2014, 2277
Aventura	0171
Avol.....	3118
BGH	4029, 4070, 0898,
.....	2414, 0876, 4028, 4030
Blue Sky.....	3997
Bluesky.....	3997
Britania	2414
Broksonic	0463, 1892
CCE	3782, 4091, 0623, 4092

Champion	1362
Changhong.....	3814
Coby	3478, 3627, 2344
Commercial Solutions	1447
Contex.....	4053
Continental.....	2357
Coradir.....	2844
Craig.....	3423
Crown Mustang.....	0898
Curtis.....	2855, 3577, 3895, 2352, 2397, 4035, 4053, 3636, 1326, 3382, 3717
Curtis Mathes.....	0623
Cytron	1326
Daewoo.....	0623
Digitrex	4207
Disney.....	1892, 0171
Dumont.....	0017
Durabrand	0463, 0171, 1570, 0178
Dynex	2049, 2184
Electrohome	0463, 1570, 1670
Electron.....	2855
Elektra.....	0017, 0623
Element.....	3559, 1687, 2183, 2964, 1886
Elite	1457
Emerson	1864, 1394, 0171, 1886, 0463, 1963, 0178, 0623, 3623, 2183, 3559
Encross	0876
Envision.....	1589, 1365, 2087, 2014
Epworth	1362
EQD	2014, 2087, 2277
EQD Auria.....	2014, 2087, 2277
ESA	0171, 1963
Fair Mate.....	1326
Favi.....	3382
Fisher.....	1362
Fluid	2964, 3559
Funai	1864, 0171, 1394, 1963
GE.....	1447, 0178
General Electric	1447, 0178
GFM.....	0171, 1963, 1886, 1864
Gibraltar.....	0017
GoldStar.....	0178
Haier.....	1749, 2309, 1748, 3382, 2293, 4398, 1570
Hallmark	0178
Hannspree.....	1348
H-Buster.....	3620, 3419
Hisense.....	3519, 2183, 4398, 3382, 4029
Hitachi.....	1643, 3639, 3382, 3697
Hiteker.....	3118
Hyundai.....	4509
iLo.....	0171, 1394
Insignia.....	2049, 1564, 1326, 1892, 0171, 0463, 1963, 2184
Inteq.....	0017
IRT	0623
iSymphony	3382, 3118, 3094
JC Penney.....	0178, 0156
JCM.....	2256

Jensen 1326
JVC..... 1774, 1601, 2321, 2271, 0463,
..... 1570, 1670, 4070, 1892
KC..... 4182
KDS..... 1523, 1687
Ken Brown..... 4056, 4099, 4221, 4444
Kreisen 0876
Legend 2397, 2309
Lexus 3638, 3657
LG 2731, 2358, 3397, 0178, 0017
LG Alps..... 2358
LodgingStar..... 3147
LXI 0156, 0178, 0017
MAG..... 1687, 1523
Magnavox..... 3623, 1866, 2372, 1454,
..... 2597, 1963, 0171, 1365, 1867
Marantz 1454
Master-G 3419
Megatron..... 0178
Memorex..... 0463, 1570, 1670,
..... 0178, 1892, 0171, 1687
MGA..... 0178
Microsonic..... 1326, 3419, 4235
Midland..... 0017
Miray. 3847, 2414, 2429, 3183, 4178, 0898
Misakai..... 0171
Mitsubishi Electric 1250, 0178
Mitsui 3658, 3638, 3657
NAD..... 0156, 0178
Naoki..... 1540, 2357
Naxa 2104, 3382, 3423
NEC..... 0876, 2293
New Acoustic Dimension 0156, 0178
Nexus..... 3519
Nexus Electronics..... 2183
Nikko..... 0178, 0017, 0156
Nimbro..... 2104
Noblex..... 1362, 3697, 1142, 4029,
..... 3803, 4030, 4149, 4205
Norcent..... 1365, 1589
Nordmende..... 3419, 3861, 3134,
..... 3327, 3767, 3835
NuVision..... 4347
OCOSMO..... 2337, 3899
Olevia..... 1610
Orion..... 0463, 1892, 3540
Panasonic 1480, 1291, 0156, 0178
Panavox..... 4149
PARK 2104
Penney 0178, 0156
Philco..... 3426, 3022, 2414, 0171,
..... 1963, 4178, 0623, 1394, 1142,
..... 1362, 0463, 3639, 3697
Philips..... 1867, 2372, 1454, 2597, 4222,
..... 3623, 2800, 1744, 1866, 0017,
..... 0171, 1963, 1365, 1394, 1589
Pioneer..... 1457
Planar..... 1589
Polaroid..... 1523, 1769, 4035,

..... 1687, 1326, 1524
 Portland 0623
 Prima..... 1749
 Proscan..... 1447, 3577, 3382, 2183, 2256,
 3717, 3332, 3636, 3895, 4035,
 4053, 4483, 4495, 2746, 3559, 3953
 Proton 0178
 Provview 1687, 1523
 Pulsar..... 0017
 QuantumFX 2337
 Quasar..... 3899, 4207, 4367, 1291
 RadioShack 0178
 RCA... 2746, 2932, 2434, 3577, 1447, 2247,
 3382, 3717, 3332, 3895, 2187, 4053,
 3636, 2183, 2855, 3147, 4394, 0623,
 2429, 3419, 4035, 1670
 Realistic 0178
 Recco..... 3847, 0898, 3183
 Runco 0017
 Samsung..... 2051, 3993, 0178
 Sankey..... 2964
 Sansei 4030
 Sansui..... 3540, 0463, 1892, 1670, 3564,
 4053, 0171, 3559
 Sanyo..... 1142, 1362, 3697, 3861, 1480
 Sceptre 3899, 2528, 2337
 Scotch..... 0178
 Scott..... 0178
 Sears..... 0156, 0171, 0178
 Seiki... 3953, 2964, 3559, 3382, 3560, 0178
 Semp Toshiba..... 1743, 3793, 0156
 Sens..... 1749
 Serie Dorada..... 3814, 4221
 Sharp..... 2360, 3720, 1457, 4398
 Sigmac..... 3477, 3423
 Silo..... 3899, 3477, 4182
 Silo Digital 3899, 3477, 4182
 Sony..... 0810
 Soundesign 0178
 Spectroniq..... 1523, 1687
 Speler..... 4105, 4041
 Squareview 0171
 STI..... 3793
 SunBriteTV..... 2337, 1610, 2528
 Superscan..... 1963, 0171
 Supersonic..... 2104
 Suzuki..... 4434
 Suzuki Time..... 4434
 SVA..... 1963
 Sylvania..... 1864, 1886, 0171, 1963, 1394
 Symphonic 0171, 1963, 1394
 Syntax..... 1610
 SZK 4434
 Taki..... 1540
 TCL..... 2434, 4398, 3183, 2429, 3426,
 3847, 2414, 0898, 4178
 Technics..... 0017
 Telefunken..... 2414, 4025, 4302
 TMK..... 0178

TNCi..... 0017
 Tonomac 4221, 4444
 Tosaki 1540, 2357
 Toshiba..... 1524, 1656, 0156, 3134, 1743
 TruTech..... 0171
 TVS 0463
 Upstar..... 4182, 4405
 Vidtech..... 0178
 Viewsonic..... 2014, 2745, 2087, 1627,
 2049, 2277, 1564, 1365
 Viore..... 2352, 3382, 3118, 2104, 3094
 VIZIO 1758, 3758, 2707, 2757
 Wards..... 0178, 0017, 0156
 Waycon 0156
 Westinghouse..... 1712, 3559, 3382, 2293,
 3094, 3470, 2397, 0463
 White Westinghouse..... 0623, 0463
 Wyse..... 1365
 Xococo..... 1749
 Zenith..... 0017, 0178, 0623, 2731, 1365,
 2358, 0463

VCR

American High..... 0035
 Canon..... 0035
 Carver..... 0081
 Crosley..... 0081
 Curtis Mathes..... 0035, 0060, 0162
 Daewoo..... 0045
 Emerex 0032
 Fuji..... 0035
 GE..... 0060, 0035, 0202
 General Electric 0060, 0035, 0202
 Harman/Kardon..... 0081
 Instant Replay..... 0035
 JC Penney..... 0035
 Kodak..... 0035
 Magnavox..... 0035, 0081
 Marantz 0081, 0035
 Matsushita 0035, 0162
 MEI 0035
 Memorex..... 0035, 0162
 Motorola..... 0035
 NAP 0035
 Olympus..... 0035
 Optimus 0162
 Panasonic 0035, 0162
 Penney 0035
 Philco..... 0035
 Philips..... 0081, 0035
 Polk Audio 0081
 Proscan..... 0060, 0202
 Quasar..... 0035, 0162
 RCA..... 0060, 0202, 0035
 RCN..... 0060
 Realistic 0035
 Samsung..... 0045

Scott..... 0045
 Sears..... 0035
 Semp Toshiba..... 0045
 Signature 0035
 Signature2000 0035
 Sony..... 0032, 0035
 Sylvania..... 0035, 0081
 Technics..... 0035, 0162, 0060, 0202
 Teknika..... 0035
 Toshiba..... 0045
 Vector..... 0045
 Video Concepts..... 0045
 Wards..... 0035, 0045, 0060, 0081
 XR-1000..... 0035

DVD

Accurian.....0675
 California Audio Labs.....0490
 Curtis Mathes.....2331
 Denon1634, 2258, 0490
 Disney.....0675
 Durabrand3464
 Dynex2596
 Emerson0675, 2213
 Funai0675
 GE.....0522
 General Electric0522
 GFM.....0675
 Go Video.....1075, 0741
 GoldStar.....0741
 Grundig.....0539
 Hitachi.....0573, 0675
 HitPlus.....2583
 Insignia.....2596, 2095, 2428, 0675, 0741
 Integra2147, 1634
 JVC.....0741
 Kenwood0490
 Lenoxx.....2213
 LG0741
 Magnavox.....0675, 0503, 0539
 Marantz0539
 Memorex.....2213, 2331
 Microsoft.....2083, 2627, 0522
 NAD.....0741
 New Acoustic Dimension0741
 Olevia.....2331
 Onkyo.....2147, 0503
 Panasonic1641, 3641, 0490, 0503
 Philco.....0675
 Philips..2056, 2434, 0539, 0503, 2084, 0675
 Pioneer.....2442
 Polk Audio0539
 Presidian0675
 Proscan.....0522
 RCA.....0522, 2587, 2213, 2532, 3464
 Samsung.....0199, 0573, 1075,
2069, 2489, 0490

Semp Toshiba.....	0503
Sharp.....	2250, 0675
Shinsonic	0533
Sony.....	1516, 1633, 0533, 0864, 1070
SV2000	0675
Sylvania.....	0675
Symphonic	0675
TCL.....	2587
Technics.....	0490
Toshiba.....	0503, 2277, 3157, 2705
TruTech.....	0675
Urban Concepts.....	0503
VIZIO	2563
Vtrek	2583, 2587
Xbox.....	2083, 2627, 0522
Yamaha.....	2298, 0539, 0490
Zenith.....	0741, 0503

Satellite

Arion	1279, 4348
Arris.....	0869
AZ America	3599
Bell	0775
Bell ExpressVu.....	0775
Bell Satellite TV	0775
Century	0856
Claro.....	4546, 3790
Coship	4546, 3790
DirecTV.....	1377, 1442
Dish Mexico	0775
Dish Network.....	0775
Dishpro.....	0775
Echostar	0775, 2262, 2527
Embratel	4546
Frontier Communications.....	0775
General Instrument.....	0869
GOI	0775
Gradiente.....	0887, 0856
GVT.....	3789
HTS	0775
Huawei.....	4546
Hughes Network Systems	1442, 1377
Humax.....	1377
Intv	4348
Jerrold.....	0869
JVC.....	0775
LG	1377
Motorola.....	0869, 0856, 3469
Movistar.....	2527, 2262
Nagra	2262
Netgem	3637
Netsat.....	0887
Next Level	0869
Oi TV	4460
Pace.....	0887, 3469, 1377, 2895,
.....	3111, 3790, 4546
Philips.....	1442, 2619, 0856, 0887, 3469

RadioShack	0869
RCA.....	1442
Sagem	1692
Sagemcom	3789
Samsung.....	1442, 1377
Shaw Direct.....	0869, 0775
Sky Brasil.....	1377, 0887, 0856, 2619, 3111
Sky Mexico....	3469, 2619, 0856, 0887, 1377
Star.....	0887
Star Choice.....	0869
Supernova.....	0887
TDS Telecom	0775
Technicolor	3790, 3469
Tele Red	1279
Telefonica	1692, 2262, 2527
Televisa.....	0887
TELUS	0775
Thomson	3469, 1377, 2619
TiVo	1377, 1442
TVA Digital.....	2895, 1692, 2262
UNE	1692
Via Embratel.....	4546
Vivo	2262, 2895, 1692, 2527
Windstream	0775
Zenith.....	0856, 3469

Video Accessories

Access HD.....	2185
Alpha Digital	2185
AMTC	2185
Centronics.....	2360
Channel Master.....	2360
Digiwave.....	2360
Dish Network.....	2470
Echostar	2470
Firebird Systems.....	2360
GE.....	2360
General Electric	2360
Good mind.....	2360
iNet Access.....	2185
Insignia.....	1415
LG	1415
RTC	2360
Tivax	2185
Zenith.....	1415

Cable

Access Communications.....	1376, 2187
Adams Cable TV	1376, 4079
ADB	2254, 1481, 1998, 2302, 3028
Allegiance Communications.....	1376
Amino .	1615, 1481, 2482, 1998, 2302, 3028
Arion	3336
Armstrong.....	1376, 3560
Arris.....	1376, 1998, 2187, 1982
Arvig Communication Systems.....	1376,
.....	1982, 1998, 3028

AT&T.....0858, 1877, 2187
 AT&T U-verse0858, 1877, 2187
 Atlantic Broadband 1877, 3560, 1376, 4079
 ATMC.....1376, 1982, 3028, 1998
 Bell1998, 1877
 Bell Aliant.....1998
 Bell Fibe TV.....1998
 Blue Ridge Communications.....1877, 3560
 Bright House.....1877, 1376, 3294
 Broadstripe1376
 Buckeye Cable System.....1376, 2187, 1877
 Cable America1376, 1877
 Cable Axion Digitel1376
 Cable One1376, 3560, 1877
 Cablecom Mexico1376
 Cablem-s.....3119, 1376, 1877
 Cablevision.....1376, 1877, 3336, 4375
 Cablevision du Nord.....1376
 Cablevision Victoria.....1376, 4375
 Cass Cable1376
 CCAP.....1877
 CenturyLink1998
 Channel Master.....3118
 Charter.....1376, 1877, 2187, 3560
 Choice Cable TV.....1376, 1877, 1982
 Cincinnati Bell.....1877, 1376
 Cisco ...1877, 3028, 0858, 1982, 1883, 2506,
1376, 4374, 4514, 2826, 3294, 4450
 Claro.....1376, 1998, 3028
 Cogeco1376, 1982, 3560
 Comcast.....1982, 1376, 1877, 3560, 2187
 Comporium.....1877, 3560, 2187
 Consolidated Communications.1877, 1376,
1998, 2302, 3048
 Convenient3527
 Cox1877, 1376, 3774, 4315
 Digeo.....2187
 Eagle Communications1376, 2187
 EastLink.....1376, 2187
 Echostar3452, 3454
 Entone.....3048, 2302, 1615
 Evolution.....2479, 4079, 2746, 4315
 Fidelity Communications1376
 Frontier Communications.....1376
 General Communications 3560, 1376, 1877
 Google3666
 Grande Communications.1877, 3560, 1376
 Great Plains Communications.....1376
 Hawaiian Telcom.....3028
 Huawei.....4589, 1982, 4883
 Humax.....3560
 Inter Mountain Cable.....1877, 2479, 4079,
2826, 3294
 Izzi Telecom1376
 Kathrein.....3288
 LG4343
 Liberty Cablevision.....1376
 Lumos Networks.....1998, 3028
 Massillon Cable.....1376, 2187

Maxcom1998
 Mediacom.....1376, 3560, 1982, 1877
 Mediastream.....1376
 Megacable1376, 4374, 4450,
4514, 2506, 4375, 4883
 Megaseñal3527
 MetroCast Cablevision1376, 1982, 1877
 Mi-Connection.....1877
 Midcontinent Communications.....1376,
1982, 3560, 2826, 4079
 Mid-Hudson Cable.....1376
 Motorola.....1376, 1998, 0858, 1982, 4375
 Movistar.....3288
 Moxi2187
 MTS1998
 NET.....1883
 Netgem4634
 NewWave Communications.....1376, 2187
 Northland Communications1376
 NU Telecom.....1998, 3028
 Oi TV3454, 3452
 Optimum.....1877
 Pace.....1376, 1982, 1877, 3454,
0858, 1883, 3560, 1998
 Panasonic1982
 Philips.....1376, 3560
 Pioneer.....1877
 RCN.....1376, 3560, 1877
 Reach Broadband.....1376, 1877, 1982
 Rogers.....1877, 1376, 2826, 3294
 Sagem3288
 Sagemcom3288
 Samsung.....1877, 3928, 1982
 SaskTel.....1998, 1737
 Schurz Communications...1376, 1877, 1982
 Scientific Atlanta...1877, 0858, 3028, 1982,
1376, 2826
 Service Electric1376, 1982, 1877, 2187
 Shaw.....1376, 1877, 2187, 1982
 Shentel.....1376, 1877, 1982, 2187
 Sogetel.....1998, 2482
 Source Cable.....1376
 Suddenlink.....1877, 1376, 3560, 1982
 Supercanal1376
 Tbaytel1998
 TDS1376, 1877, 1982
 Technicolor1982, 3288, 3454
 TeleCable1376
 Telecentro.....1376
 Telefonica3028, 3288
 Telmex.....1376
 TELUS3028
 Thomson1982
 Time Warner.....1877, 1376, 2187, 3294
 TiVo3560
 Totalplay4634, 4589, 4591
 TV Cable.....1376
 TVS Cable.....1376, 1877, 1982
 UNE2506

U-verse	0858, 1877, 2187
Verizon.....	1376
Vidéotron.....	1877, 1376
Vivo	3288
VTR.....	1376
Wave Broadband....	1376, 2479, 3560, 4079, 2187
Wavevision.....	1376, 1877, 1982
WEHCO Video.....	1376
Westman Communications.....	1376, 2187
WideOpenWest	1376, 1877, 2187
Windjammer Cable	1376, 1877
WNC	3118
WOW!...1877, 1376, 2187, 2479, 2826, 3294	
Xfinity	1982, 1376, 1877, 3560, 2187
Zito Media	1376, 1877, 1982
Z-Trak	1376

2018 Voxx Accessories Corporation
3502 Woodview Trace, Suite 220
Indianapolis, IN 46268
Audiovox Canada Limited
c/o Genco, 6685 Kennedy Road, Unit 3, Door 14,
Mississauga, Ontario, Canada L5T 3A5

Made in China
Marques de commerceMD déposées
Hecho en China
Trademarks ® Registered.
Fabriqué en Chine
Marcas registradas ®.

Download PDF: [RCA RCR504BE 4-device Universal Remote User Manual](#)



References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.