



RCA Universal Remote Codes User Manual

[Home](#) » [RCA](#) » RCA Universal Remote Codes User Manual 

Contents

- [1 RCA Universal Remote Codes User Manual](#)
- [2 Button Description](#)
- [3 Battery Installation](#)
- [4 Programming For TV](#)
- [5 TV Code List](#)
- [6 Programming For VCR](#)
- [7 The DVD•AUX Button](#)
- [8 DVD Menu Function](#)
- [9 Sleep Feature](#)
- [10 Trouble Shooting](#)
- [11 Limited 90-Day Warranty](#)
- [12 Related Posts](#)



RCA Universal Remote Codes User Manual



Button Description

INDICATOR LIGHT

The Indicator Light flashes to show that the remote is working.

ON OFF

The ON-OFF button operates the same as your original remote Note: Some RCA, GE, and ProScan models require you to press the device button to turn the device on and the ON-OFF button to turn the device off.

CODE SEARCH

Used to program the remote or to search through codes.

TV, VCR, DVD-AUX, DBS-CABLE

The TV, VCR, DBS-CABLE, and DVD-AUX buttons are used to select the device you want to control.

REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE

The REVERSE, PLAY, FORWARD, RECORD, STOP, and PAUSE buttons operate the same as on your original VCR or DVD remote. You must press the RECORD button twice to begin recording.

TV-VCR

When in VCR mode, the TV-VCR button operates the TV-VCR function of your VCR.

ENTER

The ENTER button is used to complete channel selection for some brands of TV. It is also used to complete the code entry process, finally, it is used in Menu Mode as a Select or OK.

VOL & CH

The VOL (Volume) and CH (Channel) buttons increase or decrease the channel numbers or volume.

MUTE

To MUTE the volume on the TV.

PREV CH

PREV CH allows you to go to the previous channel you selected. Operates the same as Last Channel, Go Back, or Recall button on your original remote.

0-9

The number buttons operate the same as on your original remote and are used for entering device codes or channel numbers.

MENU

The MENU button calls up the TV, DBS, and DVD setup menus.

SLEEP

The SLEEP button allows you to set a time to turn off the TV automatically.


Battery Installation

Your Universal Remote requires 2 new AAA alkaline batteries. To install the batteries:


1. On the back of the remote, push and slide the cover off.
2. Match the batteries to the + and – marks inside the battery case, then insert the batteries.
3. Press and slide the battery cover back into place.

Note: Reprogramming may be required after the batteries are removed.

Programming For TV

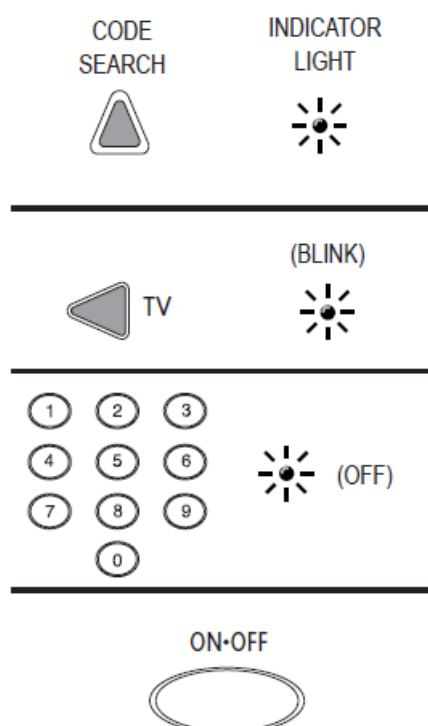

1. Manually turn on the TV.
Find the three-digit code for your TV in the code list below.
2. Press and hold the CODE SEARCH button until the INDICATOR LIGHT lights, then release the CODE SEARCH button.
3. Press and release the TV button (The INDICATOR LIGHT will blink and then remain lit).
4. Enter the code using the Number Buttons. After your code is entered, the INDICATOR LIGHT will turn off.
5. Aim the remote at your TV and press the ON•OFF button. Your TV should turn off.
Note: If your TV does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.
6. With your TV on, press CH+. If the TV responds, no further programming is required.

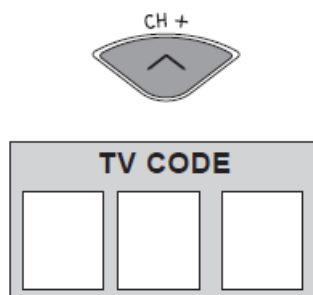

7. Enter your code here for easy reference.

TV Code List

- Abex172
- Admiral001, 173
- Advertura174
- Aiko016
- Akai002
- Alleron046
- Amtron038
- Anam National003, 038
- AOC004, 005, 006, 007
- Audiovox038
- Belcor004
- Bell & Howell001, 083, 162
- Bradford038
- Brookwood004
- Candle004, 006, 008, 174
- Celebrity002
- Citizen004, 006, 008, 016
-038, 105, 171, 174, 177
- Colortyme.....004, 006
- Concerto.....004, 006
- Contec / Cony012, 013, 038
- Craig.....038
- Crown.....038, 171

- Curtis Mathes.....000, 004, 006
-015, 105, 162, 171
- CXC038
- Daewoo004, 006, 005, 016
-017, 127, 171, 190
- Daytron004, 006, 171
- Dimensia000
- Dumont.....004, 151
- Dynatech004
- Electroband002
- Electrohome....002, 003, 004, 006, 019, 022
- Emerson004, 006, 012, 023, 024, 025
-026, 027, 028, 029, 030, 031, 032
-033, 034, 035, 036, 037, 038, 039
-041, 042, 043, 044, 046, 047, 123
-124, 162, 179, 171, 177, 191
- Envision004, 006
- Fisher.....048, 049, 051, 162, 180
- Fujitsu.....046
- Funai038, 046
- Futuretec038
- GE000, 003, 004, 006, 022
-052, 054, 055, 087, 164, 165
-166, 167, 168, 181
- Gibraltar004, 151
- Grundy038, 046, 171
- Hallmark004, 006
- Harvard038
- Hitachi004, 006, 012, 013, 059, 060
-061, 135, 136, 137, 138, 139, 140, 141
-142, 143, 144, 145, 146, 148, 150, 179
- IMA.....038
- Infinity062
- Janeil174
- JBL062
- JCB002
- JC Penney000, 004, 005, 006, 008, 022
-052, 054, 058, 063, 064, 072
-087, 105, 171, 172, 181
- Jensen004, 006
- JVC013, 012, 054, 060, 065, 066
-067, 123, 157, 158, 159, 182
- Kawasho002, 004, 006

- Kenwood004, 006, 019
- Kloss Novabeam068, 069, 174, 183
- KTV038, 070, 171, 177
- LG (Goldstar).....004, 005, 006, 012, 019
-056, 057, 058, 155, 156, 171, 172
- Loewe.....062
- Logik.....083
- Luxman004, 006
- LXI000, 006, 049, 062
-072, 073, 162, 181
- Magnavox004, 006, 008, 019, 062
-068, 069, 075, 076, 077, 088, 130
-131, 132, 133, 134, 183, 219, 235
- Majestic083
- Marantz004, 006, 062
- Megatron006, 059
- Memorex001, 006, 082, 083, 162
- MGA.....004, 005, 006, 019
-022, 051, 079, 080, 082
- Midland054, 151, 171, 172, 181
- Minutz.....052
- Mitsubishi.....004, 005, 006, 019, 022
-051, 079, 080, 081, 082, 125, 135
- Montgomery Ward083
- Motorola003, 173
- MTC004, 005, 006, 105
- Multitech.....038
- NAD006, 072, 185

TV Code List Continued

- NEC003, 004, 005, 006
- Nikko006, 016
- NTC016
- Onwa038
- Optimus185
- Optonica.....095, 173
- Orion035, 191
- Panasonic003, 054, 062, 170
- Philco003, 004, 005, 006, 008, 012
-019, 062, 068, 069, 075, 077, 183
- Philips003, 004, 008, 012, 019, 062
-068, 069, 075, 076, 086, 087, 088

- Pilot004, 171
- Pioneer.....004, 006, 090, 091
-092, 136, 179, 185
- Portland004, 005, 006, 016, 171
- Price Club.....105
- Prism054
- Proscan000, 181
- Proton004, 006, 012, 093
- Pulsar151
- Pulser004
- Quasar003, 054, 070
- Radio Shack / Realistic 000, 004, 006
-012, 038, 049, 095, 162, 171
- RCA000, 003, 004, 005, 006, 007
-019, 096, 098, 099, 100, 101, 102, 103
-129, 179, 181, 188, 190, 203, 212, 233
- Runco.....151
- Sampo004, 006, 171, 172
- Samsung004, 005, 006, 012, 015, 017
-019, 104, 105, 106, 171, 172
- Sansui191
- Sanyo004, 048, 049, 080, 162, 169, 180
- Scotch006
- Scott004, 006, 012, 024, 035, 038, 046
- Sears000, 004, 006, 013, 019, 046, 048
-049, 051, 066, 072, 162, 180, 181, 189
- Sharp004, 006, 012, 029, 095
-111, 112, 113, 122, 171, 173
- Shogun.....004
- Signature001, 083
- Simpson008
- Sony.....002, 218
- Soundesign004, 006, 008, 038, 046
- Squareview189
- SSS004, 038
- Starlite038
- Supre-Macy174
- Supreme.....002
- Sylvania ..004, 006, 008, 019, 062, 068, 069
-075, 076, 077, 088, 116, 161, 183
- Symphonic033, 038, 189
- Tandy173
- Tatung003

- Technics054
- Techwood.....004, 006, 054
- Teknika ..004, 005, 006, 008, 012, 013, 016
-038, 046, 076, 082, 083, 105, 170, 171
- Tera004, 012, 093
- TMK004, 006
- Toshiba....049, 072, 105, 118, 160, 161, 162
- Totevision171
- Universal052, 087
- Victor066, 182
- Vidtech004, 005, 006
- Viking174
- Wards000, 001, 004, 005, 006, 019, 024
-033, 046, 052, 062, 068, 069, 075
-076, 083, 095, 087, 088, 119, 120
- Yamaha004, 005, 006, 019
- Zenith004, 051, 083, 152
-151, 153, 154, 217

VCR Code List

- Admiral001
- Adventura.....026
- Aiko027
- Aiwa026
- Akai.....003, 005, 007, 008, 113, 112, 111
- American High021
- Asha013
- Audio Dynamics009, 010
- Audiovox014
- Bell & Howell011
- Beaumark.....013
- Broksonic012, 025
- Calix014
- Candle013, 014, 015, 016, 017, 018, 019
- Canon.....021, 022
- Capehart.....020, 110
- Carver062
- CCE027, 061
- Citizen013, 014, 015, 016
-027, 017, 018, 019
- Colortyme.....009
- Colt.....061


- Craig013, 014, 023, 061
- Curtis-Mathes.....000, 009, 013, 016
-018, 021, 022, 024, 115
- Cybernex013
- Daewoo015, 017, 019, 025
-026, 027, 028, 110
- Daytron.....110
- DBX009, 010
- Dimensia000
- Dynatech026
- Electrohome014, 029
- Electrophonic014
- Emerson012, 014, 015, 021, 024, 025
-026, 029, 030, 031, 032, 033, 034, 036
-037, 038, 039, 040, 041, 042, 044, 045
-046, 047, 065, 105, 113, 116, 117, 130
- Fisher011, 023, 048, 049
-050, 051, 052, 118
- Fuji021, 119
- Funai026
- Garrard.....026
- GE000, 013, 021, 022, 053, 115, 120
- Grandiente026
- Harley Davidson.....026
- Harman Kardon009
- Harwood.....061
- Headquarter011
- Hitachi055, 056, 057, 107, 111, 120
- HI-Q023
- Instant Replay021
- JCL.....021
- JC Penney009, 010, 011, 013, 014
-021, 022, 060, 107, 118
- Jensen055, 056, 111
- JVC.....009, 010, 011, 018, 111, 123
- Kenwood 009, 010, 011, 016, 018, 123, 111
- KLH061
- Kodak.....014, 021
- LG (Goldstar)009, 014, 018, 054
- Lloyd.....026
- Logik.....061
- LXI014
- Magnavox021, 022, 062, 063, 104, 108, 124

- Magnin013
- Marantz009, 010, 011, 016, 018
-021, 022, 062, 064
- Marta014
- Matsushita021
- MEI.....021
- Memorex001, 011, 013, 014
-021, 022, 023, 026, 104
- MGA.....029, 065, 113
- MGN Tech.013
- Midland.....053
- Minolta055, 056, 107
- Mitsubishi.....029, 055, 056, 065, 066
-067, 068, 069, 070, 071
-072, 073, 074, 106, 113, 123
- Montgomery Ward001, 075
- Motorola001, 021
- MTC013, 026
- Multitech013, 016, 026, 053, 061
- NEC009, 010, 011, 018, 064
-076, 078, 079, 111, 123
- Nikko014
- Noblex013
- Olympus021
- Optimus001, 014
- Optonica.....096
- Orion031
- Panasonic021, 022, 109, 125, 126, 127
- Pentax016, 055, 056, 107, 120
- Pentax Research018
- Philco021, 022, 062, 063
- Philips021, 022, 062, 096, 124
- Pilot014
- Pioneer010, 055, 080, 081, 123
- Portland016, 017, 019, 110
- ProScan000
- Protec.....061
- Pulsar104
- Quarter011
- Quartz.....011
- Quasar021, 022, 125
- RCA.....000, 003, 013, 021, 022, 055, 056
-082, 083, 084, 085, 086, 087, 088

-089, 090, 091, 107, 115, 120, 125
- Radio Shack / Realistic ..001, 011, 013, 014
-021, 022, 023, 026
-029, 049, 050, 096
- Radix014
- Randex.....014
- Ricoh128
- Runco.....104
- Samsung013, 015, 033, 053, 055, 112
- Sanky001, 104
- Sansui010, 092, 111, 123
- Sanyo011, 013, 023
- Scott.....012, 015, 025, 032, 038, 065, 116
- Sears011, 014, 021, 023, 028, 048
-049, 050, 051, 055, 056, 107, 118
- Sharp001, 017, 029, 094, 095, 096, 097
- Shintom056, 061, 098
- Shogun.....013
- Signature001
- Singer.....021, 061, 128
- Sony098, 099, 119
- STS021, 107
- Sylvania ..021, 022, 026, 062, 063, 065, 124
- Symphonic026
- Tandy011
- Toshiko014
- Tatung111
- Teac026, 085, 111
- Technics021, 109
- Teknika.....014, 021, 022, 026, 100, 129
- Toshiba.....015, 049, 051, 055, 065, 116
- Totevision013, 014
- TMK013, 024, 047
- Unitech013
- Vector Research009, 010, 015, 016
- Victor010
- Video Concepts009, 010, 015, 016, 113
- Videosonic013
- Wards001, 013, 014, 015, 021, 022
-023, 029, 055, 056, 026, 061
-096, 101, 102, 103, 107, 116
- XR-1000.....021, 026, 061
- Yamaha.....009, 010, 011, 018, 111

- Zenith098, 104, 119, 128


Programming For VCR

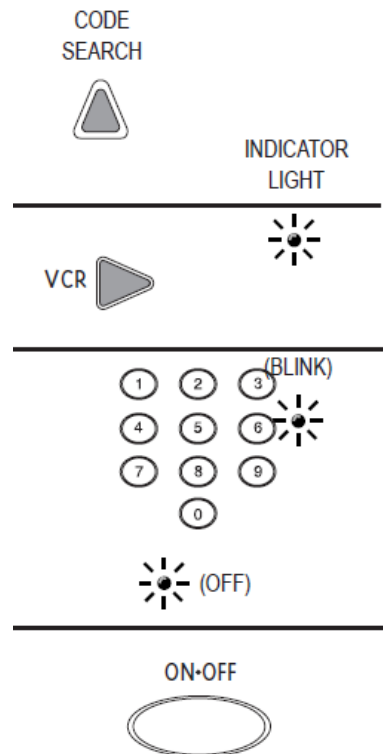

1. Manually turn on the VCR. Find the three-digit code for your VCR in the code list below.
2. Press and hold the CODE SEARCH button until the INDICATOR LIGHT lights, then release the CODE SEARCH button.
3. Press and release the VCR button (The INDICATOR LIGHT will blink and then remain lit).
4. Enter the code using the Number Buttons. After your code is entered, the INDICATOR LIGHT will turn off.
5. Aim the remote at your VCR and press the ON•OFF button. Your VCR should turn off.


Note: If your VCR does not respond, try all the codes for your brand. If the codes do not work or your brand is not listed, try the Code Search method on page 10.

6. With your VCR on, press CH+. If the VCR responds, no further programming is required.

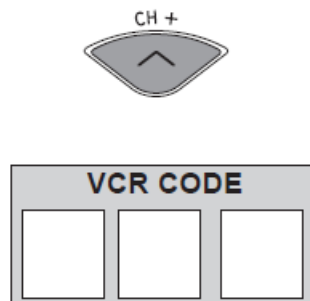

7. Enter your code here for easy reference.


Programming For DBS

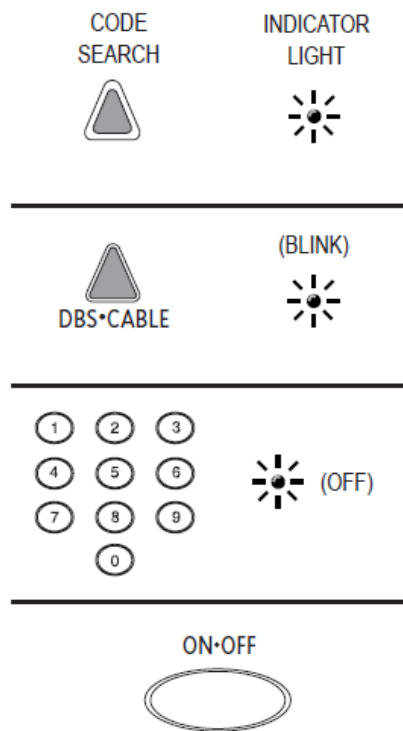

1. Manually turn on the DBS. Find the three-digit code for your DBS in the code list below.
2. Press and hold the CODE SEARCH button until the INDICATOR LIGHT lights, then release the CODE SEARCH button.
3. Press and release the DBS•CABLE button (The INDICATOR LIGHT will blink then remain lit).
4. Enter the code using the Number Buttons. After your code is entered, the INDICATOR LIGHT will turn off.
5. Aim the remote at your DBS and press the ON•OFF button. Your DBS should turn off.

Note: If your DBS does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.

 
6. With your DBS on, press CH+. If the DBS responds, no further programming is required.




DBS CODE		

7. Enter your code here for easy reference.

Programming For Cable Box

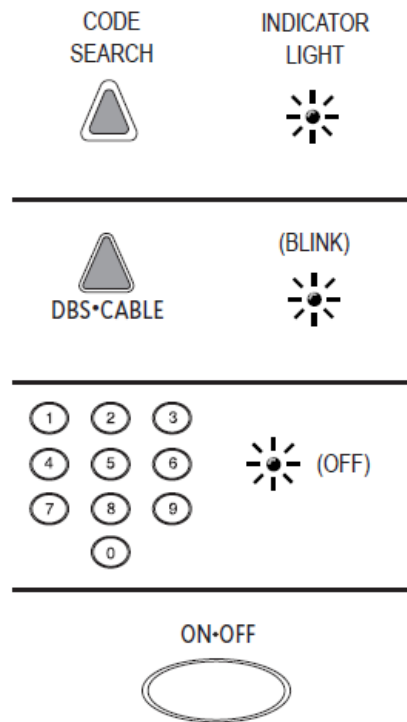

1. Manually turn on the Cable Box. Find the three-digit code for your Cable Box in the code list below.
2. Press and hold the CODE SEARCH button until the INDICATOR LIGHT lights, then release the CODE SEARCH button.
3. Press and release the DBS•CABLE button (The INDICATOR LIGHT will blink then remain lit).
4. Enter the code using the Number Buttons. After your code is entered, the INDICATOR LIGHT will turn off.
5. Aim the remote at your Cable Box and press the ON•OFF button. Your Cable Box should turn off.
Note: If your Cable Box does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.
6. With your Cable Box on, press CH+. If the Cable Box responds, no further programming is required.

 

CABLE BOX CODE		

7. Enter your code here for easy reference.

DBS Code List

- Alphastar079
- Echostar (Dish System)089
- Ecosphere (Dish Net).....078
- GE071, 080, 081
- Hitachi SYS I084
- Hitachi SYS II.....083

- Hughes.....077, 083, 090
- Magnavox.....085
- JVC082
- Panasonic075
- Philips.....085
- Primestar076
- Proscan071, 080, 081
- RCA071, 080, 081
- Sony072
- Toshiba.....073
- Uniden086

Cable Box Code List

- ABC001, 003, 004, 005, 006, 007
- Antronix008, 009
- Archer.....008, 009, 010, 011
- Cabletenna.....008
- Cableview.....008
- Century.....011
- Citizen.....011
- Colour Voice.....012, 013
- Comtronics015
- Contec016
- Eastern.....017
- Garrard011
- GC Electronics009
- Gemini018, 019
- General Instrument001, 003, 049
- Hamlin035
- Hitachi003
- Jasco011
- Jerrold001, 003, 005, 007
-018, 023, 024, 046, 049
- Magnavox.....025
- Movie Time.....027, 028
- NSC027, 028
- OAK029, 016
- Panasonic000, 048
- Philips011, 012, 013, 019
-025, 030, 031, 032
- Pioneer.....033, 034
- RCA000, 047, 049

• Realistic.....	009
• Regal.....	022, 035
• Regency	017
• Rembrandt	003
• Samsung	034
• Scientific Atlanta.....	006, 036, 037, 038
• Signal	018
• Signature	003
• Sprucer.....	000
• Standard Component.....	039
• Starcom	001, 007, 018
• Stargate	018
• Starquest	018
• Tocom.....	004, 023
• Tusa	018
• TV86.....	027
• Unika	008, 009, 011
• United Cable	001
• Universal	008, 009, 010, 011
• View Star	015, 016, 025, 027
• Zenith	050, 051


The DVD•AUX Button

The DVD•AUX Button allows you to assign another TV, VCR, DBS, Cable Box or DVD. The DVD•AUX Button defaults to RCA/DVD systems. To assign another device to the DVD•AUX button:


Device Page

• TV	4-5
• VCR.....	6
• DBS	7
• Cable Box.....	8
• DVD.....	9

1. Manually turn on the device you wish to assign to the DVD•AUX button (TV, VCR, Cable Box, DVD or DBS System). Find the three-digit code for the device you wish to program in the code list
2. Press and hold the CODE SEARCH button until the INDICATOR LIGHT lights, then release the CODE SEARCH button.

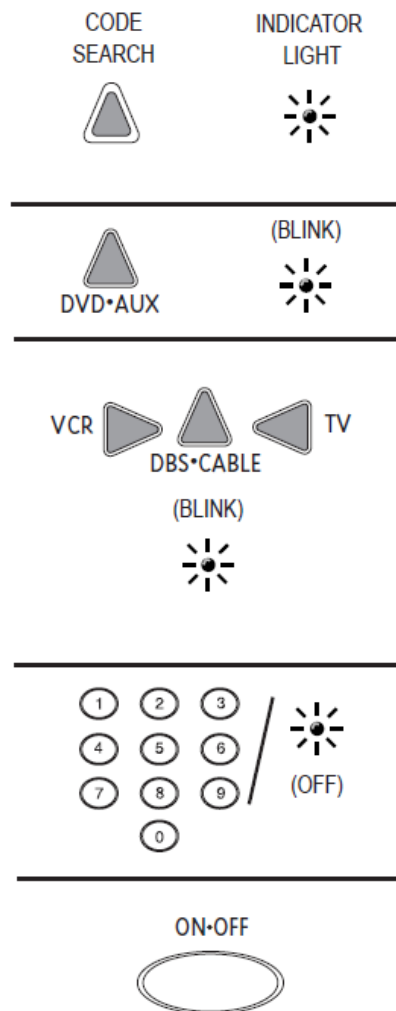

3. Press and release the DVD•AUX button. The INDICATOR LIGHT will blink.
4. Press TV, VCR or DBS•CABLE for the device you want to program. For DVD press VCR. For DBS press DBS•CABLE. For the Cable Box press DBS•CABLE. The INDICATOR LIGHT will blink again and then remain lit.
5. Enter the code using the Number Buttons. After your code is entered, the INDICATOR LIGHT will turn off.
6. Aim the remote at your device and press the ON•OFF button. Your device should turn off. Note: If your device does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Code Search method on page 10.
7. With your device on, press CH+. If the device responds, no further programming is required.

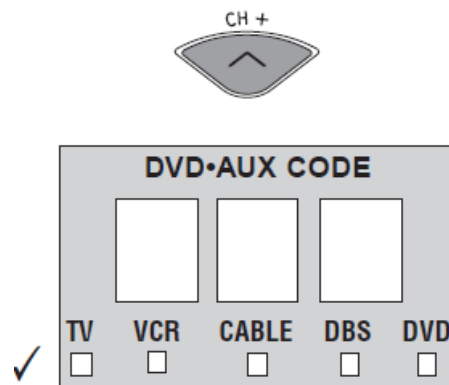


8. Enter your code here for easy reference.

Programming With Code Search

If your TV, VCR, DVD, DBS or Cable Box does not respond after you have tried all the codes for your brand, or if

your brand is not listed, try searching for your code by following the steps below.


1. Turn on the device you wish to program.
2. Press and hold CODE SEARCH until the INDICATOR LIGHT lights, then release CODE SEARCH.

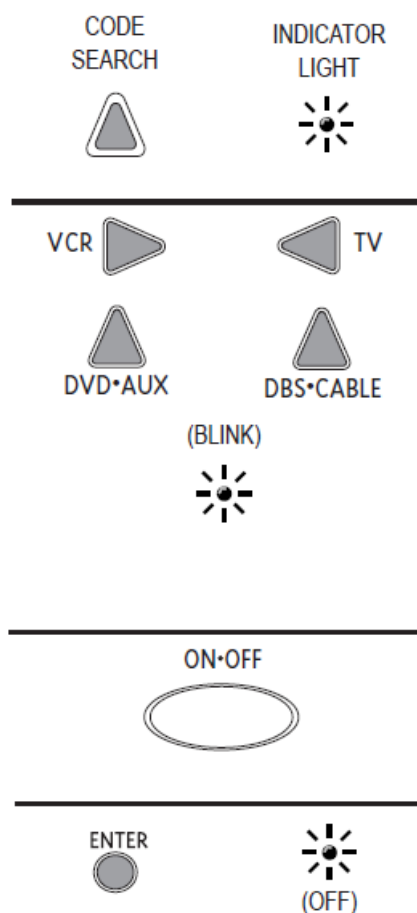

3. Press and release the device button for the device you are programming (TV, VCR or DBS•CABLE). The INDICATOR LIGHT will blink once then remain lit. DVD codes are programmed under the VCR button.
- Note:** For AUX, press DVD•AUX then the device button you are assigning to DVD•AUX.
4. Press and release ON•OFF until your device turns off. Important: You may have to press ON•OFF up to 200 times.
5. When your device turns off, press the ENTER button, and the INDICATOR LIGHT will go off.

Retrieving Codes

If you need to find the three-digit code for your TV, VCR, DBS, DVD or Cable Box after your device is set up using Code Search, use this procedure.

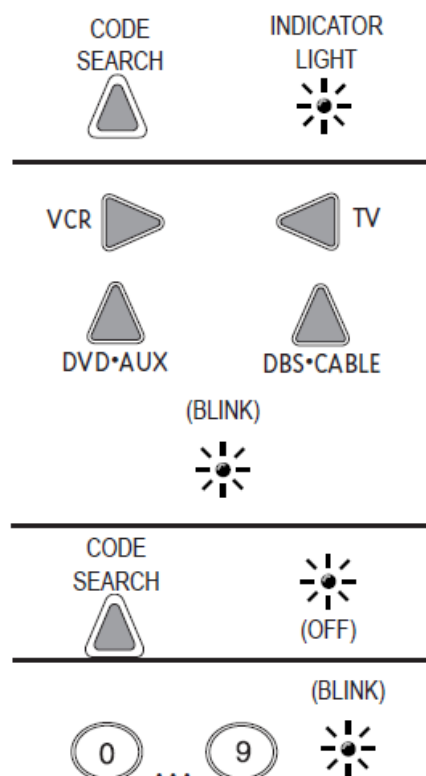

1. Press and hold CODE SEARCH until the INDICATOR LIGHT lights, then release CODE SEARCH.
2. Press and release the device button for the device's code you are retrieving (TV, VCR or DBS•CABLE). The INDICATOR LIGHT will blink once and then remain lit.
Note: For AUX, press DVD•AUX then the device button for the code you are retrieving.
3. Press and release CODE SEARCH. The INDICATOR LIGHT will turn off.
4. Starting with 0 on the keypad, press the number buttons in order (0-9) until the INDICATOR LIGHT blinks.
5. The number which causes the INDICATOR LIGHT to blink is the first digit of your code.
6. Repeat step 4 until you have retrieved all three numbers in the code.

DVD Code List


• Aiwa	350
• Hitachi	351
• JVC	161, 352
• Konka.....	353, 354
• Magnavox	162, 356, 357
• Mitsubishi	163
• Panasonic	355
• Philips	162, 356, 357
• Pioneer.....	165
• ProScan	160
• RCA	160
• Sanyo	359
• Sony.....	166, 360, 361
• Toshiba.....	167, 362, 363
• Zenith	364

Television Menu Function

The TV Menu is used to make changes in the TV settings such as setting color, channels, timers, etc.
Entering the TV Menu Mode:



1. Push the TV button on the remote.
2. Push the MENU button.

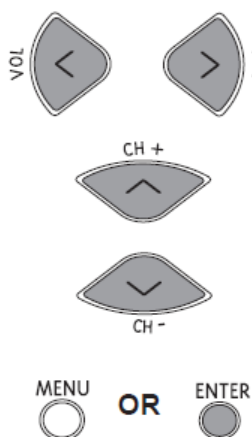

3. This puts the remote in TV Menu Mode. The TV Menu should now be visible on the television. The INDICATOR LIGHT will blink continuously to indicate the remote is now in TV Menu Mode. While in the TV MENU, these buttons will function as follows: VOL UP/DOWN buttons will operate as CURSOR RIGHT/LEFT. CH+/- keys will operate as CURSOR UP/DOWN. For RCA, GE, and ProScan TVs pushing the MENU button will select the high lighted item. The numeric buttons may also be used to select the MENU choice. The ENTER key may also be used to select all menu choices. Note: Not all functions in competitive models and brands of televisions may be fully supported. To exit the Menu Mode and clear the TV screen to push the TV button on the remote. The INDICATOR LIGHT should go out indicating the remote is now out of TV Menu Mode and will revert to its normal mode of operation.


Note: The remote will automatically exit the TV Menu Mode after 10 seconds of inactivity with no buttons being pushed.

Special notes

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the ENTER button while in menu mode returns to the previous menu.
3. ZENITH: Push the menu button a second time to move from the SET-UP MENU to the VIDEO MENU.


DBS Menu Function

The DBS Menu is used to navigate thru the Guide screens, to make changes in the DBS settings such as channel lists, passwords, etc.

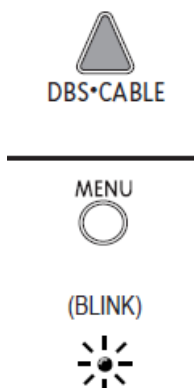

Entering the DBS Menu Mode:

1. Push the DBS•CABLE button on the remote.
2. Push the MENU key. This puts the remote in DBS Menu Mode. The DBS Menu should now be visible on the television. The INDIC TOR LIGHT will blink continuously to indicate the remote is now in DBS Menu Mode.

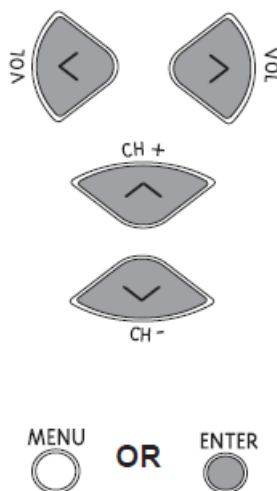

While in DBS MENU MODE these buttons will function as follows: VOLUME UP/DOWN button will operate as CURSOR RIGHT/LEFT. CH+/- button will operate as CURSOR UP/DOWN. For RCA, GE, and ProScan DBS systems pushing the MENU button will select the highlighted item. The numeric buttons may also be used to select the MENU choice. The ENTER key may also be used to select all menu choices.



Note: Not all functions in competitive models and brands of DBS systems may be fully supported. Exiting the DBS Menu Mode: Push the DBS•CABLE button on the remote. The INDICATOR LIGHT should go out indicating the remote is now out of DBS Menu Mode and will revert to its normal mode of operation.

Note: The remote will automatically exit the DBS•CABLE Menu Mode after 10 seconds of inactivity with no keys being pushed.

Special notes

1. Because of the wide variety of menu formats, some experimenting may be required.
2. SONY: Pressing the ENTER button while in menu mode returns to the previous menu.

DVD Menu Function


The DVD Menu is used to navigate thru the Navigation screens, to change settings such as language, sub-titles, etc.

Entering the DVD Menu Mode

1. Push the DVD•AUX button on the remote.
2. Push the MENU key.



This puts the remote in the DVD Menu Mode. The DVD Menu should now be visible on the television. The INDICATOR LIGHT will blink continuously to indicate the remote is now in DVD Menu Mode. While in DVD MENU MODE these buttons will function as follows: VOLUME UP/DOWN button will operate as CURSOR RIGHT/LEFT. CH+/- button will operate as CURSOR UP/DOWN. Pushing the ENTER button will select the highlighted item. The numeric buttons may also be used to select the MENU choice.

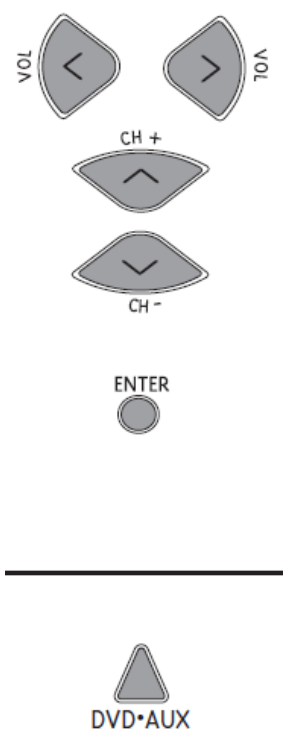

Note: Not all functions in competitive models and brands of DVD systems may be fully supported. Exiting the DVD

Menu Mode Push the DVD•AUX button on the remote. The INDICATOR LIGHT should go out indicating the remote is now out of DBS Menu Mode and will revert to its normal mode of operation.

Note: The remote will automatically exit the DVD•CABLE Menu Mode after 15 seconds of inactivity with no keys being pushed.

Special notes

1. Because of the wide variety of menu formats, some experimenting may be required.

Sleep Feature

This feature will turn off your TV at the time you choose from 1 to 99 minutes.

To Program Sleep Feature

1. Press and hold the SLEEP button. INDICATOR LIGHT will stay lit. Release the SLEEP button.




2. Enter time in minutes using the numerical keypad. The indicator light should go off. (Minutes 1 thru 9: press 0 before the actual number Maximum: 99 minutes)
3. Leave the remote aimed at the television. (Sleep Feature will not work unless the remote is left aimed at the television.) ON-OFF INDICATOR LIGHT

To Turn Off The Sleep Timer

The sleep timer program will be canceled and reset to zero by either of the following:

1. Press and hold the SLEEP button until INDICATOR LIGHT blinks or press the ON•OFF button, turning the TV OFF

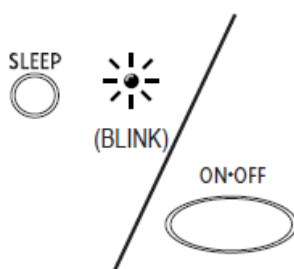

Trouble Shooting

Problem	Solution
Indicator light not blinking when you press any button	A) Replace the batteries with 2 new AAA Alkaline batteries. B) Check that batteries are properly installed.
The Remote does not operate your device	A) Try all the codes listed for your brand. B) Try the Code Search method (page 10).
Not performing commands properly	Start Code Search over again to locate the proper code.
Problems programming a TV/VCR Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
VCR not recording	As a safety feature on your remote, you must press the REC button twice.
Channel up and down do not function on an RCA TV	Due to some designs, the original remote will only perform these functions.
Problems changing channels	If your original remote required ENTER after a channel, press ENTER after you select a channel.
No response after pressing a button	A) Make sure you have new batteries, and you are aiming your remote at your devices. B) Check that batteries are properly installed (See page 3).
Sleep feature does not work	Remote must remain aimed at television after sleep is set in order for it to work.

Note: Reprogramming may be required after the batteries are removed.

Help Line (USA Only)

If you need additional set-up help, call our toll-free Help Line at 1-800-420-7729, or contact the RCA Help Center at: www.rca.com

Limited 90-Day Warranty

Thomson multimedia Inc. warrants that for 90 days from the date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no-charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

2001 Thomson multimedia Inc.

RCU410MS Product Registration

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. ☐ Mr. ☐ Mrs. ☐ Ms. Name: _____
Address: _____

2. Model: **RCU410MS**
3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____
5. Age of Purchaser/Gift Recipient:
☐ 16-25 ☐ 26-35 ☐ 36-45 ☐ 46-55 ☐ 56+
6. What specific need did the Universal Remote help you resolve?
☐ A. Replacing A Lost Remote ☐ B. Replacing A Broken Remote
☐ C. Consolidating Remotes ☐ D. Adding an Extra Remote
7. Where will this remote primarily be used?
and with what brand? TV: _____
VCR: _____ Cable Box: _____
☐ A. Kitchen ☐ B. Bedroom ☐ C. Family Room/Living Room
☐ D. Other _____
8. How did you become aware of this remote?
☐ A. Advertisement ☐ B. Salesperson ☐ C. Store Display
☐ D. Received as a Gift ☐ E. Friend or Relative _____
☐ F. Other _____
9. What other brands did you consider buying? ☐ A. None
☐ B. RCA ☐ C. One For All ☐ D. Zenith
☐ E. Magnavox ☐ F. Sony ☐ G. Other _____
10. What factors most influenced this purchase? (Check up to 3)
☐ A. Brand ☐ B. Features ☐ C. Recommendation
☐ D. Price ☐ E. Received as a Gift ☐ F. Other _____

Download PDF: [RCA Universal Remote Codes User Manual](#)