



RCA RCWC10 Wall Clock User Guide

[Home](#) » [RCA](#) » RCA RCWC10 Wall Clock User Guide 

RCA RCWC10 Wall Clock User Guide



Getting Started

Contents


- [1 Step 1: Install the Battery](#)
- [2 Step 2: Set the Time](#)
- [3 12 Month Limited Warranty](#)
- [4 Documents / Resources](#)

Step 1: Install the Battery

Your wall clock requires 1 AA battery (not included).

To install the battery: Insert 1 AA battery (not included) in the battery compartment on the back of the clock. Follow the + and - indications printed on the compartment.

Battery Precaution: Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with Local and National Regulations.

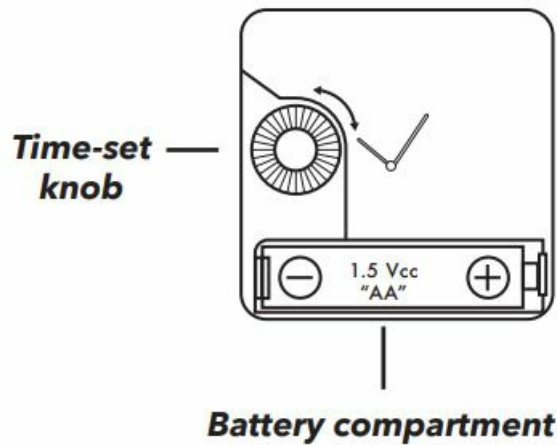

Step 2: Set the Time

To set the time: Use your finger to rotate the time-set knob on the back of the clock and move the minute and hour hands to the right time. (Do not insert a screwdriver in the slot on the knob—this might damage the time-set mechanism.)

CAUTION: The face cover for this clock is glass, so handle it with care. Make sure you mount the clock securely to the wall!

Important battery precautions

- Any battery may present a risk of fire, explosion, or chemical burn if abused. Do not try to charge a battery that is not intended to be recharged, do not incinerate, and do not puncture.
- Non-rechargeable batteries, such as alkaline batteries, may leak if left in your product for a long period of time. Remove the batteries from the product if you are not going to use it for a month or more.
- If your product uses more than one battery, do not mix types and make sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.
- Discard any leaky or deformed battery immediately. They may cause skin burns or other personal injury.
- Please help to protect the environment by recycling or disposing of batteries according to federal, state, and local regulations.

WARNING: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

Ecology

Help protect the environment – we recommend that you dispose of used batteries by putting them into specially designed receptacles.

12 Month Limited Warranty

Vox Accessories Corporation (the “Company”) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company’s option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United


States or Canada. The warranty does not extend to the elimination of externally generated static or noise, to costs incurred for the installation, removal or reinstallation of the product. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture.

This warranty does not apply to damage caused by an AC adapter not provided with the product, or by leaving non-rechargeable batteries in the product while plugged into an AC outlet.

THE EXTENT OF THE COMPANY’S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY’S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

Documents / Resources

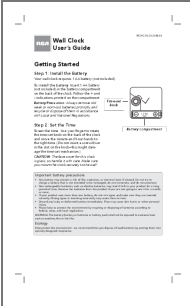The thumbnail shows the first page of a PDF user guide. It has a title 'Wall Clock User's Guide' and a section 'Getting Started'. The first step is 'Unpack the Device', which includes instructions to remove the clock from its packaging, remove the batteries, and remove the mounting bracket. There is a small diagram showing the clock being attached to a wall. The second step is 'Set the Time', which includes instructions to set the time and date, and to set the alarm. There is a small diagram showing the clock face with the time set to 12:00.

[RCA RCWC10 Wall Clock](#) [pdf] User Guide

RCWC10, RCWC20, RCWC30, RCWC10 Wall Clock, Wall Clock, Clock