

# **RCN DTA-ES DTA Remote Control User Manual**

Home » RCN » RCN DTA-ES DTA Remote Control User Manual



### **Contents**

- 1 RCN DTA-ES DTA Remote Control
- 2 For Programming Dy TV

#### Manufacturer

- 3 TV Code identification:
- 4 Reset to factory default settings:
- **5 SET UP CODES FOR TV**
- 6 Documents / Resources
- **7 Related Posts**



#### **RCN DTA-ES DTA Remote Control**



### For Programming Dy TV Manufacturer

- 1. Locale the manufacturer's code for
- 2. Turn on your TV
- 3. Depress the SET key for three seabeds until the LED IMuminales. Release the key;
- 4. Enere tS manutacuers ooe rom ne aO0e isLneLEDUMS
- 5. Very the V can be controlled by depressing the TV power key he TV time of, um
- 6. If the TV cannot be a controlled property, return o Step 1 and enter the nedd code from the list You may have to perform this operation numerous times until correct operation of the VIS is achieved.
- 7. the above steps do not identify a code to operate the TV, perform the Code Search Frograng Moo.

### **Code Search Programming Method:**

- 1. Tum on your TV
- 2. Depress the 'SET key for three seconds und the LED illuminates Release the key
- 3. Repeated press the CH\* orCH unbi the TV ums of.
- 4. Verify that the Volume and Mute functions operate on the TV.
- 5. they do not operate, perform Sleeps 1-5 units proper operation is achieved.

#### TV Code identification:

if the code has been found by the Code Search Programming Method, the code that operates the TV can be identified as follows:

- 1. Depress the SET key for three seconds until the LED illuminates. Release the key
- 2. Press the Info" key. The LED will tum of
- 3. Press "1" to obtain the first digit; The LED will fash as many times as the number of the 1s digit
- 4. Press 2 to obtain a 2d digit The LED will tash as many times as the number of the 2 digit

- 5. Press 3 o obtain 3 digits The LED will fash as many times as the number of the 3 digits.
- 6. Press the "SET key to exit code recall mode. LED will 1ash twice.

NOTE: the number is "0 the LED will flash 10 times.

# Reset to factory default settings:

Restoring remote to factory settings

- 1. Depress the "SET" key for three seconds until the LED illuminates. Release the key
- 2. Depress and release in order the, "8 and "1 key LED flashes twice to signal remote reset

**NOTE:** Whenever a programming sequence exceeds 5 seconds, the remote will default to the previous settings.

### **SET UP CODES FOR TV**

SET UP CO	DDES FOR TV	Diamond Vision Digistar	682,703, 451.	Kenwood KLH	231,001,	Pliot	231,001,
		Digital Lifestyles	673,684,	Kloss	099, 024,079,471,	Pioneer	166,679,066,465
SMS	089,649,653,	Digital Projection Inc.	629 668,167,	Knoll Systems	526,	7 <u>=1</u> 7.000=0	618,
4-Mark	302,	Dream Vision	595	Konka	035,355,508,238,448,	Planar	632,
Vbex	464,	Dumont	463.	PACH INGS	695,	Polaroid	709,099,700,676
Accurian	683,	Durabrand	361,035,001,053,	Kost	584.581.		874,672,451,637
Action	556,	Dwin	475,020,192.	Kreisen	558,581,		448,109,602,376
\dmiral	475,361,	Dynatech	049.	KTV	000,081,		599,581,
kdvent	382,581,579,	Dynex	361,457,	LG	035,231,483,	Portland	040,001,
Adventura	079.	EIN	132,	LG	302,499,549,638,581,	Prima	362,581,579,589
Aftron	364,	Electroband	061,	Umate	694,001,		109,
Viko	040,	Electrograph	363,650,	Lloyd's	689,	Princeton	302,515,
Viwg	512,692.	Electrohome	361,446.641,360.658.	Loewe	477,	Prism	116,
Vkai	397,078,231,067,509.	EMODICINE		Logik	462,	Proscan	001,608,319,192
	576,446,660,663,376.	Element	060,061,	Luca	540,568,	Proton	001,302,320,052
	664,360,513,	Emerson	381,	Luxman	001,	Protron	379,601,
laron	007,483,	cmerson	313,688,280,361,035,	LXI	233,109,313,099,	Proview	381,
Vbatron	302.541.		889,367,690,053,489,	Magnavox	628,511,231,514,392,	Pulsar	463,001,
Vmbassador	274.		235,267,483,281,007,		454,689,635,377,574,	Puneet	638,
merica Action	035,	-	274,465,001,655,454,		581,495,533,109,187,	Pvision	578.
menca Action		Emprex	626,638,673,		106,007,096,008,105.	Quasar	468,049,128,219
	523,	Envision	231,534,377,		024.	RadioShack	
nam	035,	Epson	572,592,	Magnin	691,	1 SECULORISTA	233,313,035,001 049.
nam National	468,	Erae	578,	Majestic	015.462.	RCA	
oc	231,645,377,	ESA	513,053,454,	Marantz	109,231,292,548,581,	nun	116,691,192,488
omni	650,	Fisher	313,159,		618,640,		135,473,679,233
pex Digital	364,581,565,017,099,	Fujitsu	007,106,510,547,382.	Matsushita	128,		639,035,446,465
vicher	302,	Funai	035,053,007,689,454	Maxent	363,014,671,	Description of the last of the	001,018,
star	384,581,		586.	MB Quart		Realistic	313,035,231,049
udiovox	035,040,302,655,533,	Futuretech	035.	Megapower	001, 302,		001,
	543,557,589,697,698.	Galeway	363,001,376,	Manthe		RevolutionHD	650,
vurora Systems	532.	GE	655,001,082,333,029	Megatron Memorex	001,089,302,	Rhapsody	483,
Vventura	053,		468,135,175,489,192,	Memorex	313,361,579,001,462,	Runco	463,231,167,109,
leicor	001,		691,116,233,608.	*****	007,559,641,367,087,	Sampo	231,464,052,100
Sell & Howell	313,462,	Gibralter		MGA	579,231,001,		363.
SenQ	376,598,	Go Video	463,231,001,	Micro	581,	Samsung	231,699,642,076,
Bradford	035.	GoldStar	563,581,446,	Midland	233,463,116,464,135,		524,504,270,497
Brillian	568,582,583,		231,011,001,464,		192,		354,483,464,001,
Prockwood	001,	Goodmans	494,	Mintek	392,398,	Sansui	361,623,689,367,
Broksonic	280,361,	Gradiente	496,	Minutz	082,	Sanyo	313,472,146,159,
Bush		Grundig	510,	Mitsubishi	475,579,461,067,155,		484,132,529,530
lyd:sign	276,	Grunpy	035,007,		491,493,505,539,552.	Sceptre	560,017,811,646.
oya.sign Cadla	596,	HAB	613,		001,616,	Scimitsu	001,
	588,	Haier	589,001,364,567,	Monivision	302,541,	Scotch	001,
andle	231,079,001,106,	Hallmark	001,	Motorola	475,468,381,	Scott	
anon	132,617,	Hanns.G	677,	Moxell	381,	Scott	280,035,001,007, 666.
amivale	231,	Hannspree	609,669,677,	MTC	076,231,049,001,474,	Sears	
arver	109,292,	Harley Davidson	466,007,689,		483.	Creura	233,109,313,099,
asio	506,575,	Harman/Kardon	109,471,	Multitech	035,049,483,		015,001,148,478,
CE	483,354,	Harvard	035,305,	NAD	099,001,066,109,	6-1	168,007,192,566,
elebrity	061,	Havermy	475,	Nakamichl	630,	Seleco	089,595,
elera	099,	Helios	551.	Naxa	704.	Sharp	475,048,049,495,
hanghong	099,	Hello Kitty	655.	NEC		and the second	398,501,546,
Inego	702,	Hewlett Packard	631,633,570,377,571,	1120	231,008,001,292,144,	Sharper Image	696,
itizen	076,231,040,079,001,	Hisense	364,442,		500,167,562,618,665,	Sheng Chia	475,
	106,235,503,656,657,	Hitachi	712,711,689,607,528.	NetTV	680,708,	Sherwood	619.
	658.655.		517,518,413,175,250,		363,	Shogun	001,
larion	035.		481,479,097,253,001,	Nikko	001,231,040,	Signature	462,
lassic	701,			Niko	544,	Signet	531,542,584,
Coby	707,384,	Hyundal	465,464,462,089, 545,375,593,	Noblex	498,	SIM2 Multimedia	595.
Commercial Solutions	233.	f-Inc		Norcent	364,536,377,	Simpson	106,187,
ompaq	522.		670,	Norwood Micro	594,370,	Skyworth	681,
oncerto	001.	il.o	370,398,053,661,	Noshi	018,	Solarism	577.
oncerto Contec		Infinity	109,	NTC	040,	Sole	
	035,	InFocus	519,520,521,526,	NuVision	654.	500	534,568,613,815,6
Craig	035,	Initial	392,398,	Olevia	648,573,001,	Sony	650,581,
rosley	109,	Insignia	053,457,361,374,383,	Olympus	605.	Sony	061,200,273,492,5
nown	035,		634,454,446,	Onwa	035.		600,620,662,678,6
Curtis Mathes	109,313,655,475,076,	Inteq	463,	Optimus	313,166,128,689,	Constant	689,693,
	513,231,089,166,462,	IX.	559,	Optoma	564,609,659,	Soundesign	035,001,007,106,
	001,319,192,233,608,	Janeil	079.	Optonica	475,049,	Sova	379,698,
XC	035,	JBL	109.	Orion		Soyo	638,670,319,685,6
yberHome	527.	JCB	D61,	Panasonic	280,361,007,690,367,	1-2000000000000000000000000000000000000	687,446,
ytron	383,705,	Jensen	362,004,581,579,	- marsonas	468,128,162,486,375,	Spectricon	302,137,
aewoo	040,001,055,470,474,	JVC	467,008,056,480,518,	P	597,624,116,	Spectroniq	381,
	085.509.655.		610,580,	Penney	233,099,076,001,231,	Squareview	053.
aytron	001,	Kamp			116,691,192,309,478,	SSS	035,001,
ell	585,109,001,621,		483,		135,110,464,333,082,	Starlite	035,001,
elta		Kawasho	483,490,	Petters	381,	Studio Experience	
	614,	Kaypani	052,	Philos	109,231,001,021,105,	SunBrite	541,
enon	089,502,	KDS	381,		096,302.	Superscan	625,627,
Denstar	035,	KEC	035,	Philips	628,109,511,581,	Superscan Supre-Macy	475,550,
				CONTRACTOR OF THE CONTRACTOR O	Jaco, 100 po 11,001,	SUDER-MIRCY	079.

# **Documents / Resources**



RCN DTA-ES DTA Remote Control [pdf] User Manual DTA-ES, DTA Remote Control, DTA-ES DTA Remote Control

Manuals+,