

RCYAGO SGW07 Dual Water Timer



RCYAGO SGW07 Dual Water Timer User Manual

[Home](#) » [RCYAGO](#) » RCYAGO SGW07 Dual Water Timer User Manual 

Contents

- [1 RCYAGO SGW07 Dual Water Timer](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PRODUCT OVERVIEW](#)
- [5 SPECIFICATION](#)
- [6 PRODUCT INSTALLATION](#)
- [7 AUTOMATIC WATERING PROGRAM SETTING](#)
- [8 ADDITIONAL FEATURES](#)
- [9 TROUBLESHOOTING](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



RCYAGO SGW07 Dual Water Timer



Product Information

Specifications:

- **Min/Max Operating Pressure:** 0.5Bar ~ 8bar (7.25psi ~ 116psi)
- **Working Temperature:** Waterproof, Operating temperature range not specified
- **Power:** 4 x AA alkaline batteries
- **Rain Delay Time:** IP55, 1 day and up to 7 days
- **Water Duration:** 0min ~ 5H 59min
- **Water Frequency:** Every 1 to 7 days or any day from Monday to Sunday

Product Usage Instructions

Installation:

Installing the Battery:

1. Remove the battery cover on the back of the timer.
2. Install 4 new AA (1.5V) alkaline batteries (not included).

Installing the Timer:

1. Attach the timer to an outdoor hose faucet.
2. Turn on the tap after programming the timer.

Automatic Watering Program Setting:

Set Time:

1. Press the button to set the current hour and minute.
2. Select the current day of the week.
3. Save changes and move to the next setting.

Set Start Time:

1. Set the current hour and minute.
2. Switch plan between P1, P2, and P3.
3. Switch outlet between ZONE 1 and ZONE 2.

Set How Long:

1. Set the hour and minute for the watering duration.
2. Switch plan between P1, P2, and P3.
3. Switch outlet between ZONE 1 and ZONE 2.

Set How Often:

Select the watering frequency mode: Weekday Mode or Every X Days Mode.

Frequently Asked Questions (FAQ):

- **Q: Can I use rechargeable batteries with this timer?**

A: No, it is recommended to use only non-rechargeable AA alkaline batteries to avoid low voltage issues.


- **Q: How do I reset the timer if needed?**

A: You can reset the timer by turning off the power and turning it back on. This will reset the settings to default.

- **Q: What should I do if the low battery indicator appears on the display?**

A: When the low battery indicator appears, replace the batteries with new ones to ensure the proper functionality of the timer.

PRODUCT OVERVIEW

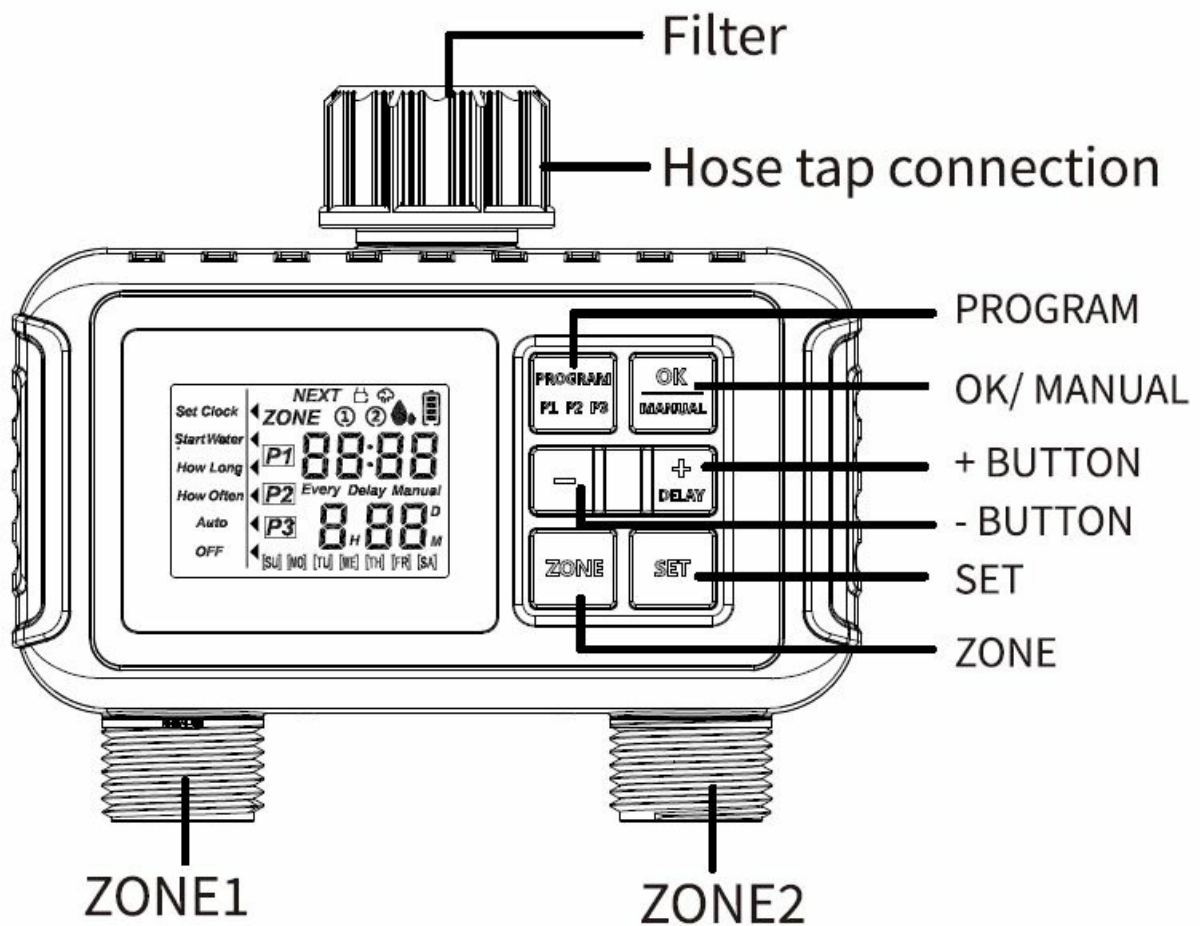

SPECIFICATION

PROGRAM	3 Separate Watering Programs Button
OK/ MANUAL	Confirm and MANUAL Watering Button
-	Decrease Button
+	Increase Button
SET	Set your watering schedule
ZONE	Select Zone 1 or Zone 2 to be programmed

Min/Max Operating Pressure	0.5Bar ~8bar(7.25psi~116psi)
Working Temperature	
Power	4 x AA alkaline batteries
Waterproof	IP55
Rain Delay Time	1day and up to 7days
Water Duration	0min~ 5H 59min
Water Frequency	Every 1 to 7 days or any day from Monday to Sunday


NOTE:

1. For outdoor use only
2. Clean the fitter regularly and replace it if it is worn, to extend the working life of the timer
3. In winter, please remove batteries, drain and store it indoors to keep away from freezing
4. Do not install the timer with tools. Hand tighten ONLY. The use of tools may damage the timer
5. Do not subject the product to extreme force and shock
6. To prevent leakage, make sure that the water timer is tightly attached to the faucet and hose, and add a rubber washer and thread seal tape if necessary.
7. Zonal and zone 2 are turned on at the same time, the water output is different

PRODUCT INSTALLATION

INSTALLINGS THE BATTERY

1. Remove the battery cover on the back of the timer
2. Install 4 new AA (1.5V) alkaline batteries (not included)
3. Firmly reinstall the cover back into the timer

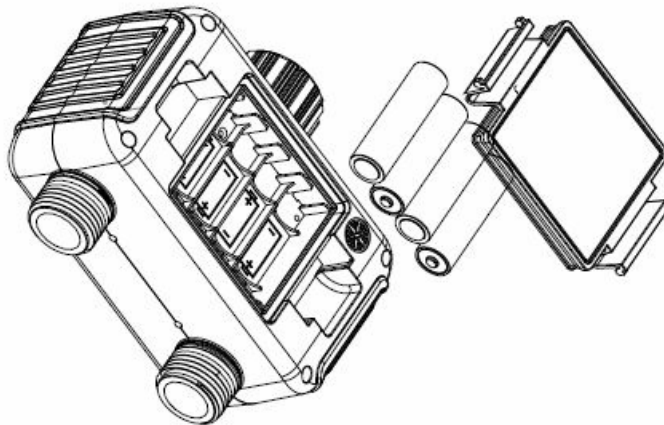

NOTE:






1. Firmly restore the battery to ensure water resistance.
2. Removed old batteries at the end of the watering season and disposed of them properly.
3. Replace batteries when the low battery indicator appears on display.
4. Please do not insert rechargeable batteries to avoid low voltage.
5. The timer doesn't have programmable memory, it needs to reset once powered off.


INSTALLING THE TIMER

1. Attach the timer to an outdoor hose faucet.
2. Please turn on the tap after programming the timer.




AUTOMATIC WATERING PROGRAM SETTING


Set Time

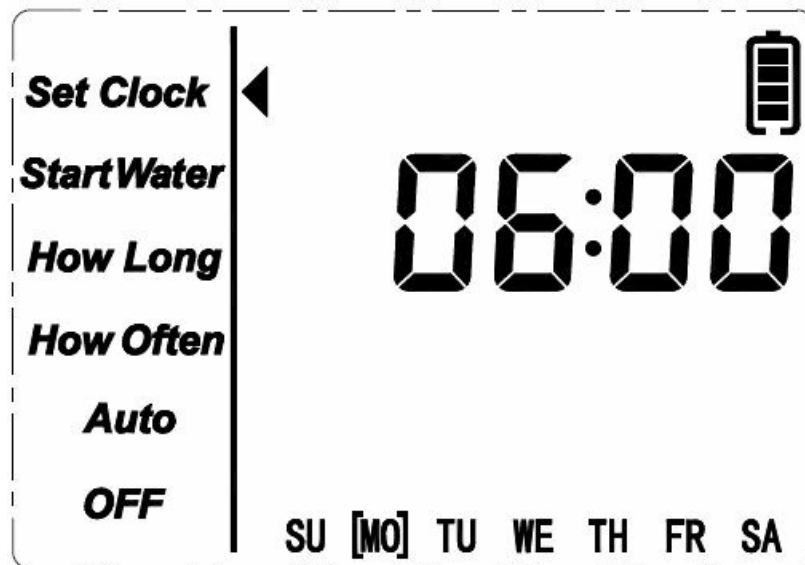1. Press the "**SET**", and the " " points to Set Time.
2. Press the "  " to set the current hour and minute. Press "**OK**" to confirm.
3. Press the "  " to set the current day of the week. Press the "**OK**" to confirm.
4. Press "**SET**" to save changes and move to the next setting, START TIME.







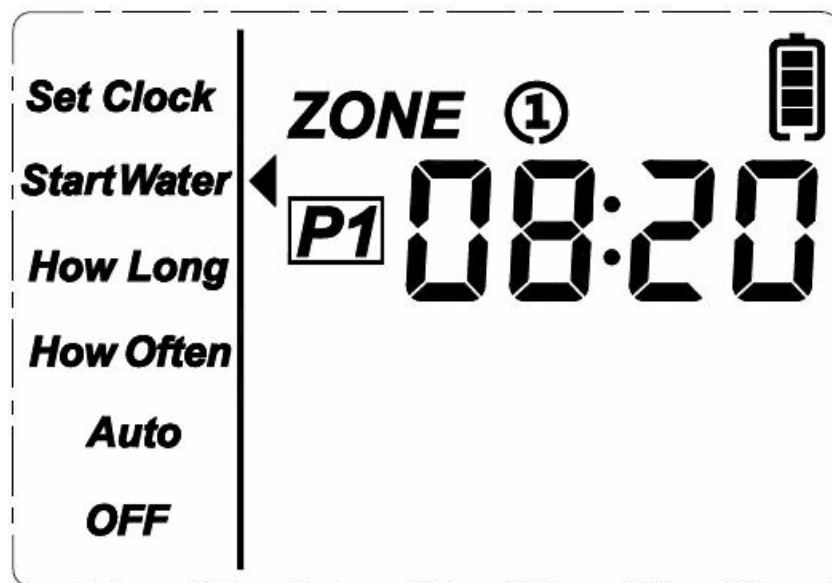




Set START TIME

1. Press the "**SET**", and the " " points to Start Time.
2. Press the "  " to set the current hour and minute. Press "**OK**" to confirm.
3. Press the "**Program**" to switch plans between P1, P2 and P3.
4. Press the "**zone**" button to switch outlets between ZONE 1 and ZONE 2.
5. Press "**SET**" to save and moving the next setting, HOW LONG



Set HOW LONG

1. Press the , the  points to How Long.
2. Press the   to set the hour and minute. Press  to confirm.
3. Press the  to switch plans between P1, P2 and P3.
4. Press the  button to switch outlets between ZONE 1 and ZONE 2.
5. Press  to save and move the next setting, HOW OFTEN

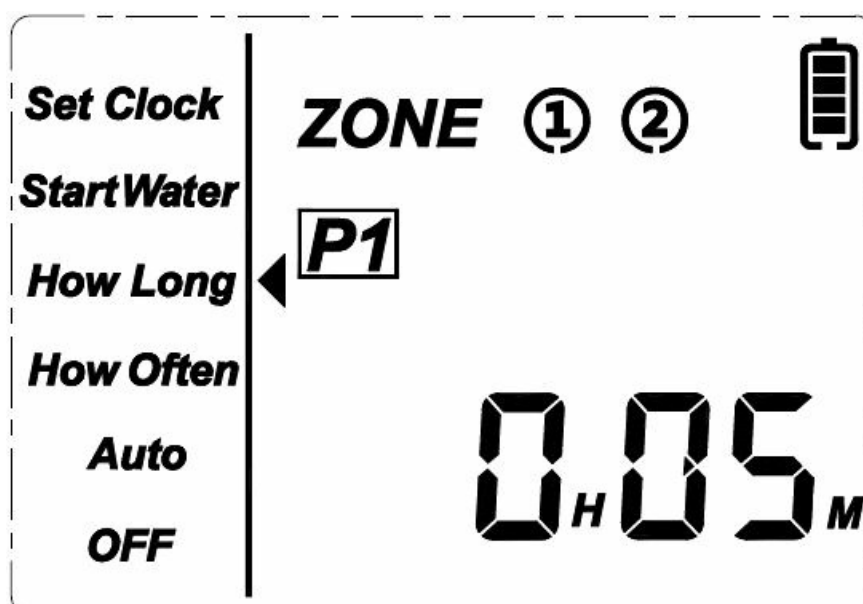








1. When the HOW LONG = 0 minutes, the scheduled task will not be executed


2. The Watering duration is from 0 minutes to 5 hours 59 minutes.

Set HOW OFTEN

There are 2 setting modes for watering frequency

Weekday Mode: Monday to Sunday

1. Press the , the  points to How Often.
2. Press the   to select the day of the week. Press  to confirm.
3. “[SU]” means the Day has been selected. Pressing  again can cancel the selection.
4. Press  to save and move AUTO.

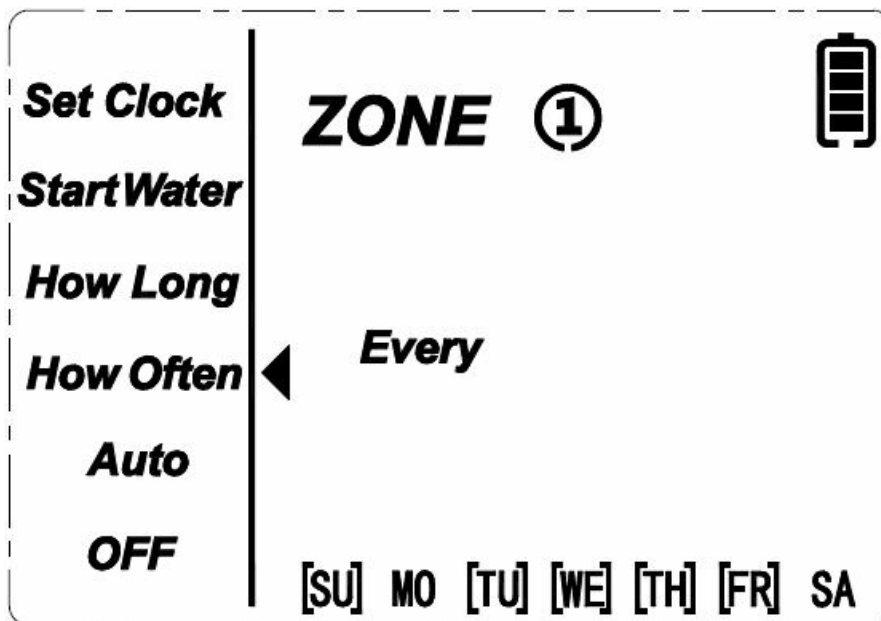



NOTE:

SU MO TU WE TH FR SA


If no Day is selected, the schedule will not be executed.

Every 1/2/3/4/5/6 Days Mode

1. When SA is flashing, press  the button to enter the setting of the day
2. Using the  button to select the interval watering days of 1/2/3/4/5/6/7 days



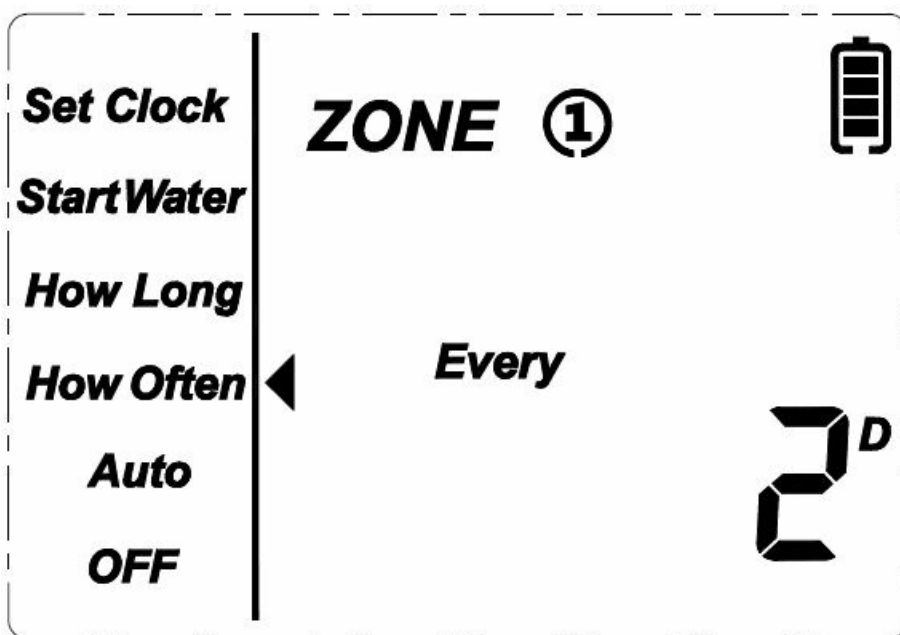


3. Press the button to save



AUTO



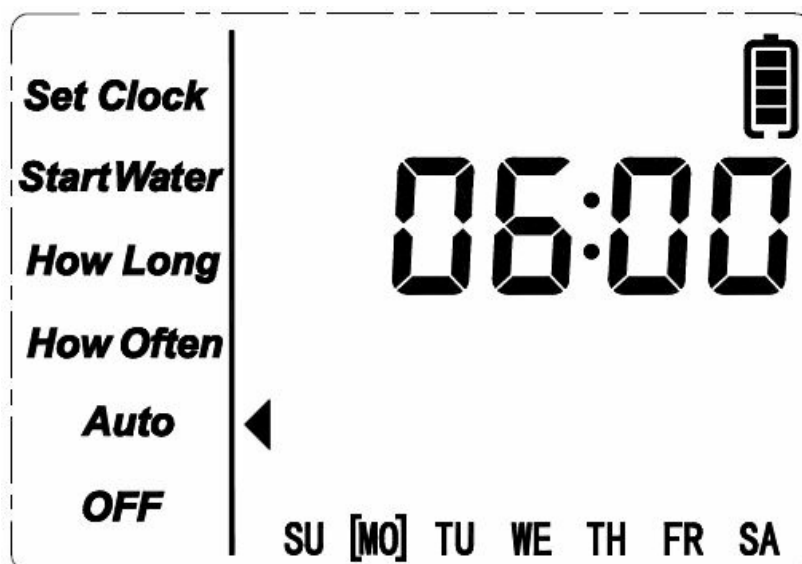


Press the “”, the “” points to Auto and the the program will be running as you set before.



OFF



- Press the “”, the “” points to OFF and the screen shows OFF and the battery level.
- All programs are saved but the timer stops working.

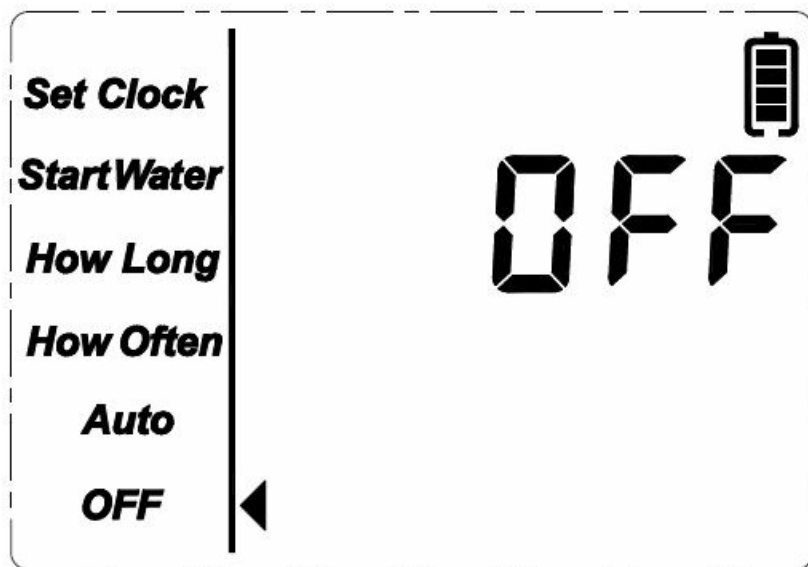


ADDITIONAL FEATURES

MANUAL WATERING

Please make sure the timer is in Auto Run state.



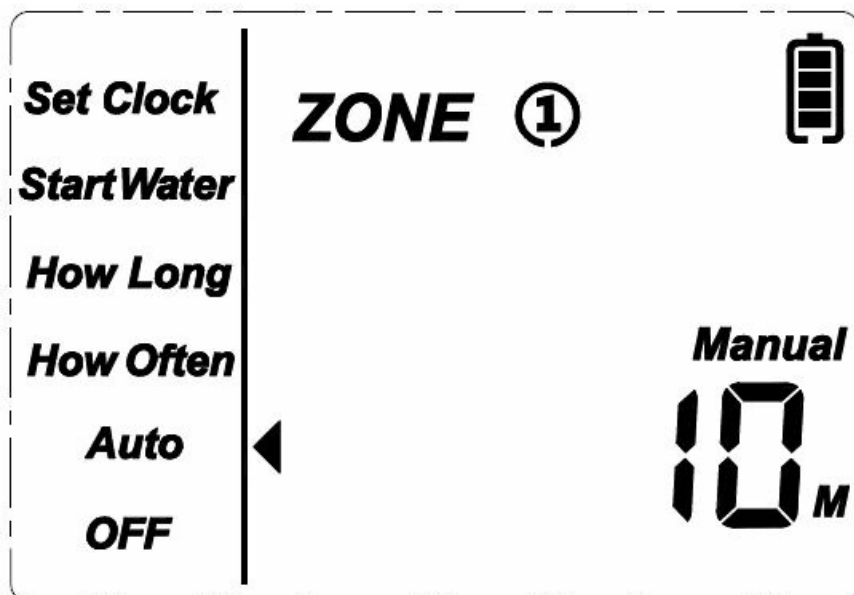



1. Press the "OK" button and press "+" and "-" buttons to select the watering duration from 0 min to 59 mins.
2. Press the "zone" button to switch the zone1 and ZONE2
3. Press the "OK" button, and it will start watering
4. When you press the "OK" button again, the manual watering task ends even if it is watering and the timer will switch back to Auto mode.




- **ONLY watering ZONE1:** SET the ZONE 2 = 0 minute and ZONE1 watering time
- **ONLY watering ZONE2:** SET the ZONE 1 = 0 minute and ZONE2 watering time

RAIN DELAY

Please make sure the timer is in Auto Run state.

1. Hold and press “” button 5s until the  appears on the screen
2. Press the “ ” button to set the duration of the delay from 1 to 7 days.
3. Press the “” button to save changes.
4. To cancel the Rain delay, you can press  5 s again

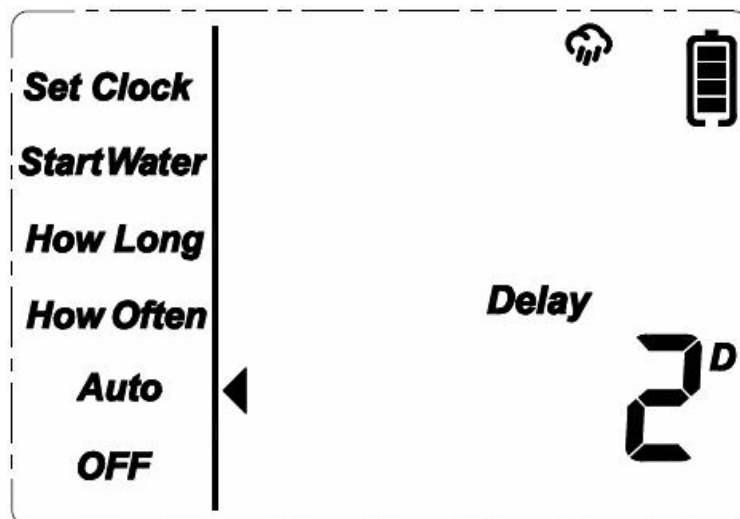

CHILDREN LOCK

 
Please make sure the timer is in Auto Run state.

- Hold and press the “” button 5s until the “” appears on the screen. If you want to cancel the “”, press “” button 5s again



BATTERY STATUS

Battery status will be displayed as follows:



FULL



LOW BATTERY


 
Note:

When the low battery indicator appears on display, the valve will close automatically to avoid leakage. Please replace the battery in time in case of interrupting the normal operation.

TROUBLESHOOTING

Problem	Possible reasons	Possible solutions
The water inlet leakage	<ol style="list-style-type: none"> 1. No filter or not be placed horizontally 2. The faucet is not the standard 3/4" 	<ol style="list-style-type: none"> 1. Add a filter and make sure it's placed horizontally in the inlet. 2. Make sure the faucet is a 3/4" faucet. 3. Strengthen it with raw rubber wrap. 4. Use the tape
The water won't stop/flow out	<ol style="list-style-type: none"> 1. Valve blockage 2. The water pressure is low 3. Wrong way of installation 	<ol style="list-style-type: none"> 1. Check the water pressure 2. Check the timer installation 3. Wash the rubber filter
Short battery life	<ol style="list-style-type: none"> 1. Mixed use of old and new batteries 2. Used carbon batteries or rechargeable batteries 	<ol style="list-style-type: none"> 1. Use brand-new alkaline batteries. 2. Rechargeable batteries and carbon batteries have a short and unstable battery life, please use alkaline batteries instead of them.

Documents / Resources

<p>Dual Water Timer Model: SGW07</p>  <p>USER MANUAL</p> <p>-1-</p>	<p>RCYAGO SGW07 Dual Water Timer [pdf] User Manual SGW07 Dual Water Timer, SGW07, Dual Water Timer, Water Timer, Timer</p>
<p>Dual Water Timer Model: SGW07</p>  <p>USER MANUAL</p> <p>-1-</p>	<p>RCYAGO SGW07 Dual Water Timer [pdf] Instructions SGW07 Dual Water Timer, SGW07, Dual Water Timer, Water Timer, Timer</p>

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.