



REACHER C40E1027 Dual Alarm Clock and Sleep Sound Machine User Manual

[Home](#) » [Reacher](#) » REACHER C40E1027 Dual Alarm Clock and Sleep Sound Machine User Manual 

Contents

 
- 1 REACHER C40E1027 Dual Alarm Clock and Sleep Sound Machine
- 2 Plugin
- 3 Battery Backup
- 4 PRODUCT OVERVIEW
- 5 FUNCTIONS
- 6 Restore Factory Setting
- 7 Documents / Resources
 - 7.1 References

Reacher

REACHER C40E1027 Dual Alarm Clock and Sleep Sound Machine




Plugin

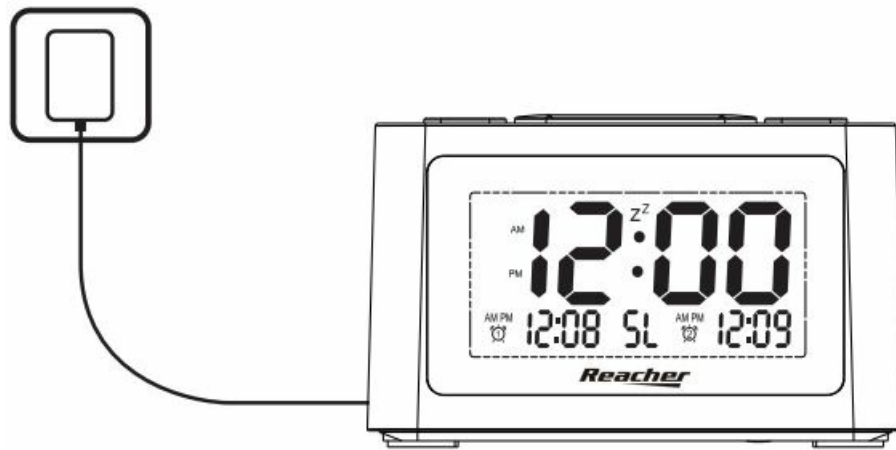


Battery Backup

 - Mainly for save settings in case of power failure.
 - Batteries drains fast(3.5 hours) if battery-operated only!
- Keep plug in.

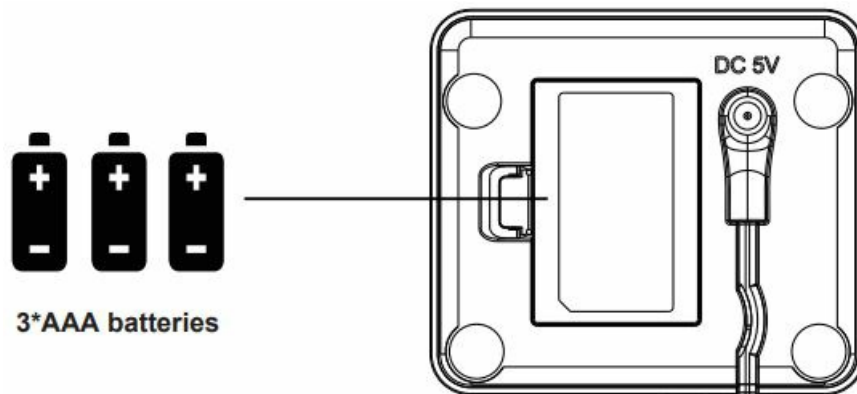

PRODUCT OVERVIEW

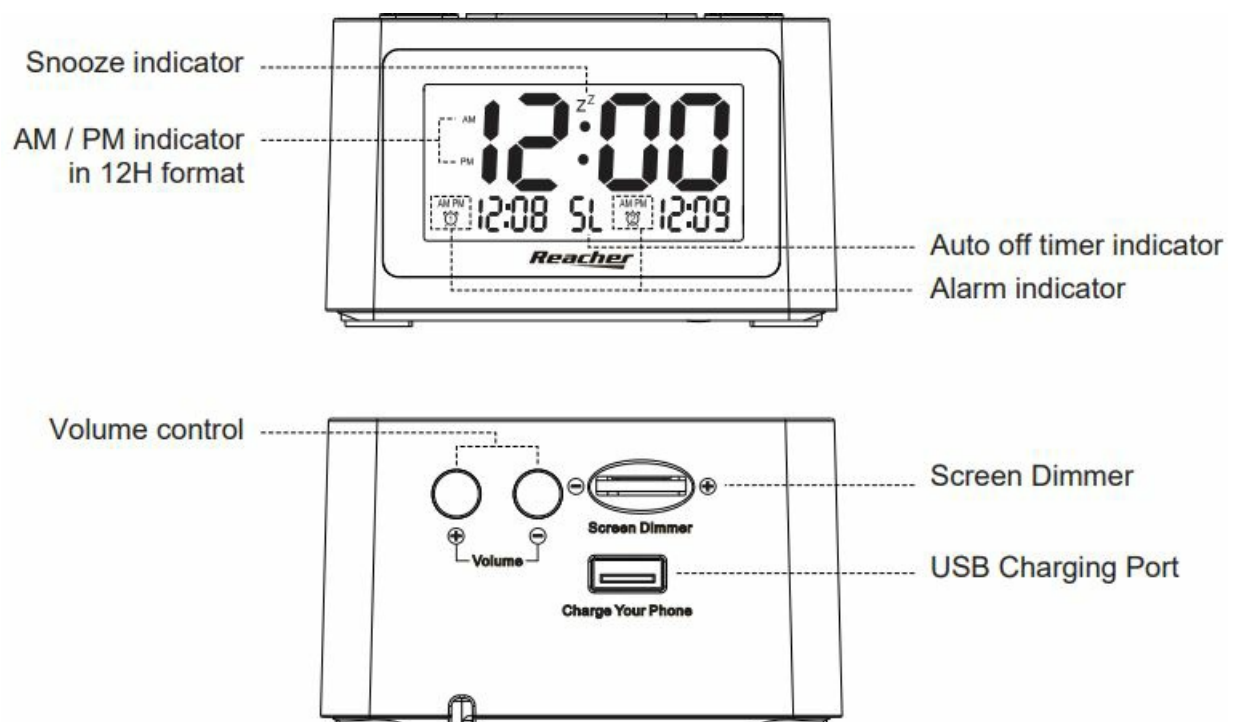 


FUNCTIONS

1. Enter alarm setting
2. Hold 3s to turn off/on alarm 1/2

Set auto-off timer when the sound machine on

Enter time setting

 Soothing sound selector

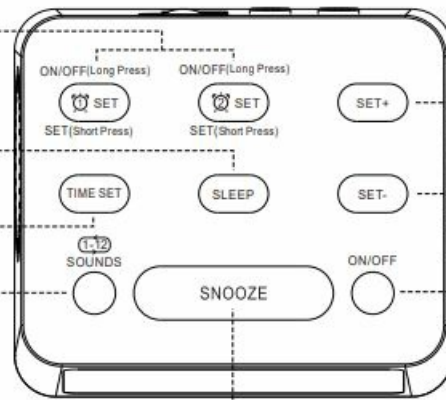

Adjust settings

Turn on/off sound machine

1. Snooze when alarm goes off
2. Hold 2s to enter snooze duration setting

Time Setting		<ol style="list-style-type: none"> ① Press "TIME SET" to select hour→minute ② Press "SET-" / "SET+" to change the selected content ③ Press "TIME SET" to confirm selected content
<p>Example: Clock is 12 hour format, default time is "AM 12:00 ", but correct time is "AM 12:30 ". Correct the minute as below.</p> <ol style="list-style-type: none"> 1. Press "TIME SET" once, "12" will be selected, "12" flash. Press "TIME SET" again "00" will be selected, "00" flash. 2. Press "SET-" / "SET+" until "00" becomes "30". 3. Press "TIME SET" again to finish setting. 		
Alarm Setting		<ol style="list-style-type: none"> ① Press "alarm icon" to select hour→minute→ringtone & volume ② Press "SET-" / "SET+" to change the selected content ③ Press "alarm icon" to confirm selected content
<p>Attention:</p> <ol style="list-style-type: none"> 1. Alarm 1/2 setting is similar to time setting, alarm ringtone settings should be noted. 2. It will sound when ringtone selected, "P01" flash, press "SET-" / "SET+" to change ringtones. Press "Volume" (on the back), "U22" flash, press repeatedly to adjust volume. 		
Alarm Off/On		<ol style="list-style-type: none"> ① Hold 3 seconds to turn off/on the Alarm 1/2 completely. - Alarm time will appear when alarm on. Otherwise, appear OFF.
Snooze Duration Setting		<ol style="list-style-type: none"> ① Hold "SNOOZE" 2 seconds to enter snooze duration setting ② Press "SET-" / "SET+" to change the snooze duration (1-15 minutes) ③ Press "SNOOZE" to confirm
Alarm Pause/Snooze		<p>When the alarm goes off, you have 2 options to stop alarm ringing:</p> <ol style="list-style-type: none"> ① Press "SNOOZE" to get 9 minutes snooze. ② Press "alarm icon" / "SET" to stop the alarm when it's ringing. Alarm will go off the next day. - If you don't press any button, it will automatically turn off after 30 minutes.
White Noise Sound Machine Setting		<ol style="list-style-type: none"> ① Press "ON/OFF" to turn on the sound machine, press repeatedly to turn off. ② Press "SOUNDS" repeatedly to change the sounds. There are 12 sounds optional. ③ Press "Volume" (on the back) to adjust the volume. (0-30 Levels)
Auto-off Timer		<p>When sound machine is on, press "SLEEP" to select auto off timer, "150" flash, press repeatedly to choose the timer duration(minute).</p> <p>- When timer is on, press "SLEEP" once to view remaining time.</p> <p>- Timer indicator will appear when timer on, Otherwise, the timer is off.</p>
Dimmer		<p>Rolling the "Screen Dimmer" wheel (on the back) to adjust the brightness of display from 0-100.</p>

Important

1. All operations will auto exit and save settings if no action is taken within 5 seconds.
2. Please check “AM” & “PM” indicator when you set time and alarm!
 - 12-hour format (default) : “AM” appear in the morning, “PM” appear in the afternoon.
 - 24 hour format: “AM” & “PM” will not appear.

Restore Factory Setting


Disconnect the power supply and remove the batteries, clock will be restore factory default setting when plug in the adapter next time.

Supply

Reacher backs 45-days money back and 12-month warranty for products in our store.

7×12H service: customer@reachershop.com.

Documents / Resources

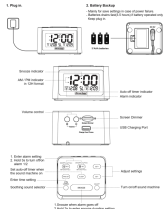	<p>REACHER C40E1027 Dual Alarm Clock and Sleep Sound Machine [pdf] User Manual C40E1027 Dual Alarm Clock and Sleep Sound Machine, C40E1027, Dual Alarm Clock and Sleep Sound Machine, Alarm Clock and Sleep Sound Machine, Sleep Sound Machine, Sound Machine</p>
---	---

References

- [User Manual](#)