

***Reacher***  
**R3LA Radio Alarm  
Clock with Wireless  
Speaker**



# Reacher R3LA Radio Alarm Clock with Wireless Speaker User Manual

[Home](#) » [Reacher](#) » Reacher R3LA Radio Alarm Clock with Wireless Speaker User Manual 

## Contents

- [1 Reacher R3LA Radio Alarm Clock with Wireless Speaker](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Getting Started](#)
- [6 Overview of Button Functions](#)
- [7 Front & Back Panel](#)
- [8 Time Setting](#)
- [9 Alarm Setting](#)
- [10 Nightlight Setting](#)
- [11 FM Radio Play Setting](#)
- [12 Wake Up Radio Alarm Setting](#)
- [13 Dimmer](#)
- [14 Wireless Speaker Setting](#)
- [15 Restore Factory Setting](#)
- [16 Safety Instructions](#)
- [17 Support & Warranty](#)
- [18 FCC STATEMENT](#)
- [19 Documents / Resources](#)
  - [19.1 References](#)
- [20 Related Posts](#)

***Reacher***

**Reacher R3LA Radio Alarm Clock with Wireless Speaker**



## Product Information

### Specifications:

- **Compliance:** Part 15 of FCC Rules
- **Radiation Exposure Limits:** FCC approved for uncontrolled environment
- **Recommended Distance:** Minimum distance of 0cm between radiator and body

## Product Usage Instructions

### Installation:

1. Place the device on a stable surface with proper ventilation.
2. Ensure there is a minimum distance of 0cm between the radiator of the device and your body.
3. Connect the device to a power source following the provided instructions.

### Operation:

1. Turn on the device using the designated power button.
2. Follow the user manual for specific instructions on using the device.
3. Ensure the device does not cause harmful interference to other equipment.

## Frequently Asked Questions

Q: Can I modify the device?

A: Any changes or modifications not approved by the manufacturer could void your authority to operate the equipment. It is recommended to use the device as intended.

Q: What are the FCC Rules compliance conditions for this device?

A: The device must not cause harmful interference and should accept any interference received, including that

which may cause undesired operation, under Part 15 of FCC Rules.

Q: What is the recommended installation distance for this equipment?


A: The equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body to comply with FCC radiation exposure limits.

## Getting Started

1. Plug into a standard outlet.



2. Pull out the sheet before use.

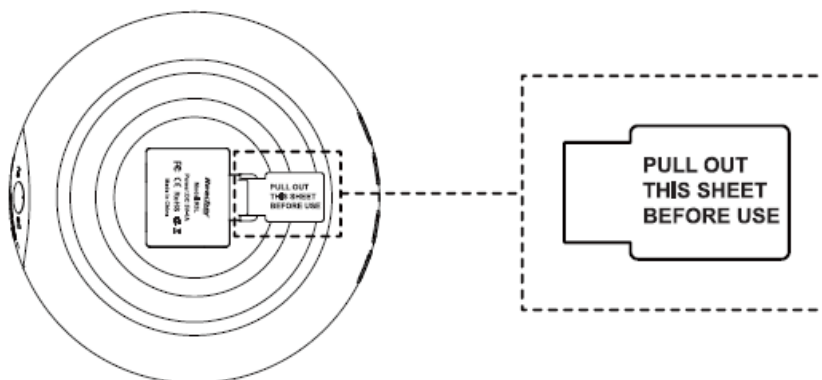

3. Check the backup battery in time.


If the memory function is abnormal, refer to images to better fasten the battery, otherwise, if the battery runs out, replace it.




### Pay attention:

1. All operations will auto-exit and save settings if there is no operation within 5 seconds.
2. Please check the " AM " & " PM " indicators when you set time and alarm.

## Overview of Button Functions

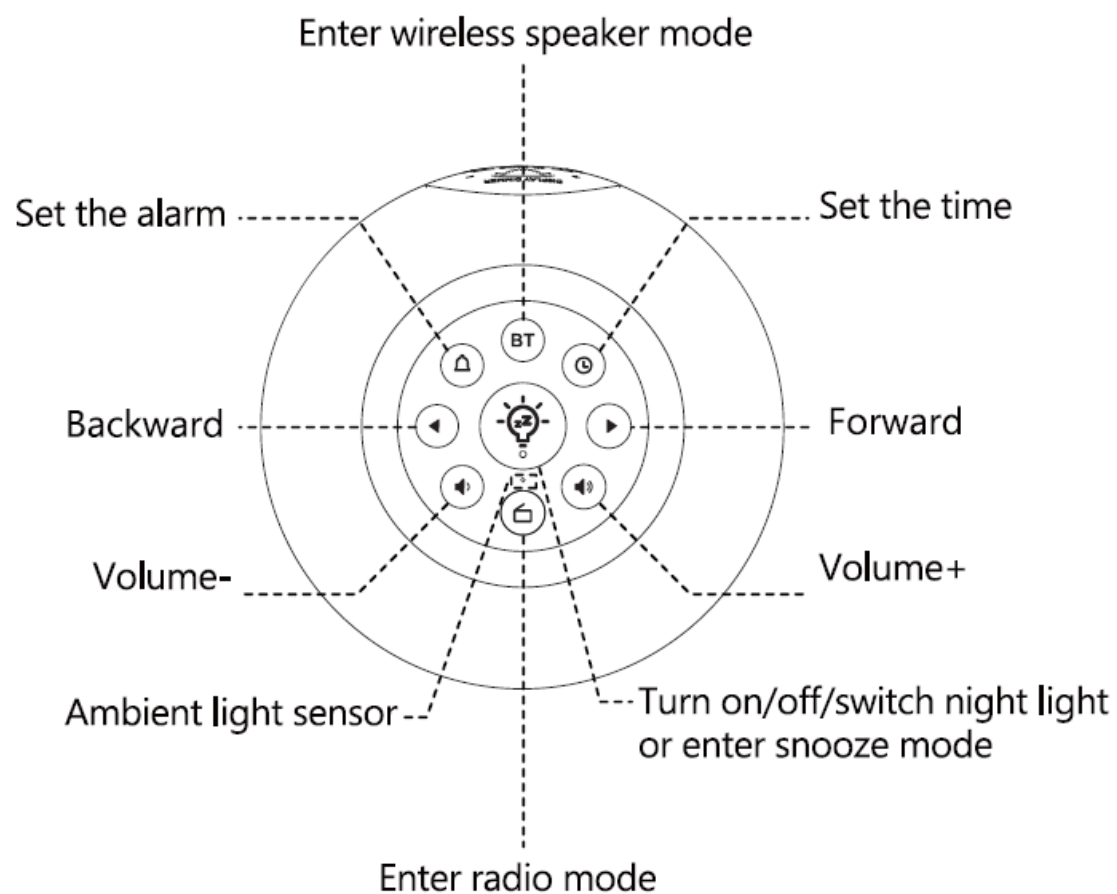

**Front & Back Panel**

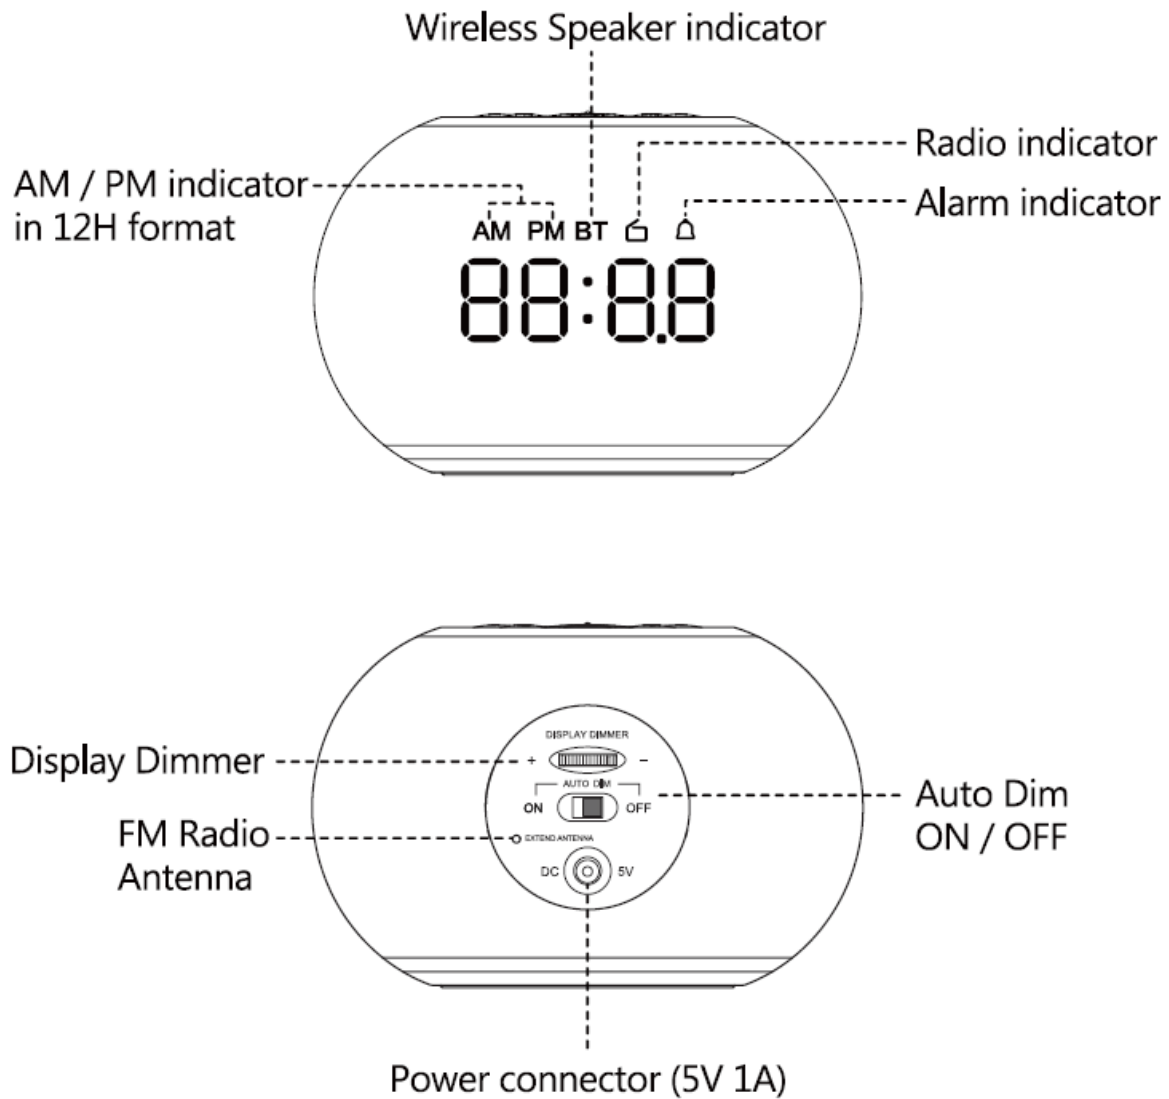

## Time Setting





1. Press "⌚" to select hour → minute → time format (12/24H).
2. Press "◀/▶" to change the selected content.
3. Press "⌚" to confirm the selected content.

### Example:



The default time is "AM 12:00", but the correct time is "AM 12:30". Correct the minute as below.

1. Press "⌚" once, "12" flash. Press "⌚" again, "00" flash.
2. Press "◀/▶" until "00" becomes "30"
3. Press "⌚" again, "12H" flash.
4. Press "⌚" again to finish setting.



## Alarm Setting

1. Press " " to select hour – minute – ringtone(P01-P07).
2. Press " "/"  " to change the selected content.
3. Press " " to confirm the selected content.

## Alarm Volume Setting

It will sound when the ringtone is selected, press the " " / " " to adjust the volume.



### Attention:

1. The alarm setting is similar to the time setting.
2. When the radio/wireless speaker is OFF, press " " / " " to select the ALARM volume level.




## Alarm On/Off

Hold " " 2 secs to turn ON/OFF the alarm.

## Alarm Pause/ Snooze




- Alarm Pause: Press " " when the alarm goes off or during snooze mode.
- Snooze: Press " " to sleep for 9 minutes when the alarm goes off.
- (If you do not press any button, it will keep ringing for 30 minutes, and the alarm will auto-off and sound the next day.)

## Nightlight Setting



- Turn ON: Press " ".
- Switch Color: Press " " repeatedly.
- Turn OFF: Long press " ".

## FM Radio Play Setting





Please extend the FM antenna on the back of the clock.

- Turn ON: Press " ".
- Adjust Radio Volume: Press " " / " ".
- Turn OFF: Press " ".

### Manual Tune FM Channel

Press “ “/”  ” to choose FM channels and long press to quickly adjust.


### Auto-Search FM Channel

1. Hold “ ” 2 secs to scan and autosave the scanned stations.
2. During the scan, briefly press “ ” to exit the search midway and save the found stations.
3. Once the station search is completed, press “ “/”  ” to select the saved radio station.

#### Attention:

Once auto scanning is completed, if you want manual tuning FM Channel, please RESTORE FACTORY SETTING first.

### Wake Up Radio Alarm Setting

- When setting the alarm ringtone, make sure you select P07.
- When the radio is on, press and hold “ ” for 2 secs, the “AL” indicator will flash for 3 secs on the screen.

#### Attention:

After setting, the clock immediately saves this station as Wake Up Radio Alarm Sound(P07).

### Dimmer

#### Auto Dimmer

Turn on the auto dim switch(on the back panel), which will automatically adjust the display's brightness based on ambient light.



 
#### Attention:

Do not block the Ambient Light Sensor, otherwise, the display will be very dark.





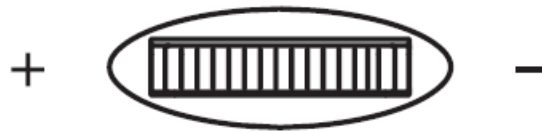

### Manually Adjust the Display Brightness

Slide the “auto dim” to the off position and slide the back wheel.

## DISPLAY DIMMER



### Wireless Speaker Setting

- **Turn ON:** Press "BT".
- **Connect:** When "BT" flashes, search and select R3LA from the device list to connect.
- **Music Switching:** Press " / " ".  
 " / " 
- **Adjust Volume:** Press "  " / "  " (The phone can also adjust the volume).
- **Play/Pause:** Press "BT".
- **Reset:** Press "  " and "  " simultaneously for 2 secs.
- **Turn OFF:** Long press "BT". ( "BT" will disappear)

### Restore Factory Setting

Disconnect the power supply and remove the battery, it will restore the factory default setting when plug in the adapter next time.

### Safety Instructions

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight or near water.
- When disconnecting the power supply, pull the plug first.
- Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

### Support & Warranty

Reacher backs a 45-day refund policy and 12-month warranty for products in our store. 7× 12H service: [customer@reachershop.com](mailto:customer@reachershop.com). If you have any questions, please feel free to contact us.

### FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause



harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:**

Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body.



**Documents / Resources**

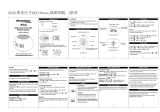	<a href="#">Reacher R3LA Radio Alarm Clock with Wireless Speaker</a> [pdf] User Manual 2AE4T-R3LA, 2AE4TR3LA, r3la, R3LA Radio Alarm Clock with Wireless Speaker, R3LA Radio Alarm Clock, Radio Alarm Clock with Wireless Speaker, R3LA Radio Alarm Clock, R3LA Radio, R3LA Alarm Clock, Radio Alarm Clock, Radio, Radio Alarm, Alarm Clock, Clock, Alarm
---	--

**References**

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.