

Rebel KOM1070 2 in 1 Bluetooth Receiver and Transmitter User Manual

Home » Rebel » Rebel KOM1070 2 in 1 Bluetooth Receiver and Transmitter User Manual

Contents

- 1 Rebel KOM1070 2 in 1 Bluetooth Receiver and
- **Transmitter**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Frequently Asked Questions**
- **5 SAFETY INSTRUCTION**
- **6 PRODUCT DESCRIPTION**
- **7 RX MODE**
- **8 TX MODE**
- 9 CHARGING
- **10 SPECIFICATION**
- 11 Correct Disposal of This Product
- 12 Documents / Resources
 - 12.1 References



Rebel KOM1070 2 in 1 Bluetooth Receiver and Transmitter



Product Information

Product Specifications:

• Brand: COMP

• Model: KOM1070

• Type: 2-in-1 Bluetooth Receiver and Transmitter

• Features: Microphone, Power button/Multi-Function Button (MFB), LED indicator, AUX 3.5mm port, Micro USB port, Mode switch

Product Usage Instructions

Receiver Mode:

- 1. Move the mode switch to the RX position.
- 2. Connect the receiver to your home stereo or car stereo system using the included 3.5mm jack cable or adapter.
- 3. Pair the receiver with your smartphone or other Bluetooth devices following the pairing instructions specific to your device.

Frequently Asked Questions

Q: How do I switch between receiver and transmitter modes?

A: To switch modes, adjust the mode switch on the device accordingly.

Q: How do I know if the device is successfully paired with my smartphone?

A: The LED indicator on the device will typically blink or change color when it is in pairing mode. Check your smartphone for a successful connection notification.

Q: Can I use this product with non-Bluetooth devices?


A: Yes, you can connect non-Bluetooth devices using the AUX 3.5mm port on the product.

SAFETY INSTRUCTION

- Before use, read the contents of the manual carefully and keep it for future use.
- Keep the device out of the reach of children.
- Protect the device from moisture, water, and other liquids. Do not use or store the device at excessively high temperatures. Protect the device from direct sunlight and heat sources.
- It is forbidden to use the device if it is damaged.
- Do not use non-original accessories.
- It is forbidden to repair the equipment yourself. In case of damage, contact an authorized service center for inspection/repair.
- Turn off the device before cleaning.
- Clean the device only with a soft, slightly damp cloth. Do not use chemicals or detergents to clean this device.

PRODUCT DESCRIPTION

- 1. Microphone
- 2. Power button/MFB
- 3. LED indicator
- 4. AUX 3,5 mm port
- 5. Micro USB port
- 6. Mode switch

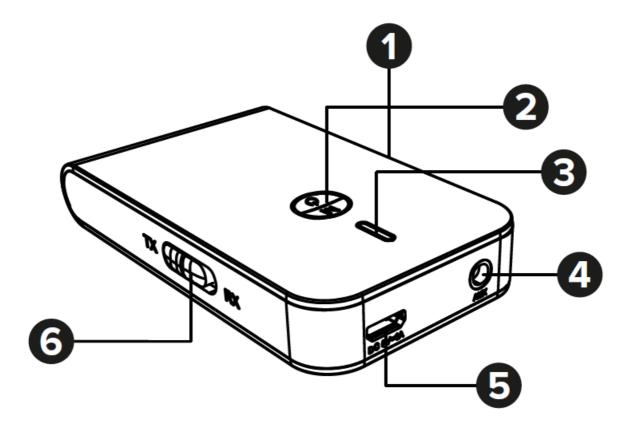

RX MODE

RX MODE (RECEIVER)

- 1. Move the mode switch to the RX position.
- 2. Connect the receiver to the home stereo or car stereo system via the included 3,5 mm jack cable or adapter.
- 3. Pair the receiver to your smartphone or other Bluetooth device:
 - Press and hold the MFB for about 3 seconds to turn on the receiver (the LED indicator flashes slowly in blue).
 - Turn on the Bluetooth function on your smartphone.
 - Select and connect with the device (KOM1070).
 - · After successful pairing, the LED indicator flashes blue.
- 4. Now you can play music through a home or car stereo system.

TX MODE

TX MODE (TRANSMITTER)

- 1. Move the mode switch to the TX position.
- 2. Connect the transmitter to an audio source device that does not have Bluetooth option using an AUX cable.
- 3. Press and hold the MFB button for about 2 seconds to turn on the receiver (the LED indicator flashes rapidly in blue).
- 4. The transmitter starts searching for available Bluetooth devices (e.g. wireless headphones, speakers). Make sure the external device has Bluetooth connectivity enabled. Once the connection is established, the transmitter's blue LED indicator will be on solid light.

CHARGING

Note: Before first use, fully charge the battery.

- 1. Plug the included USB cable into the device's microUSB socket.
- 2. Connect the other plug of the cable to the mains charger and then to the mains power outlet or to a compatible USB port on your computer.
- 3. Charging will start automatically. During charging, the LED indicator lights up red.
- 4. When charging is complete, the indicator turns off.

Notes:

- It takes about 5 hours to fully charge the battery.
- When the battery level is low, the device beeps and the LED indicator turns red. The device should be recharged immediately.

SPECIFICATION

• Bluetooth: 5.0

• Bluetooth range: up to 10 m

• Bluetooth profiles: A2DP\AVCTP\AVDTP\AVRCP\HFP\SPP\SMP\ATT\GAP\GATT\RFCOMM\SDP\L2CAP

• Supports: SBC

· Modes: transmitter, receiver

Built-in microphone

AUX output

Playing time: up to 6 h
Charging time: up to 5 h
Charging port: micro USB

Battery: 300 mAhCharging: 5 V / 1 A

• Dimensions (thickness x width x height): 13 x 46 x 80 mm

Weight: 30 g

• In the set: 3,5 mm jack cable, USB cable

Correct Disposal of This Product

Waste Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Documents / Resources



Rebel KOM1070 2 in 1 Bluetooth Receiver and Transmitter [pdf] User Manual KOM1070 2 in 1 Bluetooth Receiver and Transmitter, KOM1070, 2 in 1 Bluetooth Receiver and Transmitter, Bluetooth Receiver and Transmitter, Receiver and Transmitter, Transmitter

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.