 


RED5 71518 Motion Control UFO Controller Instruction Manual

[Home](#) » [RED5](#) » RED5 71518 Motion Control UFO Controller Instruction Manual 

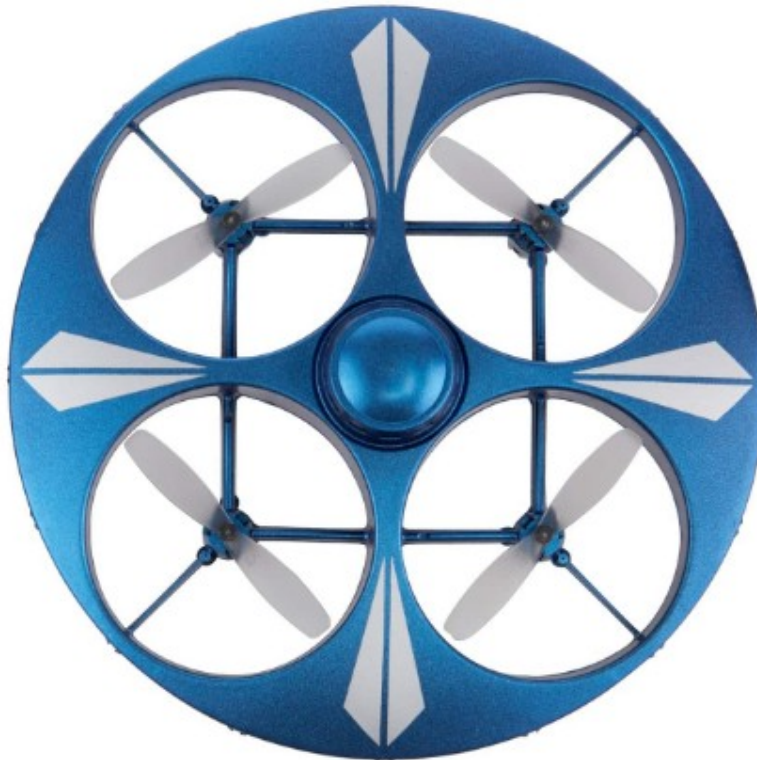

71518 Motion Control UFO Controller
Instruction Manual
Ages 8+



Contents

- 1 71518 Motion Control UFO Controller
- 2 IMPORTANT SAFETY PRECAUTIONS
- 3 IMPORTANT BATTERY INFORMATION
- 4 Flight and Preparation
- 5 Documents / Resources

71518 Motion Control UFO Controller

Trouble Shooting:

1. **Problem:** LED indicator flashes but, no response.

Reason A: Pairing was not successful. Trouble Shooting: Re-pair the UFO and the remote control.

Reason B: Remote control or UFO has insufficient power. Trouble Shooting: Replace the controllers batteries and/or recharge the UFO's battery.

2. **Problem:** The blades spin but the UFO won't fly.

Reason A: The blade has been damaged. Trouble Shooting: Replace the damaged blade, with the spares included.

 
Reason B: UFO battery is not fully charged. Trouble Shooting: Charge the UFO until the battery is fully charged.

3. **Problem:** The UFO shakes.

Reason A: The blade has been damaged. Trouble Shooting: Replace the damaged blade with the spares included.

4. **Problem:** The UFO flies out of control after crashing.

Reason A: The trim adjustment may have been affected after the crash, causing the UFO to lose balance. Trouble Shooting: Re-start the UFO.

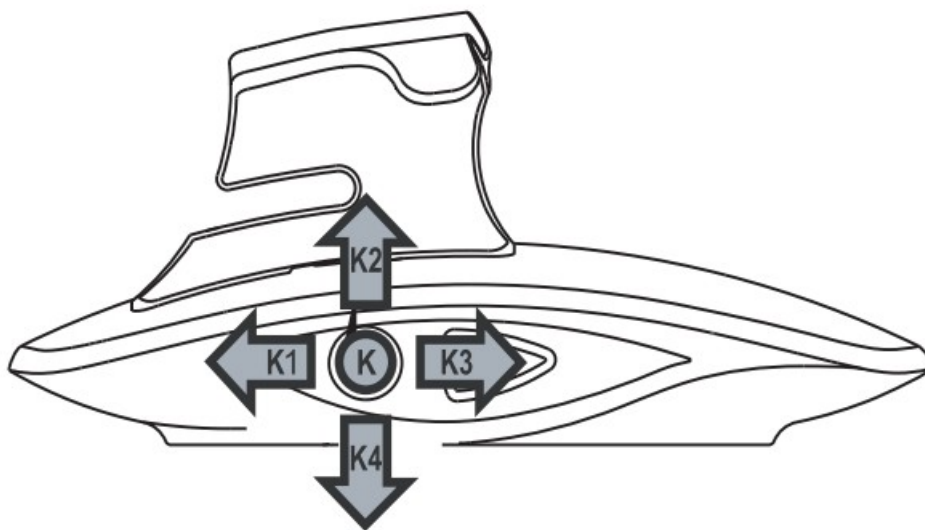

K – Auto take off/landing (please refer to operation details)

K1 – Speed adjustment (please refer to operation details)

K2 – Stunt (please refer to operation details)

K3 – Turning (please refer to operation details)

 
K4 – Height adjustment (please refer to operation details)

3*AAA/1.5V

Battery not Included


Battery Charging

Connect the charging cable to the UFO battery. Then plug into a computers USB port When charging, the USB's RED indicator light will be ON. When the battery has fully charged, the RED indicator light will switch off. Charge the battery on a non-flammable surface. Never leave the drone / battery unattended while charging.

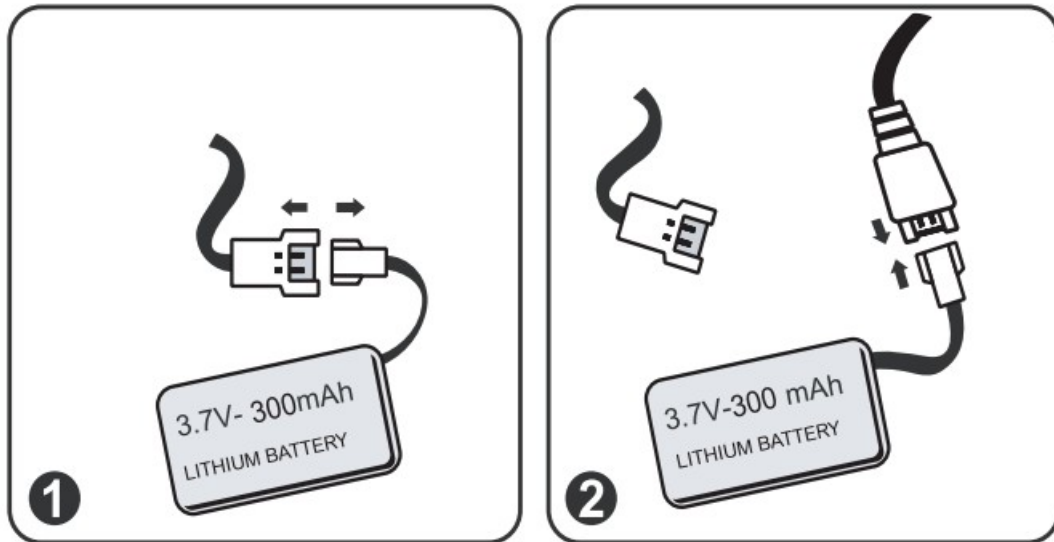


Caution:

 When using the computer for charging, please remember to pull out the charging cable before shutting down the computer. Please remove the battery from the UFO before charging.

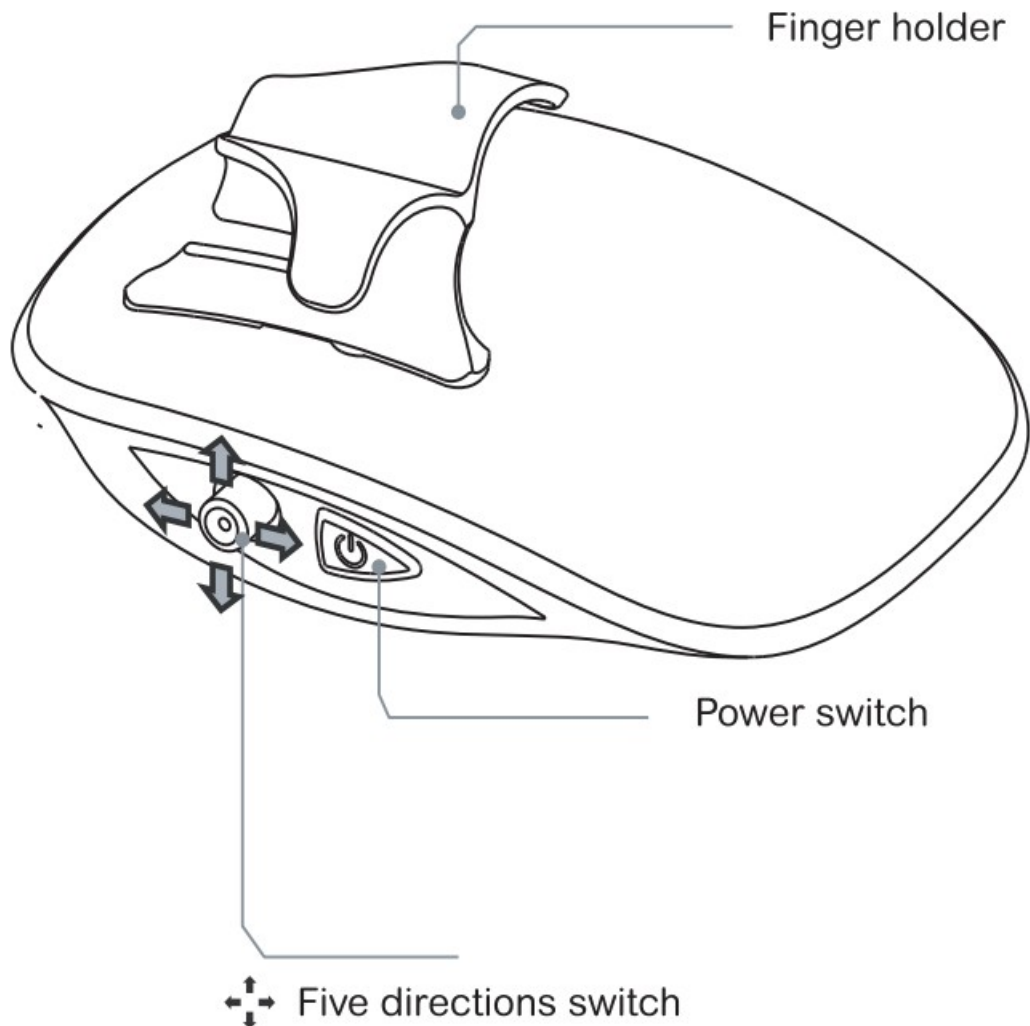

Remote Control Battery Installation:

 1. Unscrew the battery cover and remove. (Refer to picture 3)
2. Install 3 x AAA batteries according to the correct polarities. (Refer to picture 4)
3. Replace the battery cover and screw to secure.

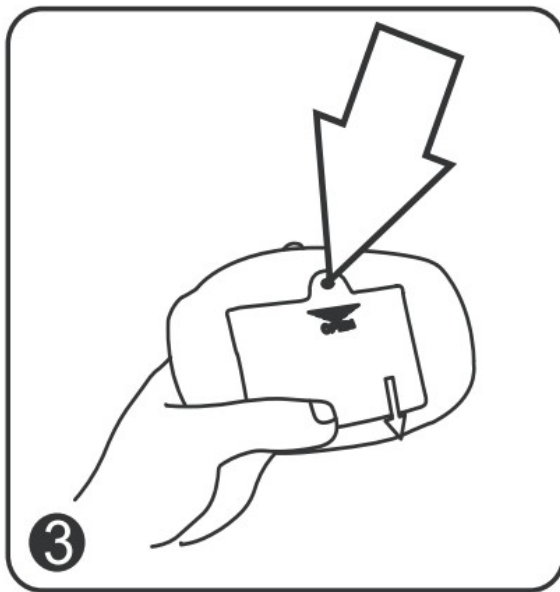

IMPORTANT SAFETY PRECAUTIONS

Note:

The UFO contains a Lithium Polymer Battery which is built into the UFO. Do not disassemble the UFO as this may result in permanent damage or hazardous operation.

DO NOT modify this product in any way. DO NOT launch at people or animals. DO NOT use near overhead cables, vents, fans or any other obstacles,

Keep propeller away from eyes, face, hands, hair and loose clothing.

Make sure people around you are aware you are using the UFO.

If the UFO gets stuck in high places, ask an adult to retrieve it for you. DO NOT attempt to retrieve it yourself. Only use the charger provided to charge the UFO. The charging process should only be completed by adults

ADULT SUPERVISION IS RECOMMENDED AT ALL TIMES'

Note:

The battery will become warm during use, before charging the battery please allow the battery to cool down completely before removing from the UFO and before charging.



 
IMPORTANT BATTERY INFORMATION

- Requires 3 x AAA 4.5V (not included).
- Batteries should only be replaced by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not recharge non-rechargeable batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- Ensure batteries are inserted with the correct polarity.
- Exhausted batteries should always be removed
- The terminals should not be short circuited. Use a screwdriver to remove the screw from the battery cover. Replace battery cover and screw before use,

Flight and Preparation


1. Connect the battery to the UFO, the LED indicator will then start to flash. Place the UFO on flat ground, the LED indicator will then change to a slow flash.
2. Make sure the batteries are correctly installed into the remote control.
3. Press the ON/OFF transparent button of the remote control. (Refer to picture 1). The UFO's LED indicator will flash to indicate successful pairing. If there is no indication of pairing, re-press the ON/OFF button until successful.

1

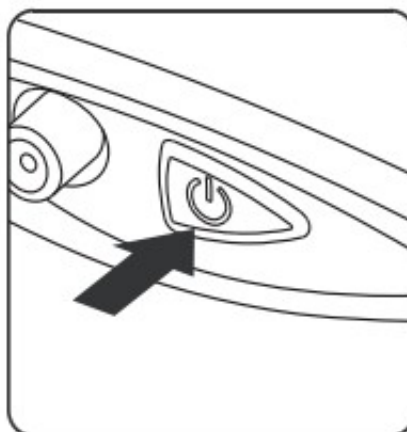

Operation and Control


 
2

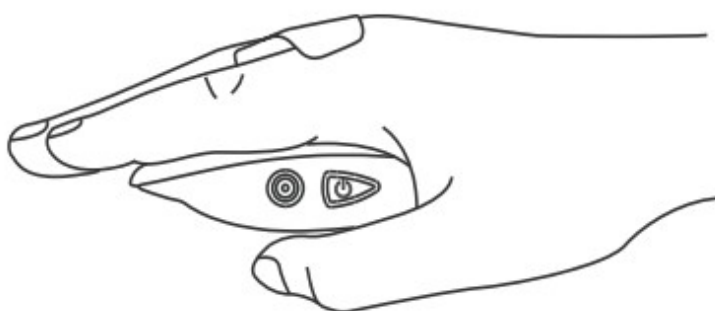

Hold the remote control horizontally. (Refer to picture 2).

1. Press "K", the UFO will take off automatically and rotate at a pre-set height. (Refer to picture 3).

  
3

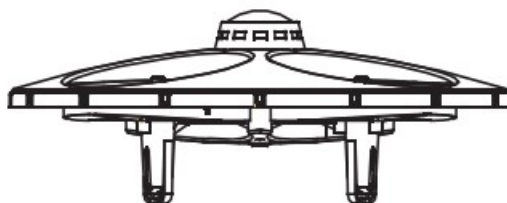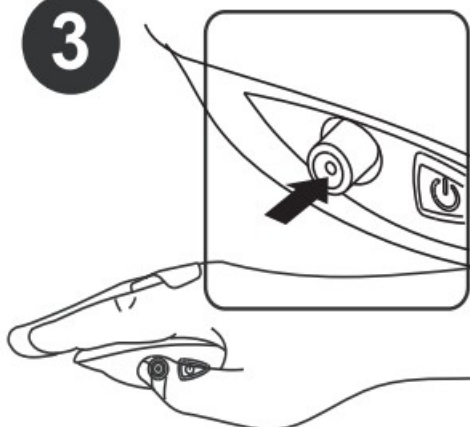

2. To control the UFO, gently angle the remote control forward, backward, left, right, the UFO will then move accordingly.


(Refer to picture 4).

 - 3.

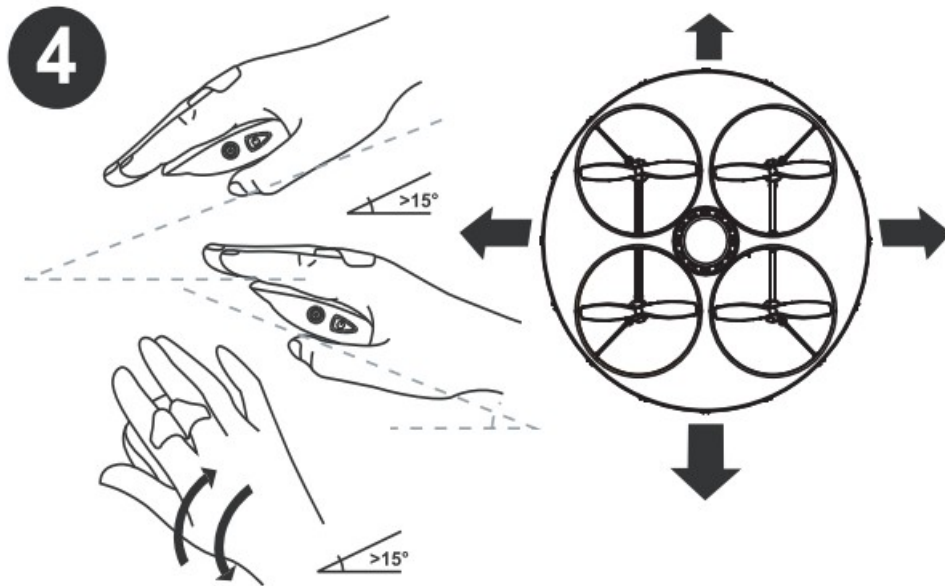


Push “K” to *K3” position, at the same time move your hand to the left or to the right. The UFO wil then tum left or right.

 (Refer to picture 5)

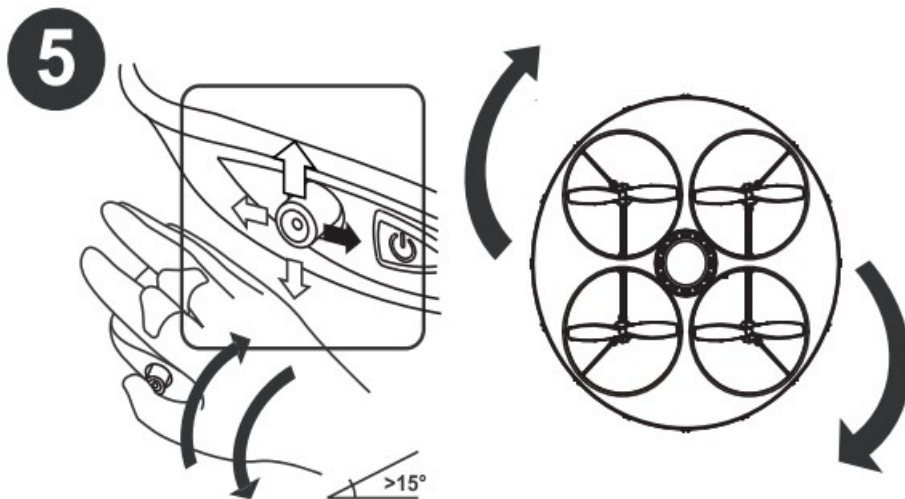


4. Push*“K” to “K1” position to adjust the speed setting. Push once to increase to a medium speed. Push again for a high speed. Push once again to return to a low speed.

 (Refer to picture 6).

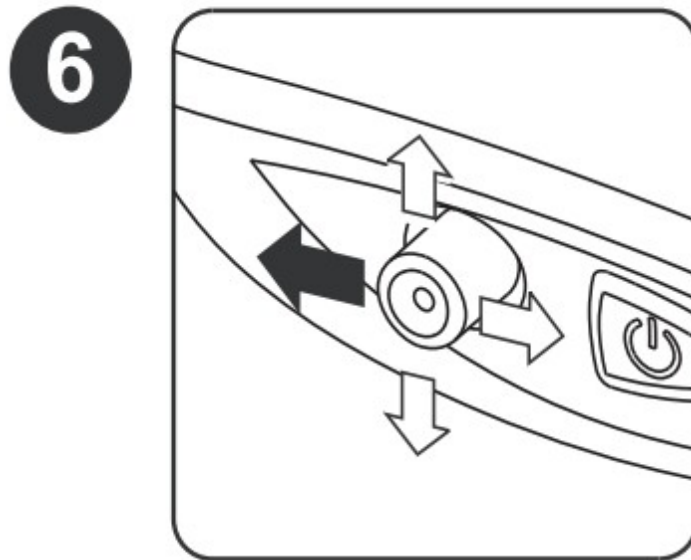

 
5. To fly the UFO lower or higher, press “K” to “K4” position While al the same time gently and slowly moving yourw rst up or down, Release fram “Kd” position and the UFO wil hover at current height.
(Refer to picture 7)

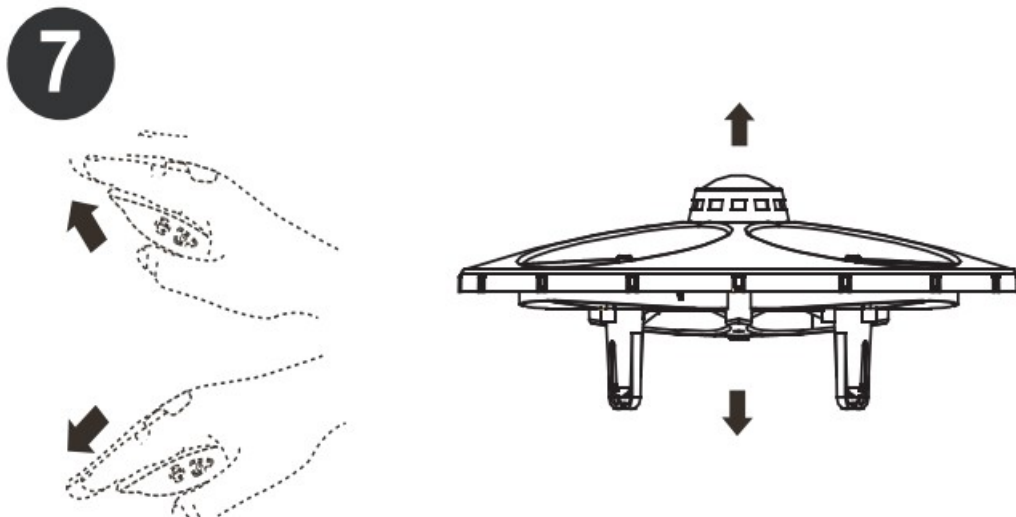

6. Landing – Press °K”, the UFO will stop flying and begin to land slomy.
7. In case of an emergency, press the ON’OFF button to turn Off the UFO immediately,

3D Eversion

 1. Ensure the UFO is flying a mininum of 2 meters off the ground.
2. Press K” to “K2” position, jean the remote control to the right’ feft or forwards! backwards to perform a 360° stunt. Make ‘sure that when leaning the remote control your wrist 6 at an angle over 75°. Please also ensure the UFO is fully charged.
(Refer to picture 8).

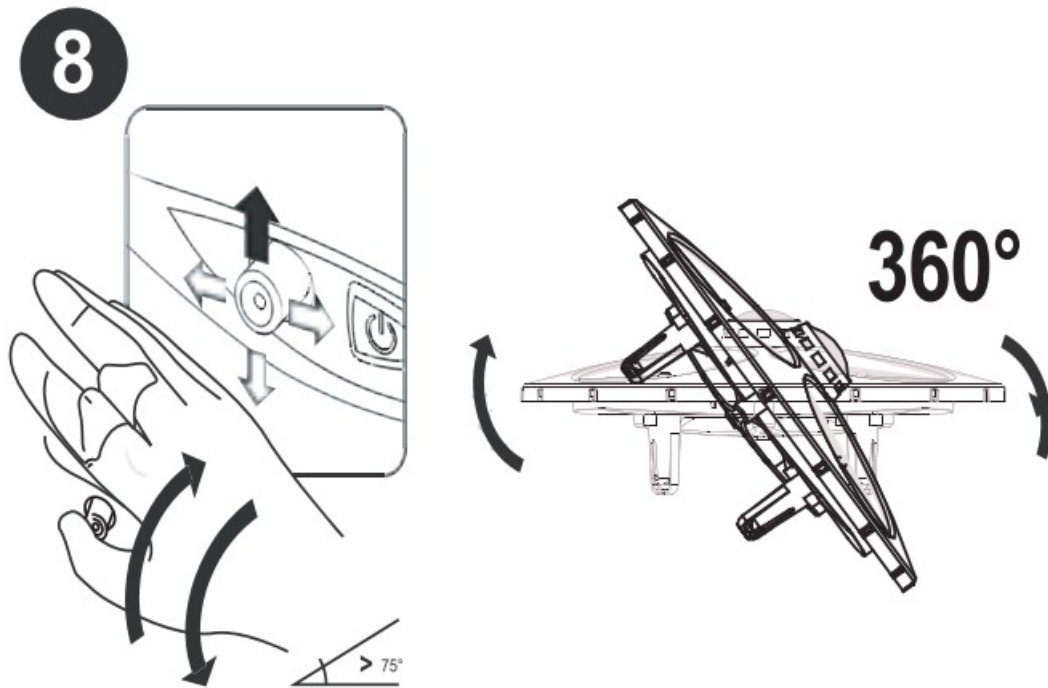

Product Information:

Length: 155mm,

Width: 155mm,

Height: 50mm.

Battery Information:

Product includes 1 x

Li-Po battery. 3.7V -300mAh, installed inside of product, it is replaceable.

Remote Control:

3 x AAA battery required. 1.5V, it is replaceable.

Not included.

Parameter Information:

Charging time: About 30 minutes.

Flight Time: About 5-8 minutes.

Control Distance: 50m.

Product List:

Motion Control UFO, Controller, Instruction manual, USB charge cable, Propellers X4, Finger Holders X2.
important:

Please keep the UFO far away from direct sunlight or heat. The UFO and remote control contain electrical parts. Please keep it far away from water or wet environment. Please use a dry, clean cloth to clean the product if it gets dirty Do not wash any parts with detergent.

Hereby, Gift Universe Management Ltd, declares this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the original Declaration of Conformity can be obtained at the following address: Gift Universe, The Atrium, Curtis Road, Dorking Surrey RH4 1XA. This product bears the selective sorting symbol for waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European Directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

For further information, please contact your local or regional authorities. Electronic products not included in the selective sorting process are potentially dangerous for the environment and human health due to the presence of hazardous substances.



**Manufactured & Imported by
The Source Wholesale**

The Atrium, Curtis Road, Dorking, Surrey RH41XA

The Source Wholesale BV

Joop Geesinkweg 701, 1114 AB Amsterdam-Duivendrecht

The Source Wholesale Inc

 
2055 Limestone RD, STE 200c

Wilmington, DE 19808 USA

Please retain the important information on this packaging for future reference.

MADE IN CHINA

71518 06/21

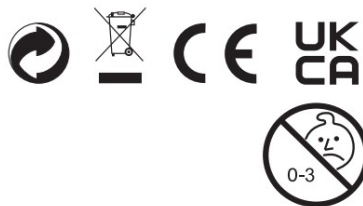

WARNING:

CHOKING HAZARD-Small parts. Not for children under 3 years.

Documents / Resources

	<p>RED5 71518 Motion Control UFO Controller [pdf] Instruction Manual 2BBD6-71518, 2BBD671518, 71518, Motion Control UFO, Controller, Motion Control UFO Controller, 71518 Motion Control UFO Controller</p>
--	---