



# REDLINE Android 11 Smart Tablet User Manual

[Home](#) » [REDLINE](#) » REDLINE Android 11 Smart Tablet User Manual 



## Android 11 Smart Tablet User Manual

### Contents

 
- [1 Android 11 Smart Tabletb](#)
- [2 FUNCTION OVERVIEW](#)
- [3 APP MANAGEMENT](#)
- [4 TROUBLESHOOTING](#)
- [5 TECHNICAL SPECIFICATIONS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## Android 11 Smart Tabletb



Please read this instruction thoroughly before using this product and keep it for future reference.

## FUNCTION OVERVIEW

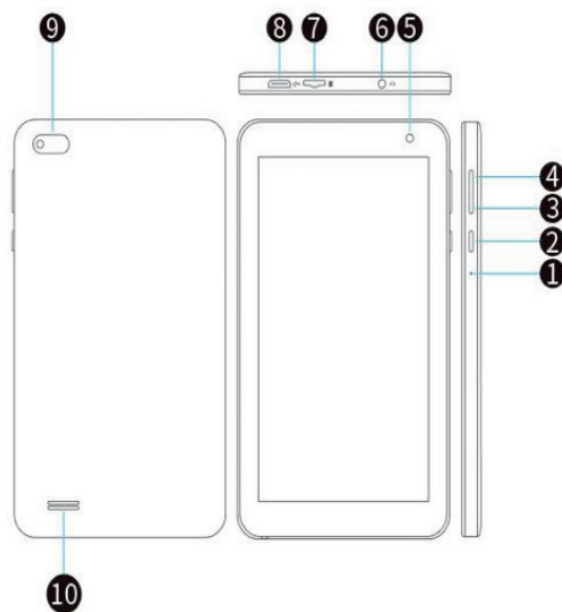

1. Reset	6. Headphone Jack
2. Power On/Off	7. Micro SD Card Slot
3. Volume-	8. USB interface
4. Volume+	9. Back Camera
5. Front-facing Camera	10. Speaker

## GETTING STARTED

### Power On/Of

Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.

Press and hold the power button for 2s, then release it. It will show Power Off and Restart on the screen. Tap Power Off to turn off the tablet.

Press and hold the power button for 5s to do a forced shutdown when it's frozen.

### Battery

A rechargeable Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if only use your tablet occasionally.

### Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

### Tip:

Go to Settings > Display > Sleep to set the time of entering the Sleep Mode.

## HOME SCREEN

Icons on the Bottom Menu



1. Volume Down	4. Recent Activities
2. Back	5. Volume Up
3. Home Screen	6. Apps Collection

## Wallpapers, Widgets and Home Settings



Tap and hold the empty section of a Home screen, WALLPAPERS, WIDGETS and HOME SETTINGS will be displayed.

Tap WALLPAPERS icon to change the current wallpaper of the tablet from the default wallpapers or your photos.

 
Tap WIDGETS, touch and hold any widget (e.g.Clock), then slide and add it to a Home screen. Remove it by sliding to X.







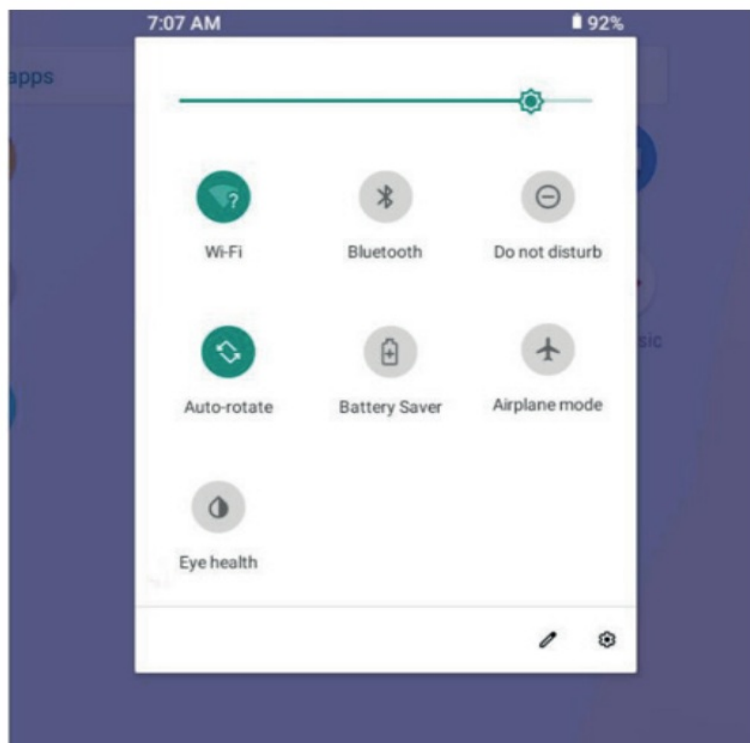

Tap HOME SETTINGS to enable/disable Add icon to Home screen. This is applicable to the new Apps installed from Play Store.

## **SETTING BASICS**

### **Quick Settings**

Swipe down from the top of the screen to access Quick Settings.



	Wi-Fi. Tap to connect to a wireless network
	Bluetooth. Enable/disable the Bluetooth on the tablet; pair with other Bluetooth devices or view paired devices
	Do Not Disturb. Block sounds or vibrations according to the different modes (Total silence, Alarms only and Priority only)
	Portrait/Auto-rotate/Landscape
	Battery Saver. Enable/disable the low power mode
	Airplane Mode. Turn on/off all the network connectivity
	Eye protection mode reduces eye damage In different environments
	Tap the icon to change the options in the Quick Settings

### More Settings

Swipe down from the top of the screen, then tap the icon to enter the detailed Setting interface. Or, tap the Settings icon on the Home screen to enter.

#### Network & Internet

- Connect to any working Wi-Fi
- Enable/disable the Airplane Mode
- Monitor the data usage

#### Connected devices

- Turn on/off Bluetooth
- Pair with Bluetooth devices and check the paired devices
- Cast device and check the cast device
- Add and check printers

#### Apps & notifications

- Check the Apps recently opened
- Check all the Apps on the tablet
- Set the App permissions
- Uninstall the third-party Apps

- Adjust App notification settings
- Clear the cache of the Apps

## Battery

- Display the remaining battery power as a percentage
- Enable/disable the Battery Saver
- Adjust the time of entering the Sleep Mode

## Display

- Adjust the screen brightness
- Adjust the font size and display size
- Set a screen saver
- Change the wallpaper
- Adjust the time of entering the Sleep Mode

## Sound

 
- Set volume levels for media, alarms, and notifications
- Set preferences of Do Not Disturb
- Set the tunes for notifications and alarms
- Turn on/off the sound for screen lock, charging and touch

## Screenshot

- Set the delay time for a screenshot
- Set the location folder of screenshots
- Switch on/off Show the screenshot button in the statusbar

### Tip:

Press the volume down button and the power button together to capture a screenshot. Or, switch on Show the screenshot button in the statusbar, then tap the icon on the bottom menu to capture a screenshot.

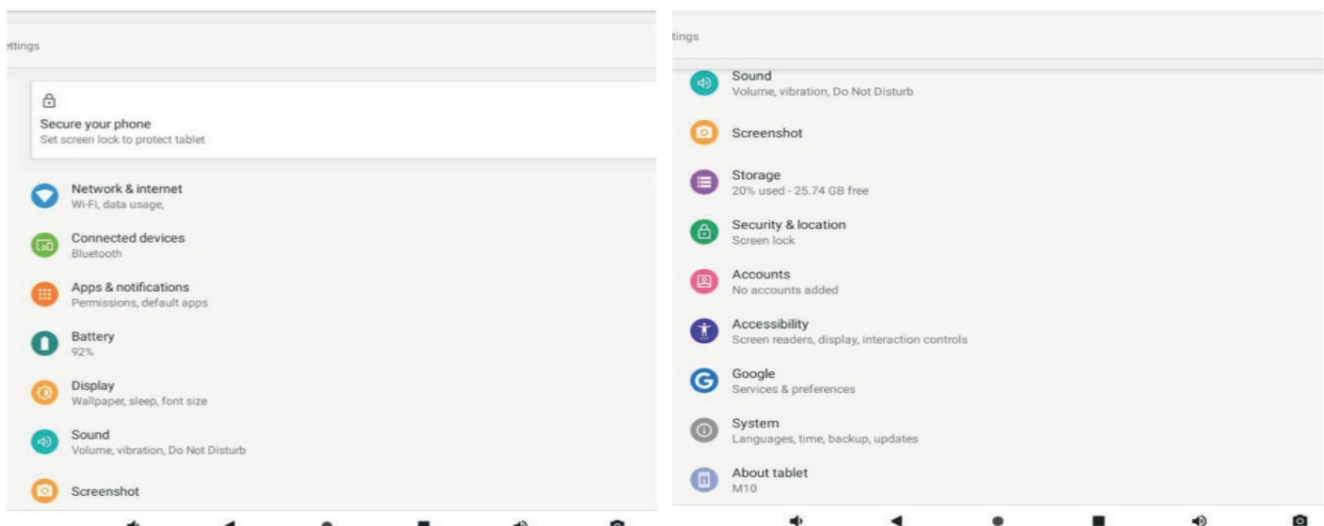

## **Storage**

- View and manage your storage space

## **Security & location**

- Set screen lock pattern, e.g. password, PIN, Swipe etc.
- Enable/disable all the notifications while the screen is locked
- Turn on/off the location services for specific Apps
- Set to show/hide the password when input a password

## **Users & accounts**

- Add and manage the user accounts on your tablet

## **Accessibility**

- For vision and hearing impaired users, manage settings for Screen readers, Subtitle , and more

## **Google**

- Set the preferences for Google related services

## **System**

- Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the to the top to change the language.

 
 
- Restore factory setting Tap Reset options > Erase all data (factory reset) to restore the factory setting.
- Set the date and time
- Turn on/off the Backup
- Check the detailed information about the tablet

## **NETWORK CONNECTION**

Go to Wi-Fi settings in the Settings interface or directly enter through Quick Settings.

### **Wi- Fi Connection**

1. Tap Network and Internet and turn on the Wi-Fi. All Wi-Fi connections available will be listed;
2. Select your Wi-Fi and input the correct password.

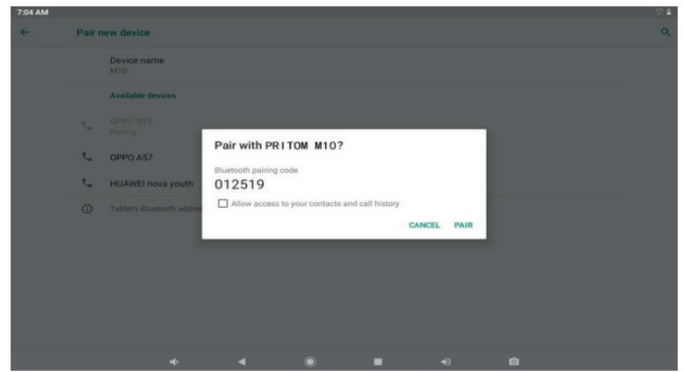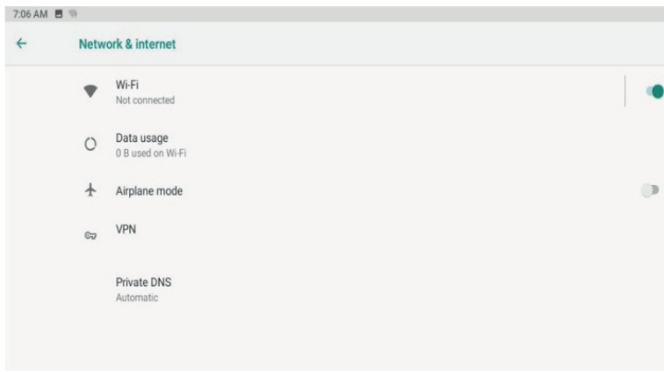

## Bluetooth Paring

Please turn on the Bluetooth on your tablet and your bluetooth device.

1. Tap Connected devices and turn on the Bluetooth;
2. Tap Bluetooth > +pair new device to enter the scanning interface. Devices available will be displayed after a few seconds;
3. Tap the desired device to get a paring code and click PAIR on both devices. An automatic connection will be applied to some devices.

## APP MANAGEMENT

### App Download and Installation

1. Tap and open Play Store on the Home screen;
2. Log into your google account, search and download the App you need.

## APP MANAGEMENT

### Move the App

Tap and hold the App, then slide it to a desired screen.

### Remove the App from the Home screen

Tap and hold the App, then slide to X to remove it from your Home screen.

 
### Uninstall the App

Tap and hold the App, then slide to the trash bin to uninstall the App.

### Clear the Cache of the App

1. Go to Settings > Apps & notifications;
2. Select an App > Storage > CLEAR CACHE.



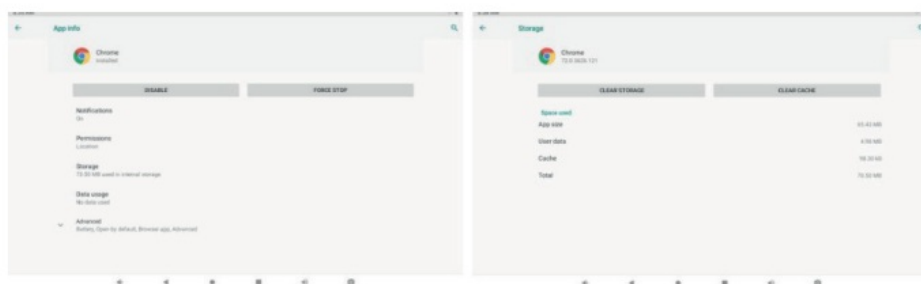

## INTERNET NAVIGATION

Please make sure the tablet is connected to a working Wi-Fi network before navigating the Internet. You may use the Chrome browser pre-installed or use another browser downloaded from Play Store.

 
## MULTIMEDIA

Connecting to the Computer

1. Connect your tablet to the computer with USB cable and go to Quick Settings;
2. Tap Android TM systems. USB charging this device > Tap for more options > Use USB to;
3. Select Transfer files;
4. Go to your computer and find your tablet P7 to transfer files between your tablet and computer.

**Tip:** Select Charging this device to charge your tablet;


Select Transfer photos (PTP) to transfer photos between the devices.

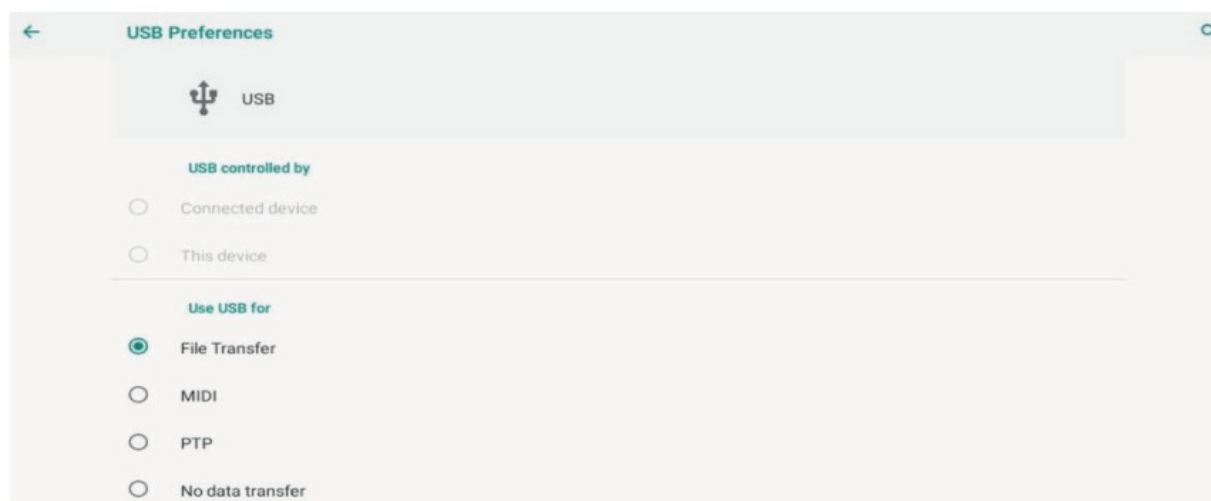

## Connecting to an External Device

1. Install a microSD card into the microSD card slot and go to Quick Settings;

 2. Tap New SD card detected or Set Up prompt;
3. Set the microSD card as a portable storage by selecting Use as portable storage. Enter microSD Card storage to move files between the card and tablet.

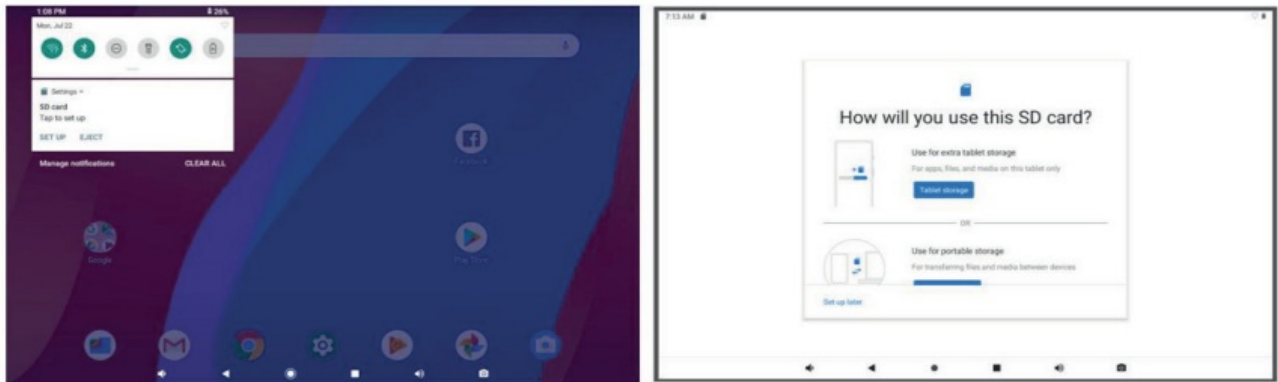

## TROUBLESHOOTING

1. The tablet doesn't power on.
  - \*Reboot your tablet after charging for 30 minutes;
  - \*Press the power button to check if the tablet is in the Sleep Mode;
  - \*Press and hold the power button for 5s to turn off the tablet, then reboot it;
  - \*Press the Reset button with a pin to reboot the tablet.
2. The tablet doesn't charge.
  - \*Make sure the USB cable is properly plugged into the charging port;
  - \*Try another compatible USB cable and adapter.
3. Error message occurs during the operation.
  - \*Uninstall the App with the error message, then download and install again;
  - \*Press the Reset button with a pin to reboot the tablet.
4. The tablet cannot be detected by the computer.
  - \*Make sure the tablet is powered on;
  - \*Try another USB cable;
  - \*Try another USB port on the computer;
  - \*Instead of Charge this device choose Transfer files or Transfer photos PTP when connecting the tablet to the computer.
5. The tablet cannot connect to the Wi-Fi.
  - \*Make sure the Wi-Fi in your tablet is ON;
  - \*Make sure you input the correct password when connecting the Wi-Fi;
  - \*Restart the router;
  - \*Make sure there is no filter setting or device connection limitation in the setting of the router;
  - \*Forget the current Wi-Fi, reset the router and connect the Wi-Fi again.
6. The storage space of the tablet is not enough.
  - \*Delete the Apps you don't use;
  - \*Clear the cache of the Apps regularly;
  - \*Install an microSD card to expand the storage.

## TECHNICAL SPECIFICATIONS

MODEL NAME		SPACE A8
OPERATING SYSTEM		Android- 11
PROCESSOR	CPU	Allwinner A133 Quad-Core ARM Cortex–A53@1.6GHz
	GPU	IMG PowerVR GE8300
RAM MEMORY		2GB DDR3
STORAGE MEMORY	Internal	16GB
	Card reader	microSD up to 128GB
DISPLAY	Diagonal	8 inches
	Technology	IPS Capacitive (Multitouch G+P)
	Resolution	HD 1280 x 800 pixels
CAMERA	Front	2.0mPx FF
	Back	5.0mPx
COMMUNICATION &	Wi-Fi	802.11 b/g/n 2.4GHz
	Bluetooth	v4.0
PORTS	Audio in/out	3.5mm audio-jack / Internal BOX Speaker
	USB	Type C
	Power	Type C DC 5V, 2A
BATTERY	Type	Li-Ion, 3.8V, 4000mAh
	Stand-by time	max. 450h
	In use time	max. 7h
DIMENSIONS	WxDxH	208.5 x 124.5 x 9.2mm
	Weight	315g
OTHERS	Playback	Audio: MP3/WMA/WAV/MP2/A4C/M4A/M44/FLAC/30P/WAV;
		Video: XVID/H.263/H.264/AVI/DIVX/MP4/MPEG/MKV/MOV/FLV
		Image: JPG, JPEG, GIF, BMP, PNG;
		Documents: TXT/EPUB/PDF/DOC/XLS/PPT
	Sensors	Gravity



**DTS ELEKTRONİK SAN. TİC. LTD. ŞTİ.**

Mahmutbey Mah. 2650. Sk. No:21 Bağcılar / İSTANBUL

Phone: +90 212 697 34 34

Fax: +90 212 697 34 16

E-mail: [info@redline.com.tr](mailto:info@redline.com.tr)



[/redline.com.tr](https://www.facebook.com/redline.com.tr)



[/redline.com.tr](https://www.instagram.com/redline.com.tr)



[/redlinecomtr](https://www.youtube.com/redlinecomtr)



[redline.com.tr](https://www.redline.com.tr)

## Documents / Resources

	<p><a href="#">REDLINE Android 11 Smart Tablet</a> [pdf] User Manual Android 11 Smart Tablet, Android 11, Smart Tablet, Tablet</p>
--	--

## References

- [Home - Redline](#)