



REDLINE RL-WR3400 Wireless Router Installation Guide

[Home](#) » [REDLINE](#) » REDLINE RL-WR3400 Wireless Router Installation Guide 

REDLINE RL-WR3400 Wireless Router Installation Guide



Contents

1 Hardware Connection

2 Router Setup

2.1 Router Mode(PPPOE)

3 Access Point Mode

4 WISP Mode

4.1 Configure

4.2 Relocate

 
5 Support

6 Documents / Resources

6.1 References

7 Related Posts

Hardware Connection

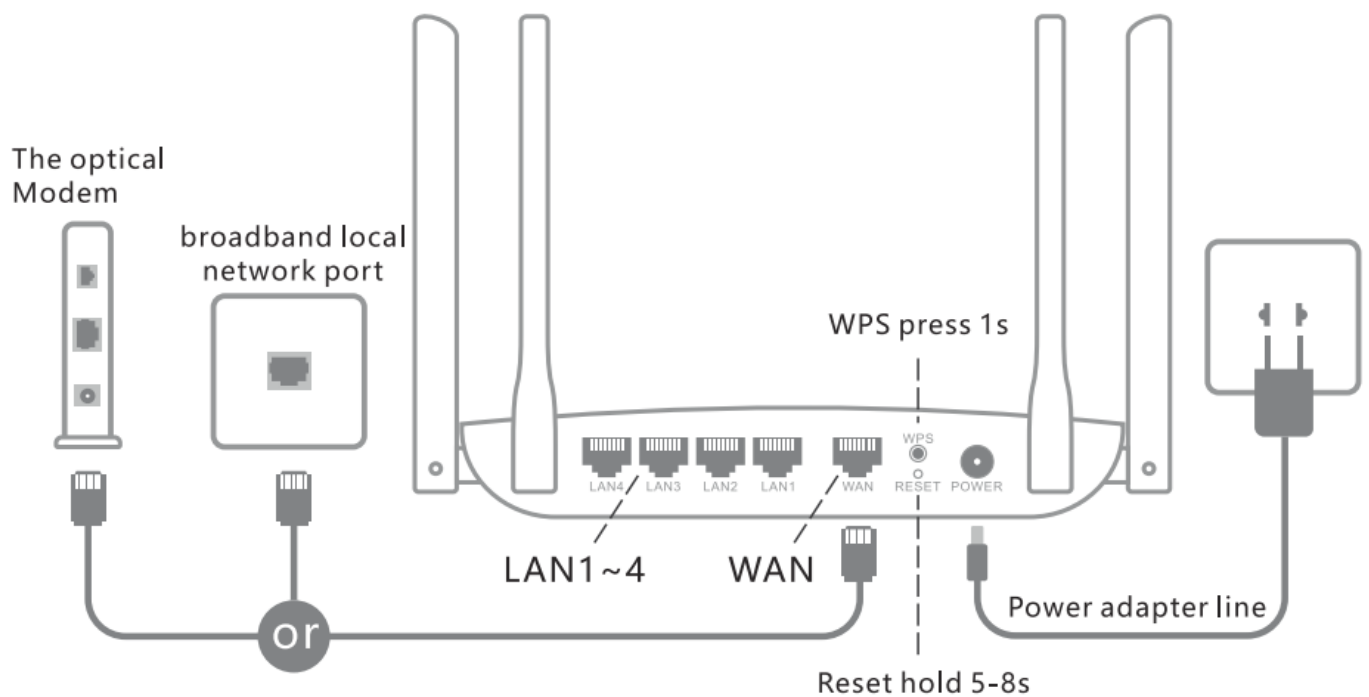

Router Setup

Note: The default access mode is: "Router Mode (DHCP) ", if you want to switch to another mode, click "Change Mode – Easy Setup". "Router Mode" and "WISP Mode" are used as examples.

Router Mode(PPPOE)

Mobile config wireless router

1. You can use mobile phone to connect wireless signal, wireless name is Redline-XX.XX



Note: If you use PC to config wireless router, please reference setup 2

2. You can access web type “192.168.16.1” into config main page.

Default use account password: admin printed on the label at the bottom of the router.

http://192.168.16.1 



User admin 

Password

 [Forgot password](#)



3. Click the "WAN Setup~ and fill in your Account and Password provided by your ISP, Click "Save.



WAN Info



WAN Setup



Wi-Fi Setup

Dual Frequency Switch ☐

2.4GHz

Wi-Fi Name(SSID)

Redline-7600

Password

5GHz

Wi-Fi Name(SSID)

Redline-7600-5G

Password

Save

Note:

Home network please choice one from PPPOE and DHCP

A.ONU access please provide account from ISP

B. Router access please choice DHCP mode

4. Create a Network Name (SSID) and Password for your Wireless Network, Click Save.

Dual Frequency Switch ☐

2.4GHz

Wi-Fi Name(SSID)

Redline-7600

Password

5GHz

Wi-Fi Name(SSID)

Redline-7600-5G

 
Password

Save

Your router is already set up here, wait about 1 minute, please reconnect your WiFi name.

Access Point Mode

In this mode, the router transforms your existing wired network to a wireless one.

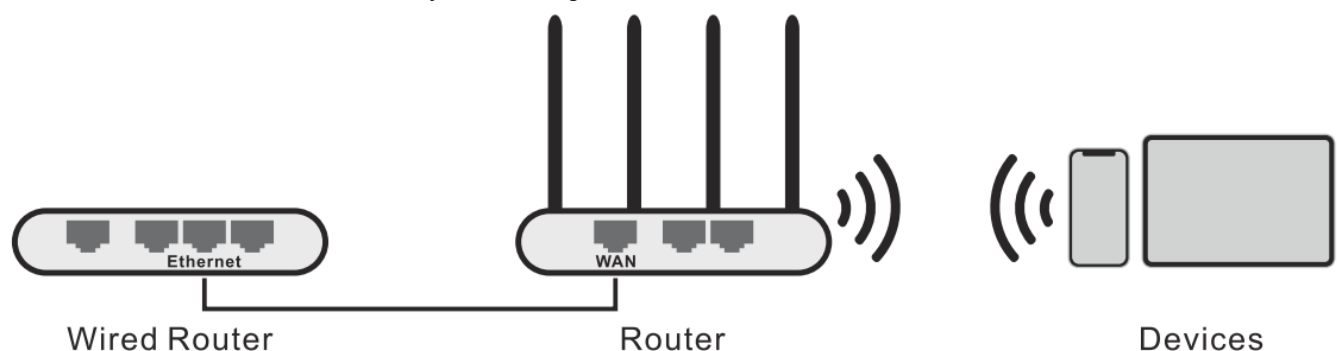

- Power on the router.
- Connect the router's WAN port to your wired router's Ethernet port via an Ethernet cable as shown above.
- Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name)
- Launch a local IP and enter 192.168.16.1 in the address bar and default user account password: admin printed on the label at the bottom of the router.

- Click Next to start the Easy Setup. Select Access Point and follow the step-by-step instructions of the Easy Setup to set up the internet connection.

Enjoy the internet!

Note: Using this AP Mode, this router IP address is synchronized to the address of the superior router .

WISP Mode

In this mode, the router boosts the existing wireless coverage in your home.

Configure


- Place the router next to your host router and power it on.
- Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name)
- Launch a web browser and enter 192.168.16.1 in the address bar and default use account password: admin printed on the label at the bottom of the router.
- Click Next to start the Quick Setup. Select Range Extender and follow the step-by-step instructions to set up the internet connection.

Relocate

Place the router about halfway between your host router and the Wi-Fi “dead” zone. The location you choose must be within the range of your existing host network.



Public Wi-Fi

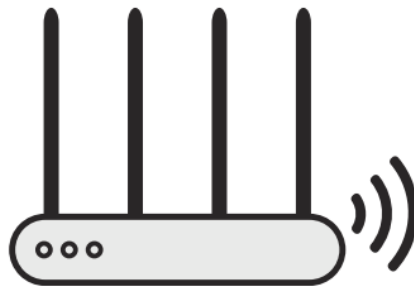

Router



Devices

Enjoy the internet!

Support

DTS Electronics SAN. Tic. LTD. STi.

RED LINE is the registered trademark of DTS Electronics SAN. TIC. LTD. STI. All the products and product names mentioned herein are the trademarks or registered trademarks of their respective holders C 2002 REDLINE All Rights Reserved.

<http://redline.com.tr/>

Documents / Resources



[REDLINE RL-WR3400 Wireless Router](#) [pdf] Installation Guide

RL-WR3400 Wireless Router, RL-WR3400, RL-WR3400 Router, Wireless Router, Router

References

-  [Home - Redline](#)

Manuals+.