




REDMOND ST032 2 Slice Retro Toaster User Manual

[Home](#) » [REDMOND](#) » REDMOND ST032 2 Slice Retro Toaster User Manual 

REDMOND

USER MANUAL
TOASTER – 2 SLICE

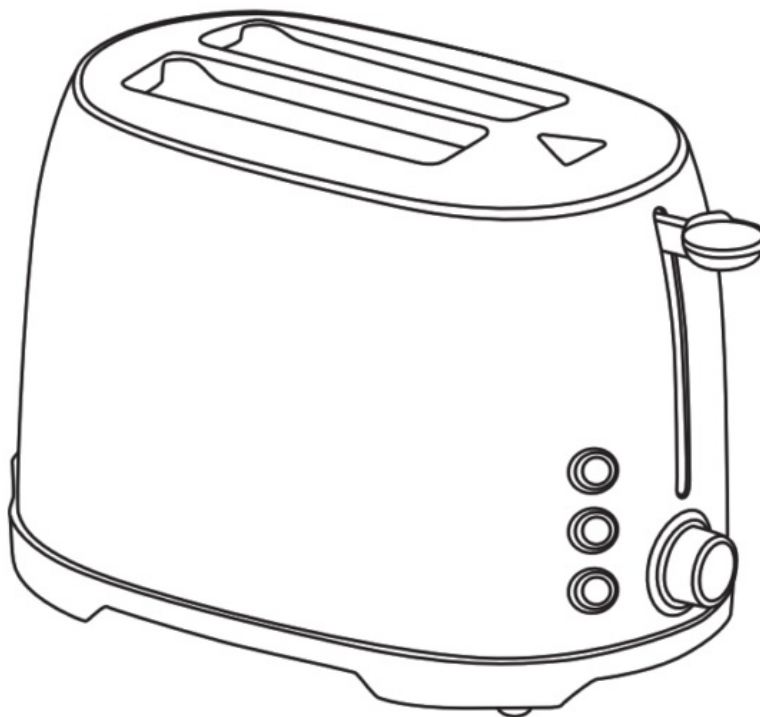

ST032 NA MODEL NO.: TA1729C-UL

Read this booklet thoroughly before using it and save it for future reference

Contents

- [1 IMPORTANT SAFEGUARD](#)
- [2 SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY](#)
- [3 PRODUCT INTRODUCTION](#)
- [4 FOR THE FIRST USE](#)
- [5 OPERATION](#)
- [6 CAUTION](#)
- [7 CLEANING AND MAINTENANCE:](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

IMPORTANT SAFEGUARD

When using electrical appliances basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Unplug the unit from the outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for anything other than its intended use.
11. Do not use outdoors.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
14. Oversize food, metal foil packages, or utensils must not be inserted into the toaster as they may cause fire or electric shock.
15. Bread may burn; therefore, toasters must not be used near or below curtains and other combustible materials.
16. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
17. Don't attempt to dislodge food when toaster is plugged in.
18. Be sure to take the bread out carefully after toasting so as to avoid injuries.
19. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
20. **WARNING-To** prevents electrical shock, unplug before cleaning.
21. Do not operate unattended.
22. When heating toaster pastries, always use the lightest toast color setting.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Notes on the cord plug


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plugin anyway.

Notes on the cord

- a) A short power-supply cord (or detached power-supply cord) is provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- b) Longer detachable cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used.

- I. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, and.
- II. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- III. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

PRODUCT INTRODUCTION

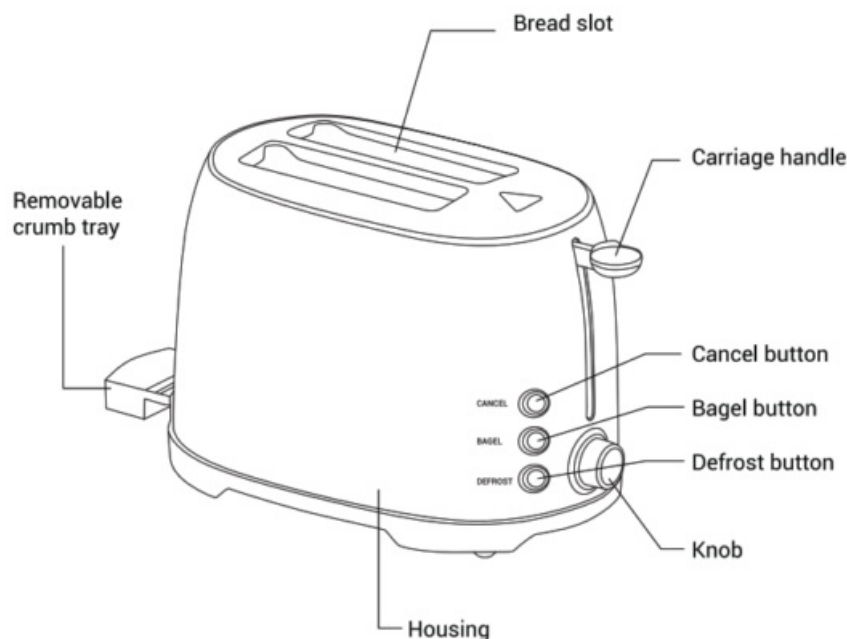

FOR THE FIRST USE

As there is manufacturing residue or oil remaining in the toaster or heating element, it usually emits an odor for the first use. It is normal and will not occur after continuous use. Before toasting the first slice of bread it is strongly suggested to operate the appliance following the below instructions, except without bread.

OPERATION

1. Put bread slices into the bread slot, two slices at most every time. Only regular-sized bread slices can be placed into the bread slot.
Note: Make sure the crumb tray is in place before using.
2. Plug the power cord into the outlet.
3. Set the toasting color by turning the color control knob to your desired color. There are 7-level settings (1, 2, 3,

4, 5, 6, and 7), and the default setting is 4. Turn clockwise to increase the color level, and turn anticlockwise to decrease color level. The bread slice can be toasted to a golden color at a medium setting.

Note 1) Toasting color for one side of a slice may be darker than the other when toasting two slices at a time.
2) When toasting continuously, the toasting color of later slices may be darker than previous as the heating coils will already be warm.

4. Press the carriage handle down vertically until it is positioned in place, the Cancel indicator will be illuminated, and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up.

Note: ©The carriage handle can only be latched when the appliance connects to the power supply. ED During the toasted process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the Cancel button at any time.

Note: CD The carriage handle can only be latched when the appliance is connected to a power supply. ® During the toasting process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the Cancel button at any time.

5. If the bread has been taken out from the refrigerator. Set the color control knob to your desired color. Press the carriage handle down vertically until it is positioned in place, then press the Defrost button and the De-frost indicator will be illuminated. In this mode, it will be toasted to your desired color.
6. If you only want to toast one side of the bread slice. Press the carriage to handle down vertically until it is positioned in place, set the color control knob to your desired color, then press the Bagel button and the indicator will be illuminated (it should be noted that only the Bagel button will have the indicator, the Cancel button will not display the indicator). In this mode, the heating elements in the middle sides will be heated. But the heating elements in the outer sides will not be heated. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up.

CAUTION

1. Remove all protective wrapping prior to toasting.
2. If the toaster starts to smoke, Press Cancel to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular-sized bread slices.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning.
2. Wipe the outside with a soft dry cloth after the toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of the toaster and empty it. If the toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or in storage, the power cord may be wound under the bottom of the toaster.

Documents / Resources

REDMOND
USER MANUAL
TOASTER - 2 SLICE



REDMOND
MODEL NO. ST032-02
Read this booklet thoroughly before using your product for the first time.

[REDMOND ST032 2 Slice Retro Toaster](#) [pdf] User Manual
ST032 2 Slice Retro Toaster, ST032, 2 Slice Retro Toaster