



# REELCRAFT PW7600 Series Spring Driven Hose Reels User Manual

[Home](#) » [REELCRAFT](#) » REELCRAFT PW7600 Series Spring Driven Hose Reels User Manual 



Operating Instructions  
Series PW7000 Spring Driven Hose Reels  
High Pressure Wash Model Numbers:  
PW7600 OHP PW7650 OHP




## Contents

- [1 IMPORTANT](#)
- [2 Dimensions](#)
- [3 SAFETY](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [MOUNTING](#)
- [5 SERVICE INSTRUCTIONS](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

## IMPORTANT

Read this manual carefully before installing, operating or servicing this equipment.

## Dimensions

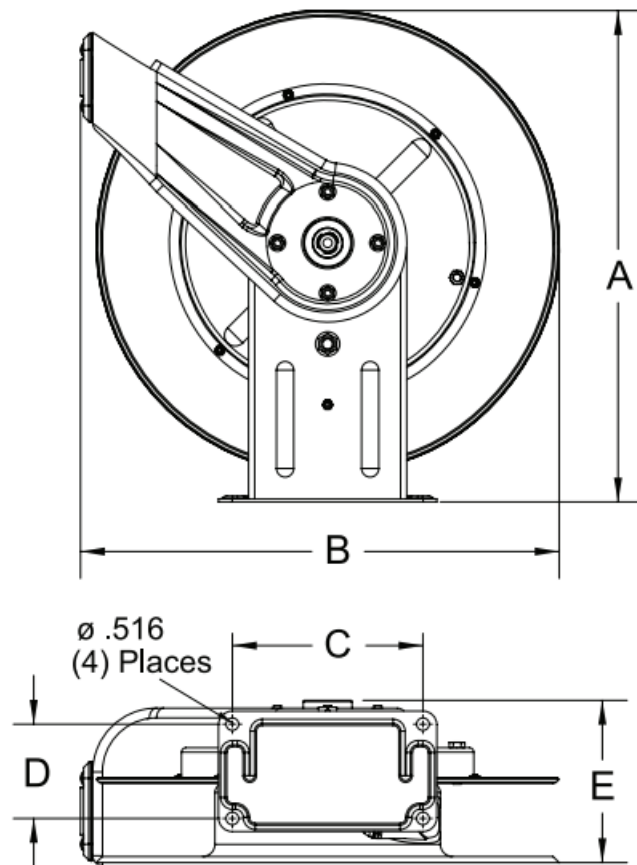

A	20 1/4"
B	19 3/4"
C	7 7/8"
D	3 7/8"
E	7 3/8"

## SAFETY

Personal injury and/or equipment damage may result if proper safety precautions are not observed.

- Ensure that reel is properly installed before connecting input and output hoses.
- Bleed fluid/gas pressure from system before servicing reel.
- Before connecting reel to supply line, ensure that pressure does not exceed maximum working pressure rating of reel.
- Remember, even low pressure is very dangerous and can cause personal injury or death.
- Be aware of machinery and personnel in work area.
- If a leak occurs in the hose or reel, remove system pressure immediately.
- A high tension spring assembly is contained within the reel.  
Exercise extreme caution.
- Pull hose from reel by grasping the hose itself, not the control valve.
- Ensure that reel, hose, and equipment being serviced are properly grounded. Use an ohmmeter to check ground continuity.
- If reel ceases to unwind or rewind, remove system pressure immediately. Do not pull or jerk on hose!

- Treat and respect the hose reel as any other piece of machinery, observing all common safety practices.

## INSTALLATION INSTRUCTIONS MOUNTING

**Caution:** Unless reel was specified differently when ordering, maximum installation height is 16 feet. Do not exceed this distance.

1. Unpack and inspect reel for damage. Turn by hand to check for smooth operation. Check for completeness.
2. Configure reel for top, side or bottom-wind hose dispensing by removing nuts (1) securing guide arm bracket (2). Position guide arm bracket to desired location, and replace nuts.

**Caution:** When changing guide arm positions, the U-bolt must be placed in the proper location as instructed in figure A below. The reel can “latch out” during use if this instruction is not adhered to.

3. Position reel on floor, wall, or ceiling. Secure into place using four (customer supplied) bolts (3).

## INSTALLING THE INPUT HOSE(S)

**Warning:** Ensure that supply line pressure does not exceed maximum working pressure rating of reel. Apply pipe thread sealant to all threads.

**Caution:** Use flexible hose connection at input. Do not use rigid plumbing.

1. Connect supply line hose (4) to main shaft input (5) as indicated in illustration.

## INSTALLING THE OUTPUT HOSE(S)

**Warning:** Use extreme caution; reel under tension. Avoid releasing latch mechanism. Apply pipe thread sealant to all threads.

1. Manually turn sheave (10) until spring is tight, back off 3 turns, then latch.
2. Route output hose(s) (11) through guide arm bracket (2), U-bolts (12), then through cutout (13) in spool as indicated in illustration.
3. Connect output hose(s) (11) to swivel (14) as indicated in illustration.
4. Tighten U-bolts (12).
5. Charge hose(s). Momentarily open control valve to purge hose(s) of gases. When fluid appears at control valve, close valve. With hose(s) fully charged, release latch and wind output hose(s) onto reel.

## ADJUSTMENTS

**Warning:** Use extreme caution; reel under tension. Avoid releasing latch mechanism. If necessary, adjust spring tension on reel by adding or removing wraps of hose from spool, one wrap at a time, until desired tension is obtained. Add wraps to increase tension. Remove wraps to decrease tension.

## SERVICE INSTRUCTIONS

User servicing of the reel is limited to replacing input/output hoses only. Refer all other repairs to an authorized service person or directly to Reelcraft. Failure to do so can result in personal injury and/or equipment damage and may void the warranty.

**Warning:** Rewind hose on reel, then bleed pressure from system before performing the following procedures.


1. Replace hoses in accordance with procedures given in “Installation Instructions” section of this manual.

**Caution:** When replacing drive spring, hold the center of the spring down as the hub is pulled out. If the center



is allowed to raise up, the spring may escape from it's container with enough force to cause injuries.

When disposing of old or broken spring assemblies, the coils should be welded or wired together to prevent possible injury to scrap handling personnel.

2. All mating moving parts are to be lubricated with Perma Bond or Loctite anti-seize compound.

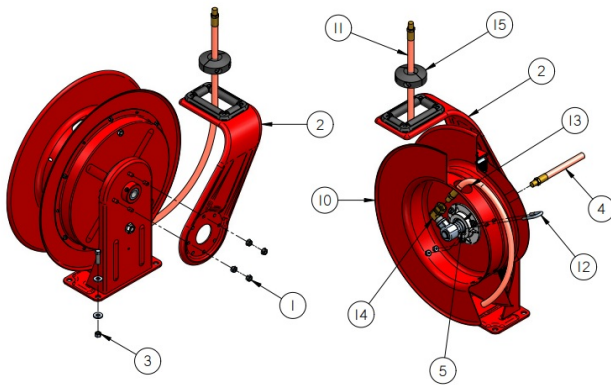

**Figure A**

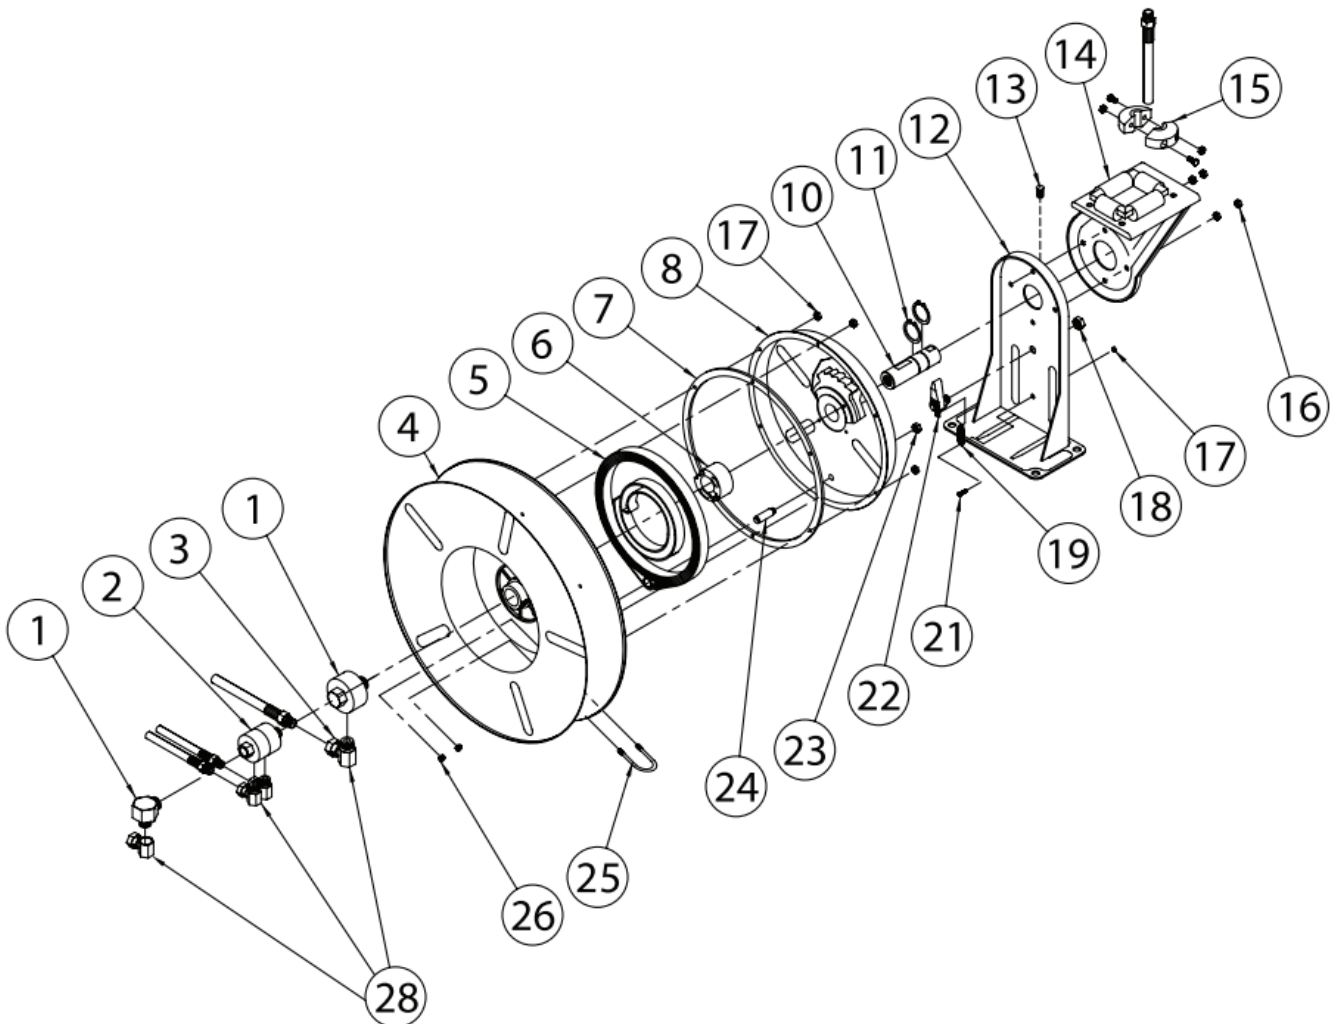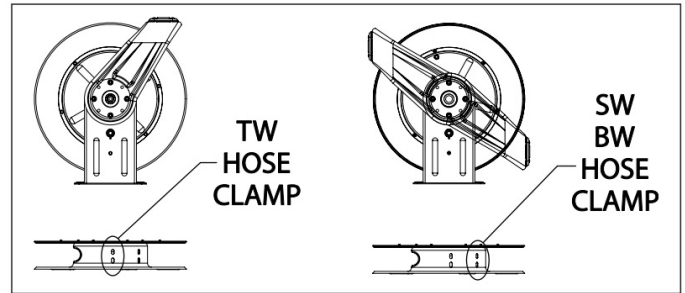


Rem#	Description	# Req.	PW7600 OHP	PW7650 OHP
1	Swivel Assembly	1	S602033	S602033
3	90° Ell	1	None	None
4	Sheave Assembly	1	S260011	S260011
5	Drive Spring Assembly	1	S260053	S260053
6	Spring Arbor Assembly	1	S600621	S600621
7	Gasket	1	S260069	S260069
8	Spring Case Assembly	1	S260074	S260074
10	Main Shaft	1	S260095	S260095
11	1 1/4" Snap Ring	2	300007	300007
12	Base Assembly	1	S600016	S600016
13	1/2-13 Set Screw	1	S35-84	S35-84
14	Guide arm with Rollers	1	S600017	S600017
15	Bumper Stop Assembly	1	None	S602452
16	5/16-18 Locknut	4	300107	300107
17	10-32 x 3/8" Nyloc Nut	7	S82-15	S82-15
18	1/2-20 x 5/8" Hex Nut	1	S280-8	S280-8
19	Latch Spring	1	S260067-1	S260067-1
21	10-32 Shoulder Screw	1	S393-2	S393-2
22	Latch Pawl Assembly	1	S600018	S600018
23	3/8-24 Jam Nut	1	S76-106	S76-106
24	Spring Case Stud	1	S260031	S260031
25	U-bolt	1	3-117440	3-117440
26	1/4-20 x 3/8" Locknut	2	261650-1	261650-1
28	Swivel Union	1	S257-72	S257-72
Hose As sembly			None	S5-260044
Hose I.D . x Lengt h			None	3/8" x 50'
Reel Inl et Conn ection			1/2" (F)NPTF	1/2" (F)NPTF
Max. Operating Pressure			5000 PSI	4800 PSI
Max. Operating Temperature			400 °F	400 °F



[www.reelcraft.com](http://www.reelcraft.com)

## Documents / Resources

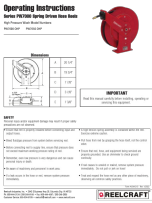

[REELCRAFT PW7600 Series Spring Driven Hose Reels](#) [pdf] User Manual  
PW7600 Series Spring Driven Hose Reels, PW7600 Series, Spring Driven Hose Reels, Driven Hose Reels, Hose Reels

## References

- [REELCRAFT Industries - Hose, Cord, and Cable Reels](#)

Manuals+