



Reemix KS-501 Power Juicer Owner's Manual

[Home](#) » [Reemix](#) » Reemix KS-501 Power Juicer Owner's Manual 

Reemix

POWER JUICER
Owner's Manual



Model KS-501
Wattage 500W
Voltage 220-240V

Contents

1 PARTS AND FEATURES

2 ASSEMBLING JUICER MACHINE

3 OPERATION

4 HOW TO DISASSEMBLE

5 CLEAN AND CARE

6 SPEED SELECTOR FROM

7 Documents / Resources


7.1 References

PARTS AND FEATURES




WARNING:

If the stainless steel filter basket is damaged, don't use it and contact our customer service team to get new replacement.

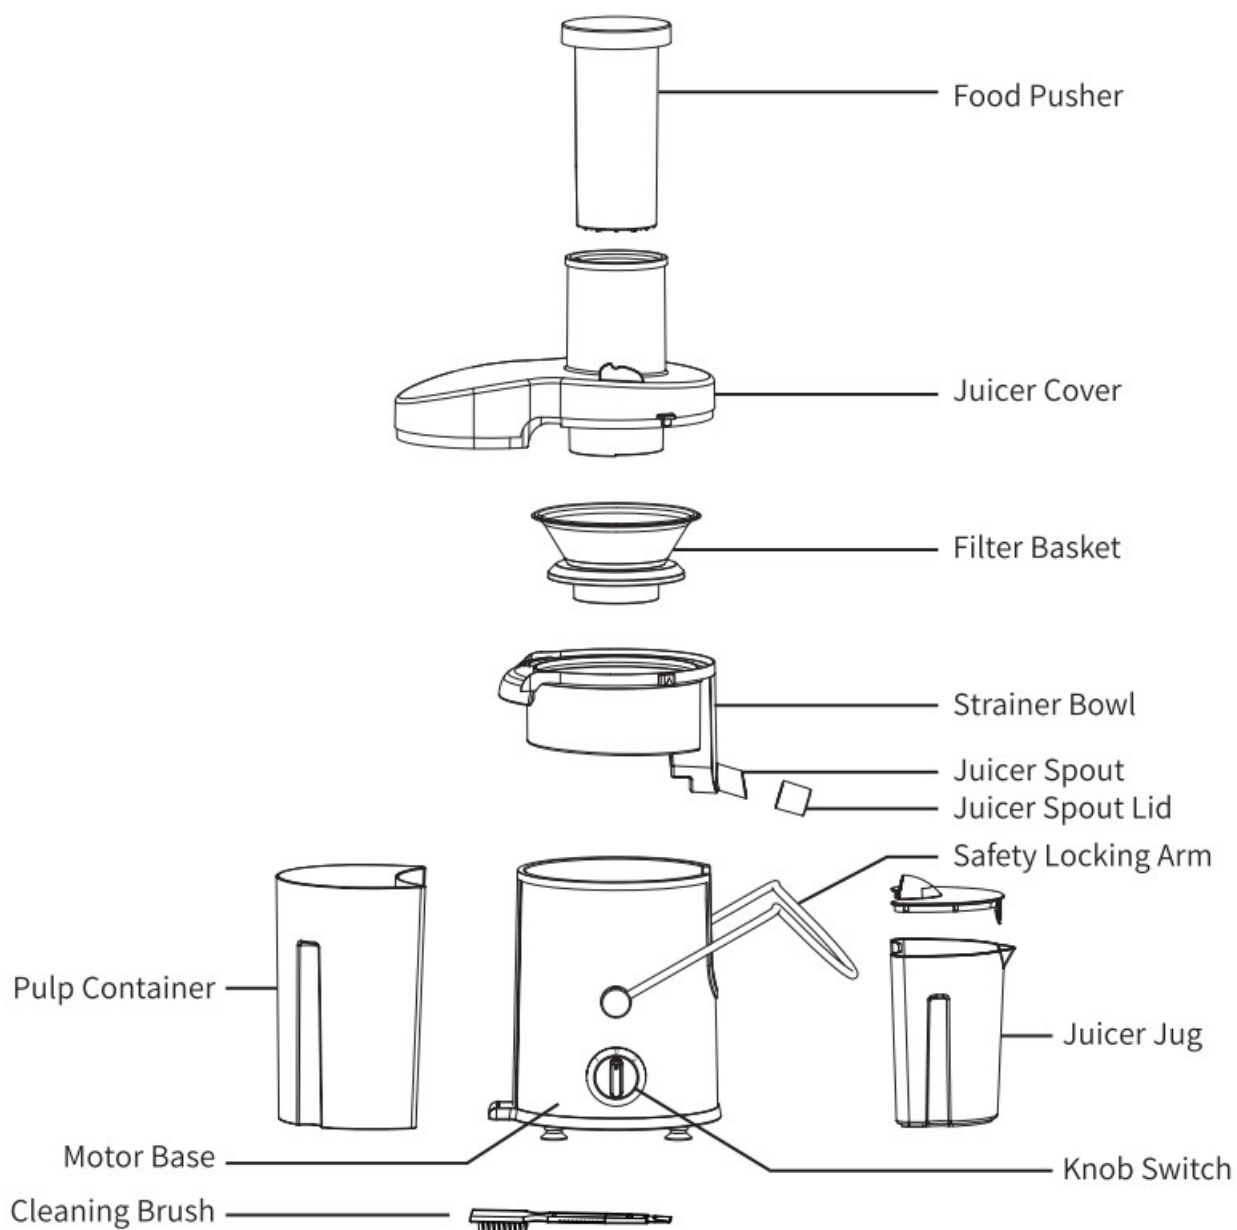


ASSEMBLING JUICER MACHINE


Step 1: Place strainer bowl on top of the motor base.

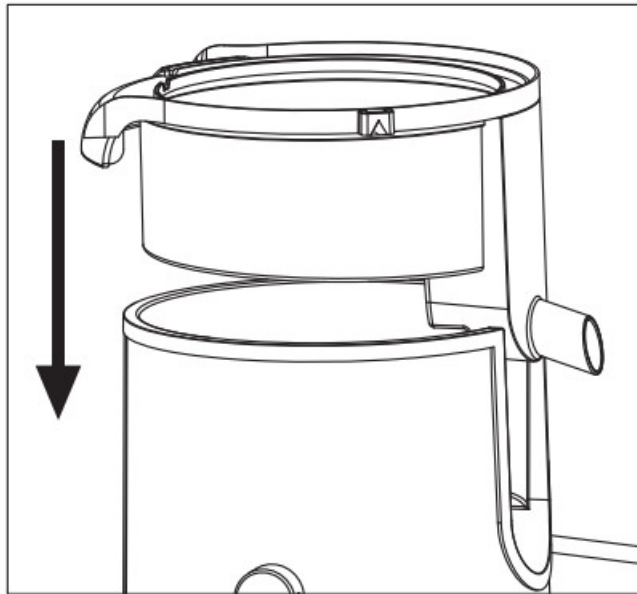


Step 2: Place filter basket on strainer bowl and press it down firmly to latch into position.

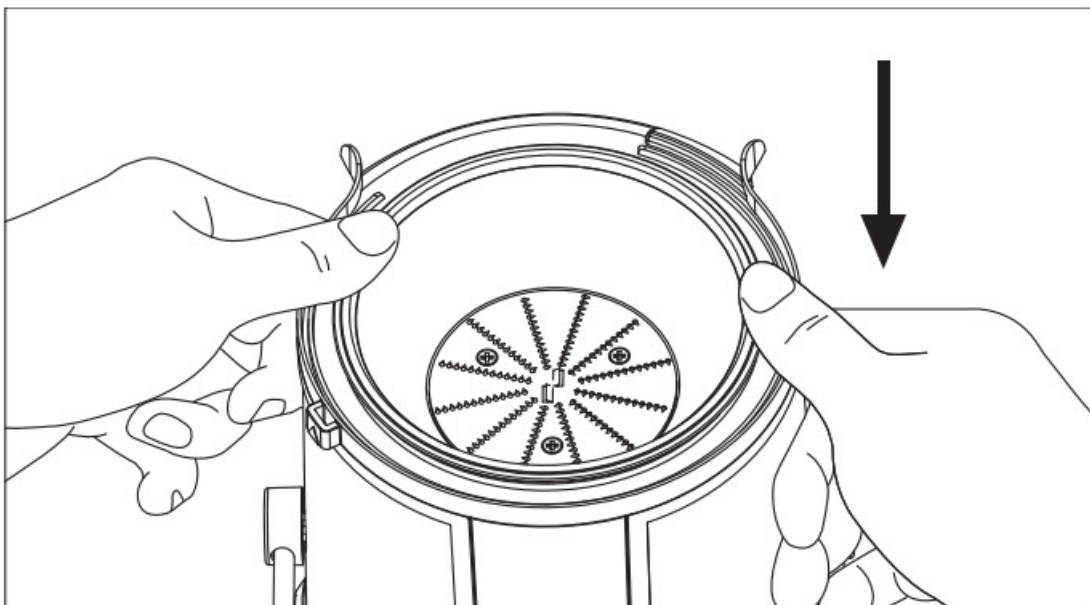


Step 3: Place the pulp container into position by tilting the motor base slightly to the right.

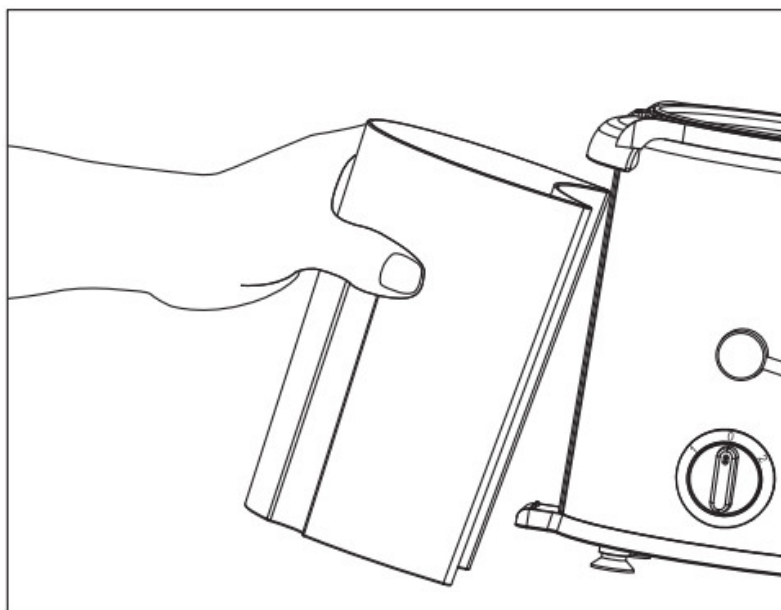


Step 4: Place the juicer cover over the strainer bowl surround, positioning the feed chute over the filter basket and lower into position.

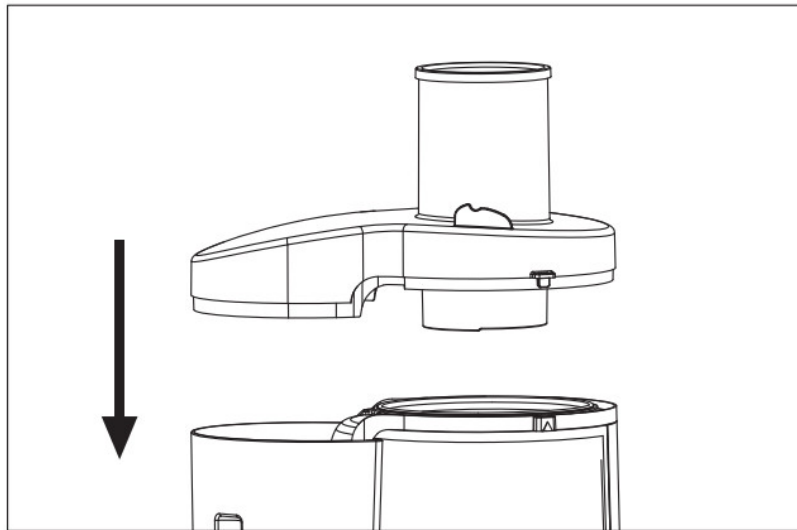

Step 5: Raise the safety locking arm up and locate into the two grooves on either side of the juice cover.

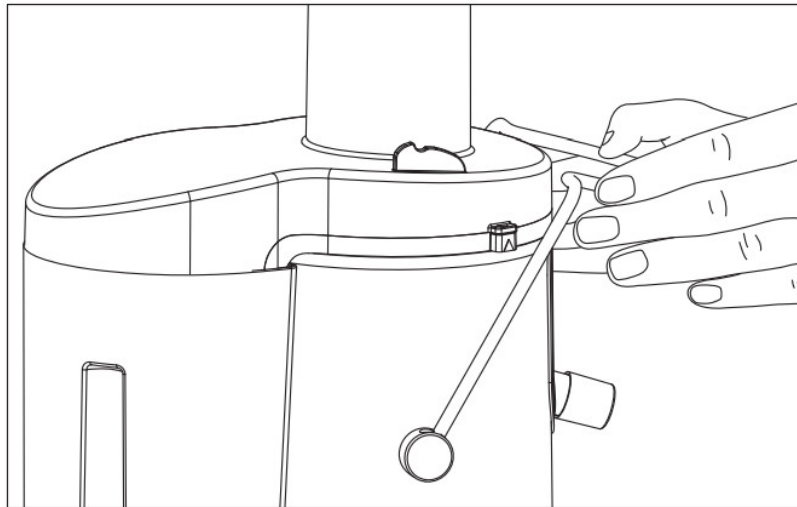


The safety locking arm should now be in a vertical position and locked into place on top of the juice **cover**.

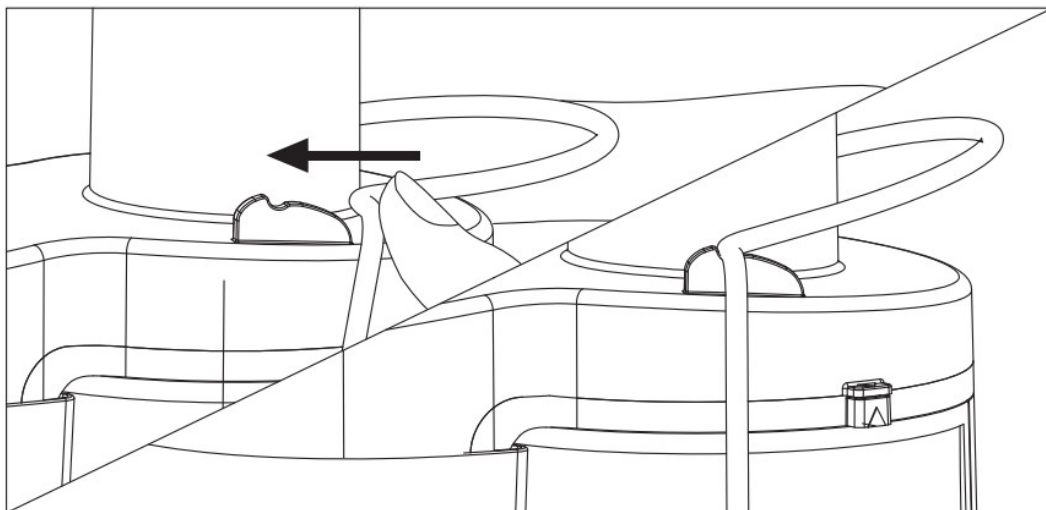


Note: Juicer machine will power on only when the safety locking arm is security locked.

Step 6: Slide the food pusher down on the feed chute.

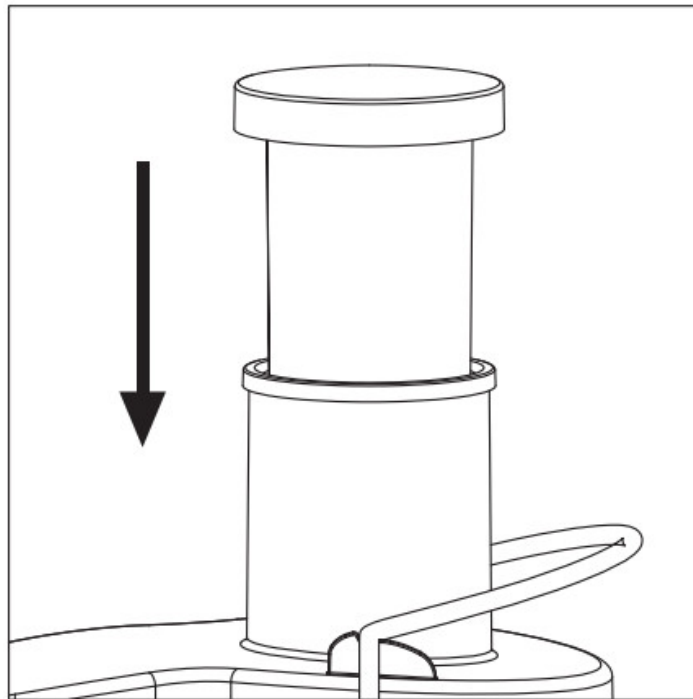

Step 7: Place juicer jug under spout

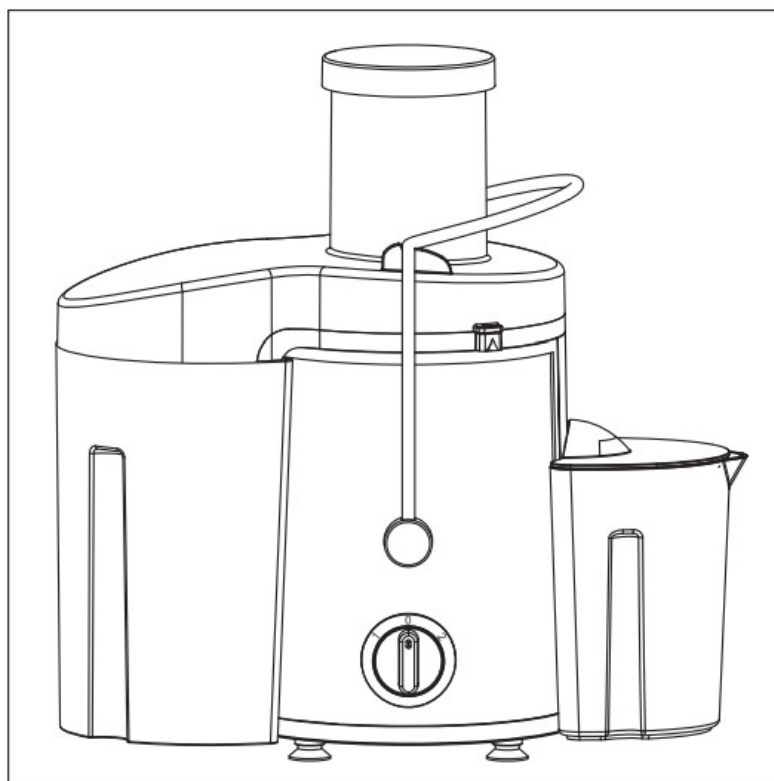

OPERATION

1. Before use, please wash fruits and vegetables.

Tips:

A. Most fruit and vegetables such as carrots and cucumbers will not need to be cut or trimmed to size as these will fit whole into the feed chute. Ensure vegetables such as beets, carrots etc. have all soil removed, are well washed and trimmed of leaves before using.

B. All fruits with pits and large seeds such as peaches, apricots, plums, and cherries **MUST** be pitted before juicing.

2. Check if the juicer machine is correctly assembled. Please refer to ASSEMBLING JUICER MACHINE
3. Make sure the knob switch is on "0" position, then plug the power cord into outlet.

4. Turn the knob switch to “1” for low speed or “2” for high speed. Put fruits and vegetables in the feed chute.
(Please see SPEED SELECTOR FORM on the page 10)

⚠ Notice: This machine is equipped with overload protection. If the juicer is overheated, it will stop working.
Please unplug and let the juicer cool down for 15 minutes.

To avoid this problem happening, don't operate the machine continuously for more than 5 minutes.



5. After using, turn knob switch to “0” and unplug the power cord.




Tips: If the pulp container is full during juicing, you can turn knob control to “0” and empty it. Remember to replace pulp container before continuing to juice.

HOW TO DISASSEMBLE


1. Turn knob switch to “0” and release safety locking arm.

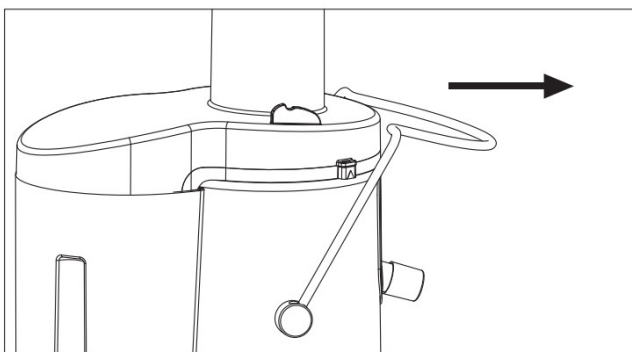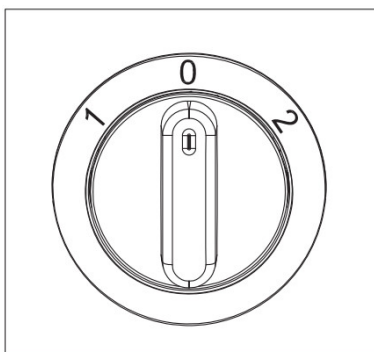


2. Lift the juicer cover.

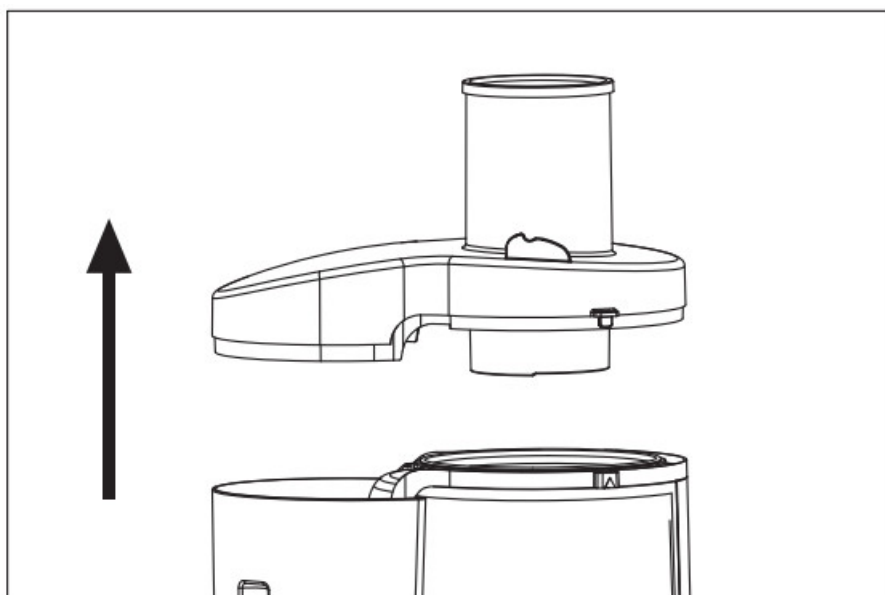


3. Remove the pulp container by sliding away from motor base.

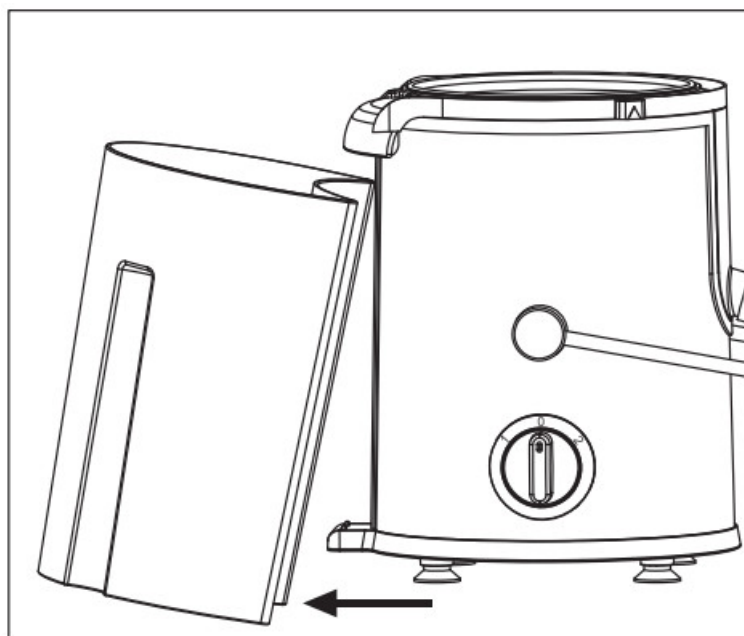

4. Lift off the strainer bowl with the strainer basket still in place.

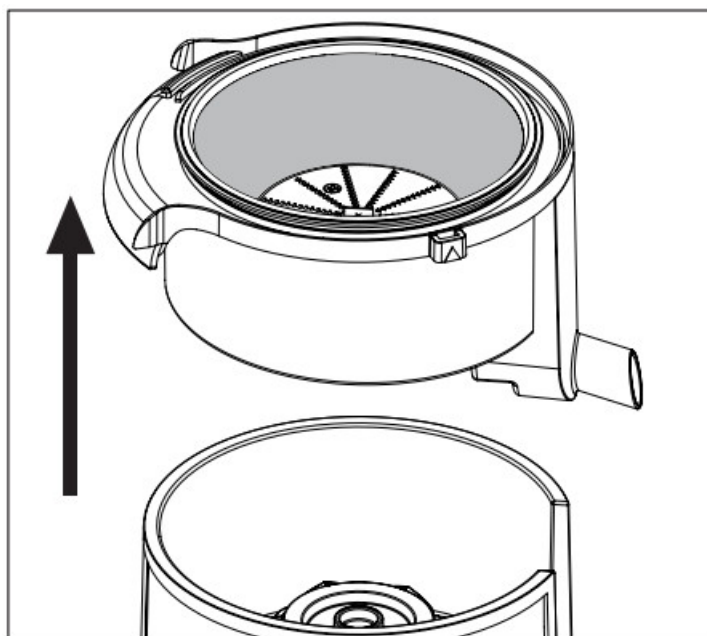


5. turn the strainer bowl upside down and remove the strainer basket.

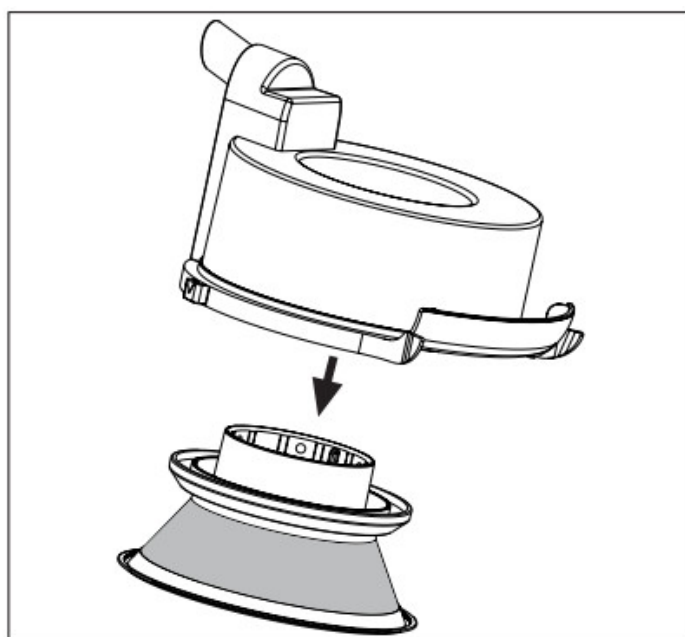

CLEAN AND CARE

1. Always unplug power cord and let the appliance to cool down before cleaning.
2. **Notice:** The stainless steel filter basket contains small sharp blades to cut and process fruit and vegetables. Avoid touching the blades when handling the filter basket.

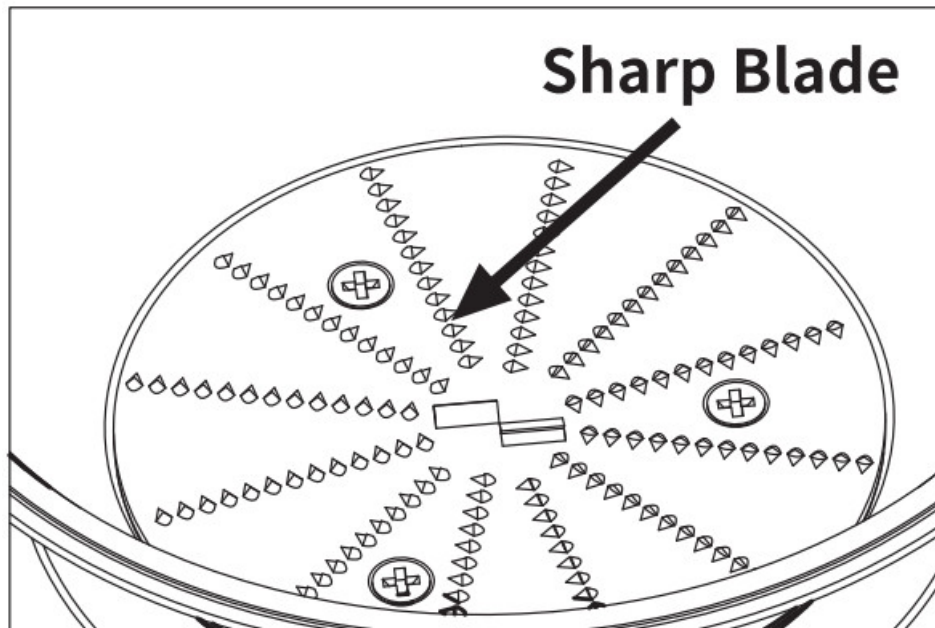

3. Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
4. To avoid risk of electric shock, DO NOT immerse the motor base in water or any other liquid.
5. The motor base can be wiped with damp and lint-free cloth.
6. The pulp container, strainer bowl, juicer cover, food pusher and juice jug can be cleaned with hot water and mild detergent.
7. The filter should be cleaned each time after use, using a soft nylon brush. Do not clean the filter with any hard object. Always treat the filter basket with care as it can be easily damaged.
8. These parts are not dish-washer safe.
9. Cleaning of the pulp container is greatly facilitated if small garbage bag is inserted in the container before use.

Warning

| | |
|---|--|
| ⚠ | Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely. |
| ⚠ | To avoid the risk of electric shock, do not clean the drive unit with water and do not immerse it in water. |
| ⚠ | For detailed information on cleaning the appliance, please refer to the section 'Cleaning and care'. |
| ⚠ | The filter has sharp points. To prevent injuries, always exercise extreme caution when emptying it. |
| ⚠ | Do not operate the appliance if the rotating filter shows any kind of damage. |
| ⚠ | Always remove the plug from the wall socket: – before assembling or disassembling the appliance. – after use, – in case of any malfunction, – before opening the lid – when there is no supervision, – before cleaning the appliance. |
| ⚠ | Any misuse can cause severe personal injury. |
| ⚠ | The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved. |
| ⚠ | Children are not be permitted to operate the appliance. The appliance and its power cord must be kept well away from children. |
| ⚠ | Children are not be permitted to play with the appliance. |
| ⚠ | Keep any packaging materials well away from children – these materials are a potential source of danger, e.g. of suffocation. |
| ⚠ | Every time the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, or if excessive force has been used to pull the power cord, it must no longer be used: even unseeable visible damage may have adverse effects on the operational safety of the appliance. |
| ⚠ | Do not leave the appliance unattended while connected. |
| ⚠ | For safety reasons, use the feeding rod at all times when feeding fruit or vegetables into the feeder tube. Under no circumstances use your hands or fingers. |
| ⚠ | After switching off, always wait until the motor has come to a complete stand still before opening the lid |
| ⚠ | Do not allow the appliance or its power cord to touch hot surfaces or to come into contact with any heat sources |
| ⚠ | When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself. Do not let the power cord hang free. |
| ⚠ | No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with. |
| | This appliance is intended for domestic or similar applications, such as – in shops, offices and other similar working environments, – in agricultural working environments. – by customers in hotels, motels etc. and similar establishments. – in bed-and breakfast type environments. |

| TROUBLESHOOTING | | |
|---|--|---|
| PROBLEM | POSSIBLE CAUSES | EASY SOLUTION |
| Machine will not work when switched on | 1.Safety locking arm may not be correctly engaged. 2.Machine works too long | 1.Check if the safety locking arm are properly positioned in the two grooves on either side of the juice cover. Please refer to page 3, Steps 5 . 2.Turn off the machine and let it cool down for 15 minutes. Please refer to page 5, step 4 |
| Machine stop working during juicing | Machine works too long | Turn off the machine and let it cool down for 15 minutes. Please refer to page 5, step 4 |
| Pomace blockage | Pulp container is full | Turn off the machine and clean the pulp container. Use suggestion: Clean the pulp container after juicing 4.4 pounds ingredients. |
| Juicer cover scrape by blade | 1. Filter basket isn't installed properly | 1. Place filter basket on strainer bowl and press it down firmly to latch into position. |
| | 2. Push the food pusher down | 2. Push the food pusher down |
| If you have any other question of our product, please contact us via support@reemixvip.com . | | |

SPEED SELECTOR FROM

| Vegetable | |
|------------------|-------|
| Ingredient | Speed |
| Beets | 2 |
| Broccoli | 1 |
| Brussels Sprouts | 2 |
| Cabbage | 1 |
| Carrots | 2 |
| Cauliflower | 1 |
| Celery | 2 |
| Cucumber | 2 |
| Fennel | 2 |
| Tomatoes | 2 |
| Wheatgrass | 2 |

| Fruits | |
|-------------|-------|
| Ingredient | Speed |
| Apple | 2 |
| Apricots | 1 |
| Blueberries | 1 |
| Cantaloupe | 2 |
| Grapes | 1 |
| Kiwi Fruit | 2 |
| Mangoes | 2 |
| Oranges | 2 |
| Peaches | 2 |
| Pears | 1 |
| Pineapple | 2 |
| Plums | 1 |
| Raspberries | 1 |
| Watermelon | 1 |
| Cranberry | 2 |



VISHTEC UK Co.,Ltd
 275 ISLINGTON SUITE 1405
 NEW NORTH ROAD LONDON
 ENGLAND N1 7AA
 Email: Vincent.feng@vish-tec.com



SCHEUFER Technologies GmbH
 Hertleinstrasse 37, 91052, Erlangen, Germany Email: ec-rep@scheufer.com




<https://www.facebook.com/Reemix.Official>

Manufacturer: ShaoXing Kesai Electric Co.,Ltd
 Address: Room 501 5th Floor, Building 1, West of Yue Xiu Road , Yue Cheng District , ShaoXing
 Facebook Page: <https://www.facebook.com/Reemix.Official>



Documents / Resources
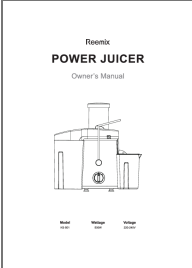
| | |
|--|--|
|  | <p>Reemix KS-501 Power Juicer [pdf] Owner's Manual KS-501 Power Juicer, KS-501, Power Juicer, Juicer</p> |
|--|--|

References

- [User Manual](#)