

reflecta
reflecta x44-Scan Slide
Scanner and Negative
Scanner



reflecta x44-Scan Slide Scanner and Negative Scanner User Manual

[Home](#) » [reflecta](#) » reflecta x44-Scan Slide Scanner and Negative Scanner User Manual 

Contents

- [1 reflecta x44-Scan Slide Scanner and Negative Scanner](#)
- [2 Product Usage Instructions](#)
- [3 Product diagram](#)
- [4 Loading mounted slides](#)
- [5 OPERATION GUIDE](#)
- [6 Main menu settings](#)
- [7 Adjusting the framing](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

reflecta[®]

reflecta x44-Scan Slide Scanner and Negative Scanner



Specifications

- Maximum SD Card Capacity: 128GB
- Resolution Options: 16 MP, 18 MP (for film type 126), 24 MP
- Languages Supported: English, French, German, Italian, Spanish

Product Usage Instructions

Loading Mounted Slides

1. Open the slide holder at the marked spot on the top.
2. Place the slide into the recessed area in the holder ensuring it fits perfectly.
3. Close the slide holder and press the edges to lock it in place.
4. Blow off dust using compressed air.
5. Insert the slide holder into the slot on the right side of the scanner.

Loading Film Strips

1. Open the film strip holder at the marked spot on the top.
2. Place the film strip into the holder ensuring notches line up correctly.
3. Ensure the shiny side of the film strip is facing upwards.
4. Close the film strip holder and press the edges to lock it in place.
5. Insert the film strip holder into the slot on the right side of the scanner.

Operation Guide

1. **SD card:** Insert an SD card (max. 128GB) with golden contacts facing upwards. Start the scanner by pressing the power button.
2. **Language Selection:** Navigate to Language in the main menu, choose your preferred language between English, French, German, Italian, or Spanish.

3. **Image Resolution Setting:** Select resolution between 16 MP and 24 MP. For film type 126, resolution is automatically set to 18 MP.
4. **Main Menu Settings:** Options include Film Selection, Resolution Setting, Scan Mode, Play Mode, and SD Card Formatting.
5. **Film Type Selection:** Choose between SLIDE (color positive), COLOR NEGATIVE, and BLACK & WHITE (negative). Adjust for different film types like Instamatic with setting 126.

Frequently Asked Questions (FAQ)

- **Q: Can I clean the equipment with organic solvents?**
 - A: No, do not use organic solvents such as alcohol, benzene, or thinner to clean the equipment. Use a cleaning brush provided or compressed air for proper maintenance.
- **Q: What should I do if the product emits smoke or odour?**
 - A: If the product emits smoke, odour, or any abnormalities, stop using it immediately and disconnect the power supply. Contact customer support for further assistance.
- **Q: How do I select different languages on the scanner?**
 - A: In the main menu mode, navigate to Language using the arrow buttons and select your preferred language between English, French, German, Italian, or Spanish by pressing OK.

x44-Scan User's Manual

Preface

Thank you for purchasing this product! Please read this instruction manual carefully before using this product.

Attention and maintenance

- Do not attempt to disassemble or modify any part of the machine.
- After the product has been dropped or other damage occurred, do not touch the inside of the scanner to avoid injury. If the product emits smoke, odour or other abnormalities, stop using it immediately.
- Do not use organic solvents such as alcohol, benzene or thinner to clean the equipment.
- Do not work in wet or dusty areas.
- Please use film strips and mounted slides that meets the standard sizes.
- Please confirm the cleanliness of the machine before use.
- When the product is not in use for a long time, remove the power supply.

Check the contents of the package



Scanner



holder for film strips



holder for mounted slides



USB cable



 
power adapter



cleaning brush



Product diagram

1. LCD Monitor
2. Power button
3. Left button / mirror
4. SCAN button
5. Right button / flip
6. Enter button
7. HOME button (will always bring you back to the main interface)
8. USB-C port
9. SD card socket

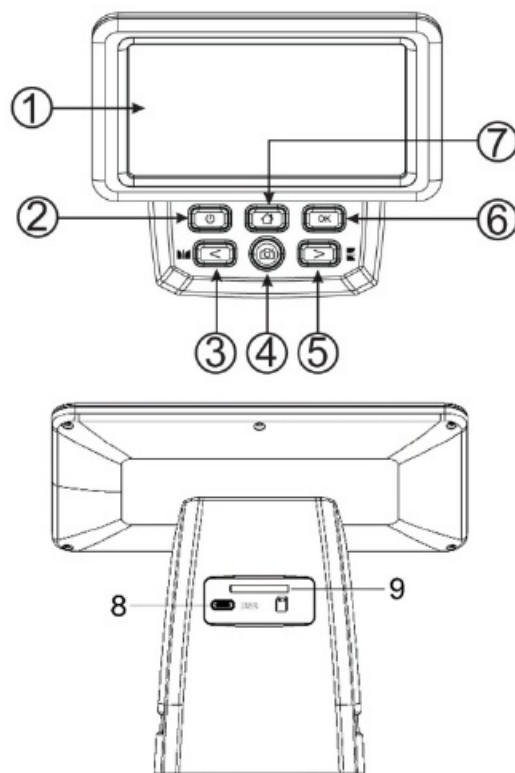

Loading mounted slides

  - Open the slide holder at the marked spot on the top.
- With the slide holder laid open place the slide into recessed area in the holder- the slide should fit perfectly.
- Close the slide holder and press the edges so that it locks in place.
- It is recommended to blow off dust by using compressed air.
- Insert the slide holder into the slot on the right side of the scanner.

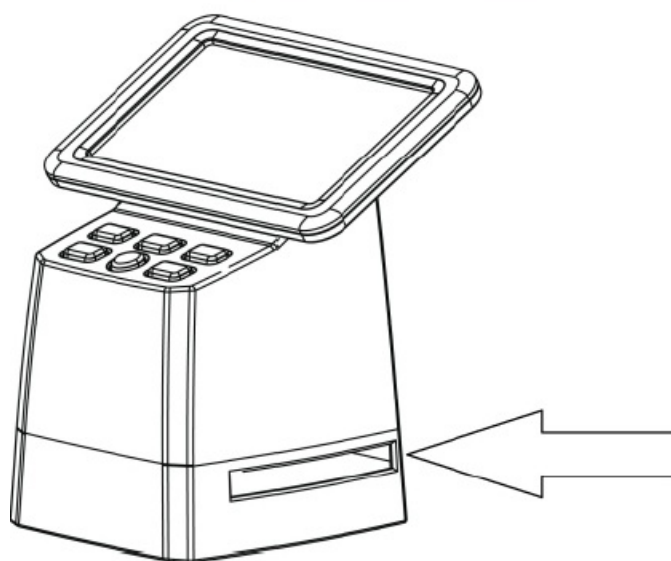
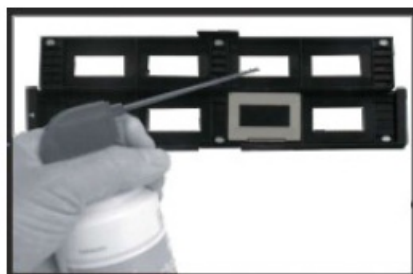


Loading film strips

- Open the film strip holder at the marked spot on the top.
- With the film strip holder laid open place the film strip into holder so the notches line up with the notches on the holder. Make sure that the film strip's shiny side is facing upwards.

Note: Handle film strips with care. Any dust, scratches or fingerprints will show up on your saved images. If possible use cotton gloves when handling film strip.

  - Close the slide holder and press the edges so that it locks in place.
- Insert the slide holder into the slot on the right side of the scanner.

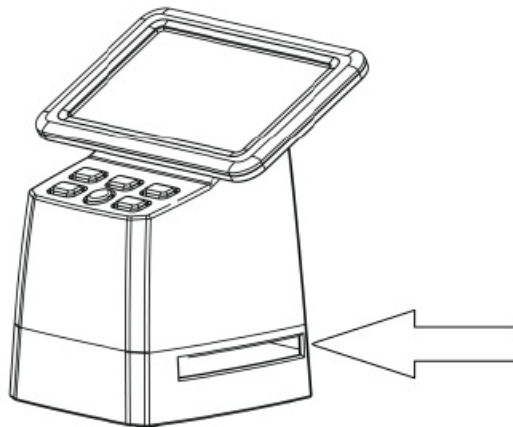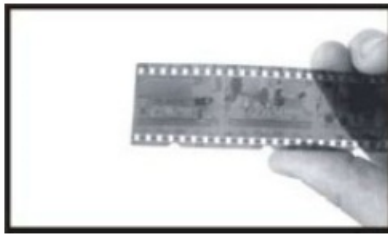

OPERATION GUIDE

SD card

- Insert an SD card (max. 128GB) into the card slot on the back.
- The golden contacts of the card must be facing upwards!
- Start the scanner by pressing the on/off button (2).

Language selection

Press < or > button in the main menu mode to select „Language“.

Press “OK” then use < or > buttons to choose your preferred language between English, French, German, Italian or Spanish. Confirm by pressing “OK”.


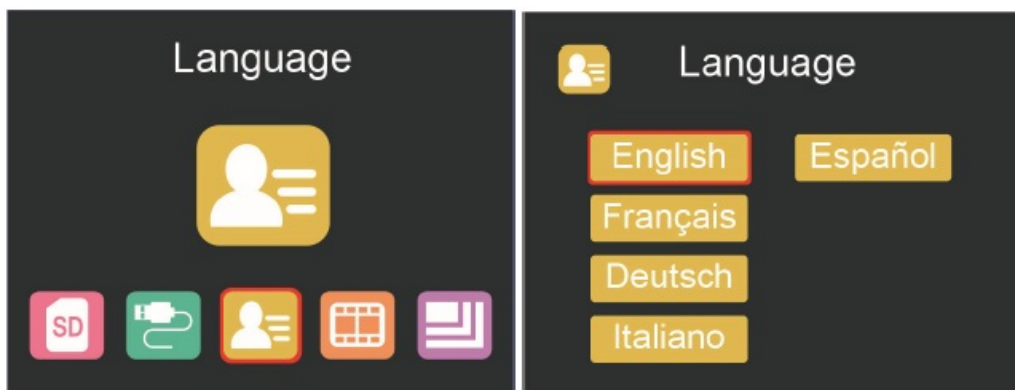 


Image resolution setting

 


- Press < or > button in the main menu mode to select
- Press “OK” then use < or > buttons to choose between 16 MP and 24 MP.

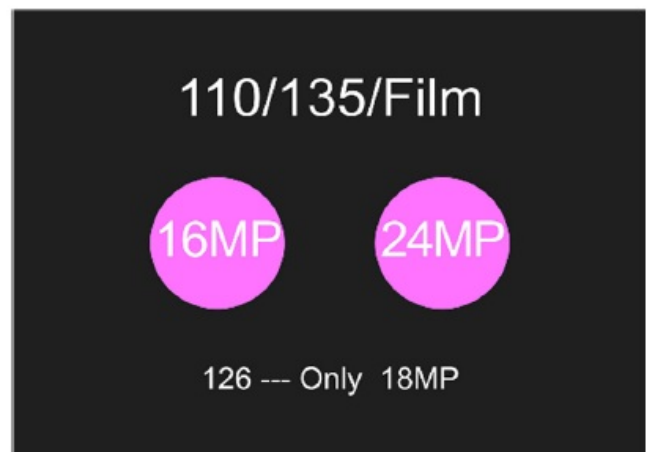

When film type 126 was selected, resolution will be automatically set to 18 MP.

Main menu settings

 1.

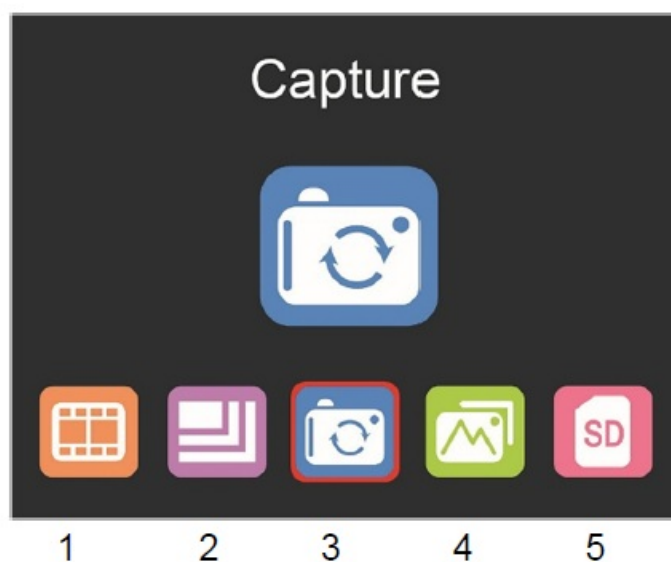

Film selection

2. Resolution setting
3. Scan mode
4. Play mode
5. SD card formatting

Film type selection



Press < or > button in the main menu mode to select

Choose between

- SLIDE (color positive)
- COLOR NEGATIVE
- BLACK & WHITE (negative)

Type 135 film will be pre-selected by default (standard 35mm film with 24 x 36 mm image area).

For scanning 'Instamatic' type film (28 x 28mm) use setting "126".

- The SCAN button (camera symbol) only has the function of previewing and saving images.
- The HOME button (house symbol) is just a single function to return to the main interface.

Scanning images

Please check if the scanner's backlight is clean before starting to scanning.

- If the backlight is dirty, please clean it using the velvet brush that comes with the scanner by inserting it into the scanner's film holder slit with the velvet side facing down.
- After confirming that the backlight is clean, press the "OK" button or the SCAN button in the main menu to enter the scan mode.
- Press the SCAN button in the scan mode to save the current image.
- In the SCAN mode, if you press the left button '<' before scanning, the current image will be mirrored; press the right button '>' to flip the current image up and down.
- Press OK to enter the EV and RGB menu for exposure control and color correction.



- Use < or > button to select, then press 'OK' to confirm.
- The selected settings bar will be displayed on the preview image. Set your desired value for Brightness, Red, Green, or Blue and confirm by pressing 'OK'
- Select the RESET option to return to the default values.

Adjusting the framing

Select the sub-menu "Framing" in the main menu and confirm with OK. Insert a slide or negative into the scanner as a reference. Now select between "X" (horizontal), "Y" (vertical) and "Ratio" (zoom) using the arrow buttons. Press OK to activate the setting option, which you make using the arrow buttons. Evaluate the image framing on the background image and confirm the set value by pressing OK. (The font color changes to yellow).



Gallery mode



- Press < or > button in the main menu mode to select
- Press "OK", to enter the automatic slide show mode, alternatively press "OK" again to enter the manual display mode for your scanned images. In this mode please use < or > buttons to navigate.

 


Formatting SD card

The scanner can support SD cards with a capacity of up to 128 GB. All cards must be formatted according to the FAT32 standard. You can format your card by using the scanner in the following way



Press < or > button in the main menu mode to select

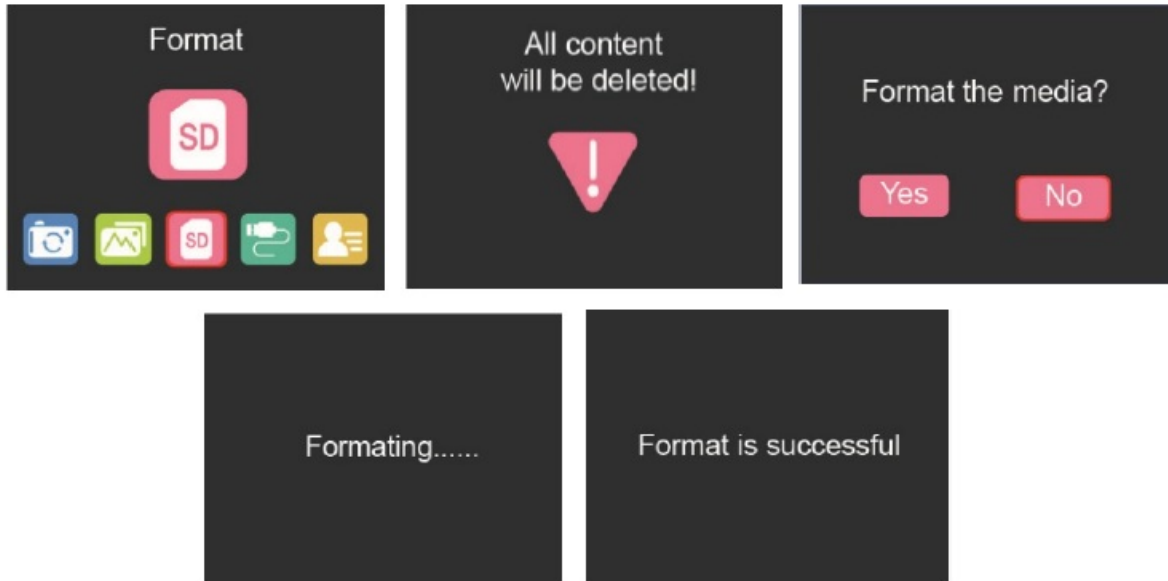


USB upload

Connect the scanner to a computer using the enclosed USB cable.



Press < or > button in the main menu mode to select

 Press 'OK' and the scanner will appear as a mass storage device on your PC. You can then copy the scanned images to your hard disk to get a higher data security.

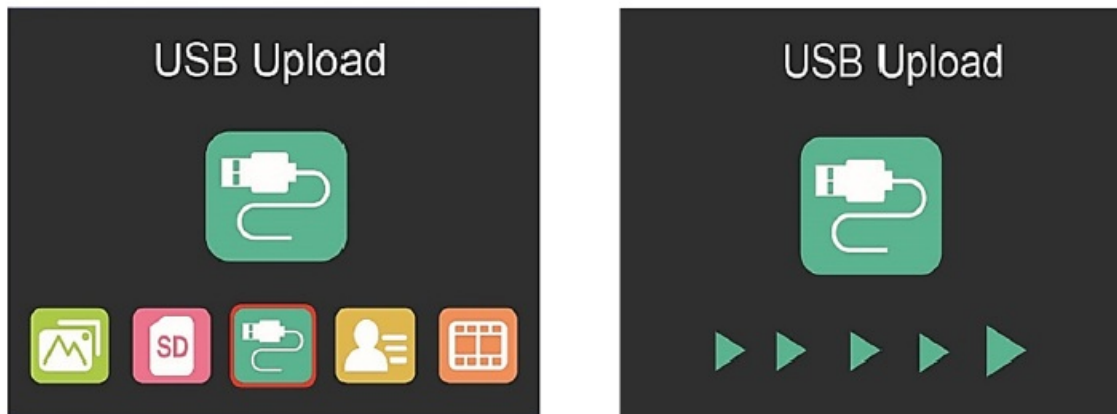


This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.



- reflecta GmbH Merkurstraße 8 72184 Eutingen
- Germany
- www.reflecta.de

Documents / Resources

	<p>reflecta x44-Scan Slide Scanner and Negative Scanner [pdf] User Manual 3322978, 4920 x 3280, x44-Scan Slide Scanner and Negative Scanner, x44-Scan, Slide Scanner and Negative Scanner, Negative Scanner, Scanner</p>
---	---

References

-  [reflecta® gmbh Germany](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.