




REFLEX ACTIVE RA01-2001 Series 01 Activity Tracker Smart Watch User Guide

[Home](#) » [REFLEX ACTIVE](#) » REFLEX ACTIVE RA01-2001 Series 01 Activity Tracker Smart Watch User Guide 

REFLEX ACTIVE

series 01 – getting started



TOUCH BUTTON

Contents

- 1 HOW TO CHARGE
- 2 OPERATION INTRODUCTION
- 3 COMPATIBILITY
- 4 GETTING TO KNOW THE SCREENS
- 5 SPECIFICATIONS
- 6 BAND ADJUSTMENT
- 7 HOW TO CARE FOR YOUR SMARTWATCH
- 8 GUARANTEE
- 9 PRIVACY POLICY
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

HOW TO CHARGE

1. Remove the tracker from the band by pressing gently from the back whilst holding the band securely.
2. Insert into the charging cradle with the touch button facing forward.
3. Once the power charger is plugged in, the band will be activated automatically.
4. Please charge the band when it displays low battery.
5. A 2-hour charge time is sufficient to fully charge your smartwatch, please do not exceed a 2-hour charge period.

OPERATION INTRODUCTION

- You can twist your wrist or press the touch key to illuminate the screen.
 - Press the touch key to switch main menu interface.
 - Long press the touch key to confirm actions.
 - To switch off the watch, press the touch key repeatedly until the “more” icon shows on the display and then long press to enter in “Power off”, long press the touch key again.
- You can set the gesture control style on the REFLEX ACTIVE App. within advanced settings. Twisting your wrist will illuminate the screen.

DOWNLOADING THE REFLEX ACTIVE App.



https://play.google.com/store/apps/details?id=com.ooplayer.reflexactive&hl=en_GB&gl=US



<https://apps.apple.com/us/app/reflexactive/id1487278250>

To download our app, search for REFLEX ACTIVE App.
or scan the appropriate QR code for installation. Use your smartphone camera or QR code reader app.

COMPATIBILITY

The REFLEX ACTIVE app will work on the following smartphones:

- Android (version 4.4 and above)
- Apple IOS (version 8.0 and above)

Please ensure the app is the latest version and has Bluetooth 5.0

CONNECTING BAND TO MOBILE PHONE





 


 


1. Enable Bluetooth on your smartphone.
2. Open the REFLEX ACTIVE App. on your smartphone.
3. Review and accept the privacy policy.
4. Set your profile following the steps presented.
5. Set your goals following the steps presented.
6. To connect your watch, tap the green icon & select your watch from the list.
7. Tap OK to allow notifications to appear on your smartwatch.



Visit our SUPPORT section to view our video guide.

DISCONNECTING YOUR SMART WATCH & PHONE



1. Open the REFLEX ACTIVE App. on your smartphone.
2. Tap disconnect device in Settings.
3. Forget your device on your smartphone's Bluetooth settings.

GETTING TO KNOW THE SCREENS

	TIME SCREEN There are 6 different time screens to select from, press & hold touch key to select the one you prefer.
	MESSAGES Press the touch button to switch to the message interface. Press the touch button to enter the message view. The smartwatch will alert you to incoming calls, SMS, Wechat and Whatsapp message notifications.
	ABOUT Long press the touch button, you can check your band's address, device name and system version.
	KEEP ACTIVE From advanced settings within the App. you can set reminders to ensure you stay active throughout the day.
	ALARMS & ALERTS From the reminder at the bottom of the home screen of the App., you can add additional reminders such as wake-up alarms, medication alerts etc.
	SLEEP From settings & goals you can set a sleep target. Access your sleep data via today at the bottom of the home screen of the App.
	WEATHER After connecting with the REFLEX ACTIVE app, you can select city in the advanced settings of the app. and the weather of this city will be displayed on your smartwatch.
	FIND YOUR PHONE OR SMARTWATCH Once the smartwatch is connected to the App., the find phone feature will be available. Access via sub-menu and then more. Long press the touch key and your phone will sound a locator alarm. To find your tracker from your phone, select find the device from the settings menu.
	MORE Long press the touch button to enter the function menu. There is an About, Power Off & Find Your Phone option.
	DRINK ALERTS From advanced setting within the App. you can set reminders to ensure you stay hydrated throughout the day.

	CAMERA CONTROL Once connected to the App., access the photo feature via settings. By selecting 'take photo', you can take a photo on your phone by pressing the touch button on your band. It will automatically save to your phone on Android devices, or the option to save/retake on iOS devices.
	STEP COUNTER The band will record your daily activity automatically. Press the touch key to switch between steps, calories & distance.
	SPORTS Long press the touch screen button to enter more exercise functions. There are four sports options: • Walk • Running • Cycling • Climbing

You can choose the mode you need, after your activity, the band will record your sports data. After your exercise, press the touch screen to stop & save your movement. If the activity lasts less than one minute, the data will not record. From settings & goals in your App. you can set activity goals.

 	POWER OFF Long press the touch button to turn off your band.
	RESET Long press the touch key, your watch will be reset and restart.

Please note: Your REFLEX ACTIVE tracker will reset every day at midnight. Data is stored on the tracker for 7 days. For best results, ensuring activities and a full history are recorded, we recommend you sync your tracker to the App. daily

SPECIFICATIONS

RAM/ROM	32k/512k
LCD Screen Size	0.96" One touch
Bluetooth	BT5.0
Call Reminder	Yes
Notification	Yes
Multi-Sport	Hiking, Walking, Running, Cycling
Battery	Built-in rechargeable lithium battery
Battery Capacity	90mAH
Bluetooth Connected	Up to 4 days
Standby Time	Up to 10 days
Charge Time	2 hours
Water Resistant	NO
Heart Rate	NO
Operating Frequency	2402-2480 Mhz

BAND ADJUSTMENT


Your REFLEX ACTIVE bracelet or mesh band can be easily adjusted, please follow these instructions to achieve the perfect fit.

BRACELET – Watches with removable links are a quick & easy way of being able to shorten bracelets. Lift the tab at the end of the centre section on both clasps and remove link. Only applicable to watches with bracelet bands.



MESH BRACELET – Unlock the clamp by using the appropriate tool. Move the entire clasp to adjust the length by sliding along the bracelet.

Adjust the length while wearing the watch to make sure you get a good fit. Make sure the clasp locates into a moulded indent on the back of the bracelet. Lock the clamp plate in position by pressing it into place using your thumb. DO NOT use the retaining bar to gain leverage as this will cause damage preventing the clasp to lock.

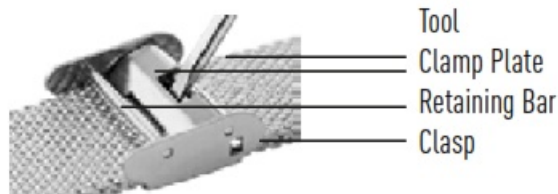

HOW TO CARE FOR YOUR SMARTWATCH

Do not wear your smartwatch whilst applying sprays or creams. Do not allow contact with any corrosive agent e.g. paint, solvents or adhesives, as this may affect the finish of the smartwatch. Your smartwatch is not suitable for swimming or showers. Do not immerse in water. Do not try to replace or disassemble the battery.

STRAP CARE

Environmental conditions can affect the durability of your strap. Please treat it with care and limit exposure to direct heat or sunlight. Keep your watch dry and away from wet surfaces. Do not use chemical cleaners on your strap and avoid contact with cosmetic products, such as fake tan or perfumes. Light soiling can be cleaned using a weak soapy water solution on a barely damp soft cloth. Please be aware light coloured straps i.e. whites, creams and pastel colours, are prone to attract colour transfer from other surface materials and cosmetic substances. Please take care whilst wearing these products as discolouration of straps is not covered within the guarantee.

SILICONE STRAP CARE

To keep your silicone strap looking good, clean it regularly with mild soap and water to remove any dirt, oils, lotions etc., ensuring the case of your smartwatch does not get wet. When you are not wearing your smartwatch, we recommend you store it in the gift box received with the purchase.

STEP COUNTER

Smartwatches use multiaxis inertial sensors called accelerometers. These detect wrist movement in order to measure steps. However, some wrist actions whilst standing or sitting can mimic the arm movement of a step and can therefore falsely record steps. The step count recorded each day should be used as a guide only.

GUARANTEE

Quality and style are at the heart of what we do. REFLEX ACTIVE certifies this smartwatch is produced using premium materials and is fully tested before leaving our manufacturing centre.

Your timepiece is guaranteed against any defective parts and construction for 2 years from the date of purchase. Your guarantee is only valid if you present your original receipt when returning the item. This guarantee provides you with rights in addition to your consumer statutory rights and therefore does not limit your statutory rights. Please note this guarantee does not cover lenses, bands, straps or bracelets, water penetration or batteries. Additionally, breakages caused by accident or maltreatment are not covered.

All products should be returned to: PH Services, Precision House, Unit 4, Starley Way, Solihull, B37 7GN.

Please contact us before sending in your product and we'll guide you through the process.

PRIVACY POLICY

Please check www.reflex-active.com/pages/privacy-policy to view our privacy policy. Please remember to

check for updates periodically.

IMPORTANT SAFETY INFORMATION- BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!

BATTERY WARNINGS

Do not attempt to replace the battery, open the device enclosure or disassemble your REFLEX ACTIVE product. Doing so can result in a safety hazard

- The integrated rechargeable battery cannot be removed or replaced
 - Substances within the REFLEX ACTIVE smartwatch battery may harm the environment or cause injury if handled or disposed of improperly. In the unlikely event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek IMMEDIATE medical attention
 - When the battery is fully charged disconnect from the charger, and DO NOT exceed 2 hours of charge time.
- DEVICE WARNINGS – This is a Class A product. In a domestic environment, this product may cause radio interference. In this case the user may be required to take adequate measures
- Ensure your smartwatch correctly engages with the charging contacts
 - Before each use, please check the product for damage, do not use if the product is damaged
 - This is not a toy, children should not play with this product
 - Never attempt to open your smartwatch, this may result in danger
 - Protect the product from strong impacts, vibrations, direct sunlight and dirt
 - Do not place heavy objects on the product
 - Do not exert pressure on the product
 - Avoid strong magnetic fields e.g. loudspeakers
 - Salt and thermal water can lead to the corrosion of metal parts. Remove the product before using saunas as the temperature difference can cause condensation
 - Do not operate the product near heat sources e.g. radiators or other devices emitting heat. Do not cover the product during operation or charging
 - Never use the product on aeroplanes, in hospitals, service rooms, or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics
 - Do not use your REFLEX ACTIVE product if the display is cracked
 - Do not expose your REFLEX ACTIVE product to extremely high or low temperatures
 - Do not use abrasive cleaners to clean your REFLEX ACTIVE product
 - Remove your REFLEX ACTIVE product immediately if it feels warm or hot
 - Do not attempt to wear or operate your REFLEX ACTIVE product whilst charging
 - Do not charge your REFLEX ACTIVE product if wet
 - Do not check notifications or other applications on the product display while driving or in other situations where distractions could be hazardous. Always be aware of your surroundings when using REFLEX ACTIVE products and services
 - Ensure your smartwatch is removed at regular intervals for gentle cleaning.

HEALTH WARNINGS – REFLEX ACTIVE smartwatches contain components that emit electromagnetic fields, with some of the models containing a magnetic charging dock, please be aware that these models contain magnets. These electromagnetic fields and magnets may interfere with medical devices, such as pacemakers and implanted defibrillators. Please consult your doctor and medical device manufacturer if you use any medical device before using a REFLEX ACTIVE smartwatch

- The REFLEX ACTIVE heart rate monitor is designed for recreational use only, it is not intended for any medical use such as diagnosing or monitoring any medical conditions
- The REFLEX ACTIVE heart rate monitor periodically emits flashing lights, please consult your doctor before use if you have epilepsy or similar conditions.
- The REFLEX ACTIVE heart rate monitor usually provides an accurate estimate of your heart rate, but the reading can be affected by factors such as fit of the smartwatch, the physical characteristics of the wearer and the intensity of the activity
- Your REFLEX ACTIVE smartwatch will help calculate distances covered and calories burned during training. Please consult a doctor before starting new exercise regimes
- REFLEX ACTIVE smartwatches contain sensors to track your movement to closely estimate your activity, sleep, calories used etc. These close estimations are not always fully accurate
- Some wearers may suffer skin irritation if the smartwatch is worn for prolonged periods, especially if they suffer from sensitive skin or have allergies. If you notice any irritation you should remove your smartwatch. To help prevent any irritation please ensure the smartwatch is removed regularly for cleaning & do not over-tighten on your wrist
- We recommend you remove your smartwatch each day for gentle cleaning.

In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability can be accepted by REFLEX **ACTIVE**. If you have any questions or concerns, please contact us, you'll find our contact details on this leaflet.

Manufactured by: Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham Business Park, Bickenhill Lane, Solihull, B37 7GN, UK.

EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DECLARATION OF CONFORMITY The original UK and EU declaration of conformity may be found at : <https://www.reflex-active.com/pages/declaration-of-conformity-certification>.

DISPOSAL OF GOODS

◁ The crossed-out wheellie bin symbol is to remind you that waste electrical products, batteries and accumulators should not be disposed of in the household waste.

If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

- Do not dispose of your REFLEX ACTIVE product within the household waste.
- Disposal of your REFLEX ACTIVE packaging and product should be done in accordance with local regulations.
- Batteries are not to be disposed of in municipal waste & require separate collection.

CONTACT US

If you require any further assistance using your REFLEX ACTIVE smartwatch or our REFLEX ACTIVE App we are here to help!

You can also contact the REFLEX ACTIVE customer service team Monday to Friday, 9 AM to 4 PM on:



+44 (0) 121 524 1400



support@reflex-active.com



There is also lots of information on our website [reflex-active.com](https://www.reflex-active.com) that you may find helpful.



<https://www.reflex-active.com/pages/support>

Please take a few minutes to read through these instructions, they will help ensure you get the best from your smartwatch. You can also visit our website or scan this QR code for lots of helpful information and video guides. And of course, if you have any questions, please get in touch, we're here to help!



+44 (0)121 524 1400



support@reflex-active.co.uk
www.reflex-active.com/pages/support

Documents / Resources



[REFLEX ACTIVE RA01-2001 Series 01 Activity Tracker Smart Watch](#) [pdf] User Guide
RA01-2001, Series 01 Activity Tracker Smart Watch, RA01-2001 Series 01 Activity Tracker Smart Watch, Activity Tracker Smart Watch, Tracker Smart Watch, Smart Watch

References

- [active.co.uk](https://www.reflex-active.co.uk)
- [Find & Register for Races, Local Events & Things to Do | ACTIVE](#)
- [Smart Watches & Fitness Trackers from Reflex Active](#)
- [Privacy Policy for Reflex Active Smart Watches](#)
- [Support & Instructions for Using Your Reflex Active Smart Watch](#)
- [Declaration of conformity certification](#)