



Relay2 RA621 Smart Access Point Installation Guide

[Home](#) » [RELAY2](#) » Relay2 RA621 Smart Access Point Installation Guide 



RA621 Smart Access Point Installation Guide



Trademarks:



Relay2 logo is a trademark of Relay2, Inc. of the US.

Company Headquarters:

1525 McCarthy Blvd. #209, Milpitas, CA 95035, USA

www.relay2.com

Phone: +1 408-380-0031

Contents

- 1 Product Overview:
- 2 Opening the Package
- 3 Safety
- 4 Before you start
- 5 Power Source Options
- 6 Warranty
- 7 Package Content – RA621
- 8 AP Overview:
- 9 Wall Mount the AP
- 10 T-Rail Mount the AP
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Product Overview:

The RA600 family is a cloud-managed Service-Ready Access Point (SR-AP) offering edge computing and storage capabilities with a high-performance wireless access point integrated. It enables businesses to deliver superior venue experiences, enhance business operations, and create competitive advantages. The RA600 family consists of various models, including RA621, RA621, and RA621M to support various capacity and deployment needs. For more information about the RA600 family, refer to www.relay2.com.

Opening the Package

- Please ensure that all ordered optional accessories are included in the separate accessory boxes.
- Please check the packaging list first. If there are any missing or broken parts, please contact the authorized distributor of Relay2, Inc.

Safety

- Read the Quick Installation Guide carefully before installation and power up.
- To avoid overheating, make sure the AP allows for proper heat dissipation and leaves enough room for air circulation.
- Do not directly touch the bottom of the AP to avoid scalding. When the AP is in operation, depending on the environmental temperatures, the surface temperature of the back cover might get hot.
- Any unauthorized modification of the product structure and safety design is not allowed.

Before you start

- Before installation, a signal-detecting test can be used to determine the best installation position.
- Keep your body at least 20cm away from the AP during installation and operation.
- Install the AP at least 1M distance from any metal obstructions to avoid radio signals affected by metal shielding.
- To avoid radio interference, keep the device away from magnets or magnetic fields, ie: do not place it near a microwave, refrigerator ...etc.

Power Source Options

- The RA621 access point can be powered by using the external Relay2 AC Adapter, PoE Injector (both sold separately), or a third-party PoE+ switch.


Warranty

- Please provide the device model, MAC address, and serial number shown on the tag of the side panel.
- The warranty does not cover product that has been opened without authorization from Relay2 Inc.
- Reasonable repair and shipping costs will be charged for product faults or damage caused by using non-Relay2 accessories or improper operation.

Package Content – RA621



Access Point

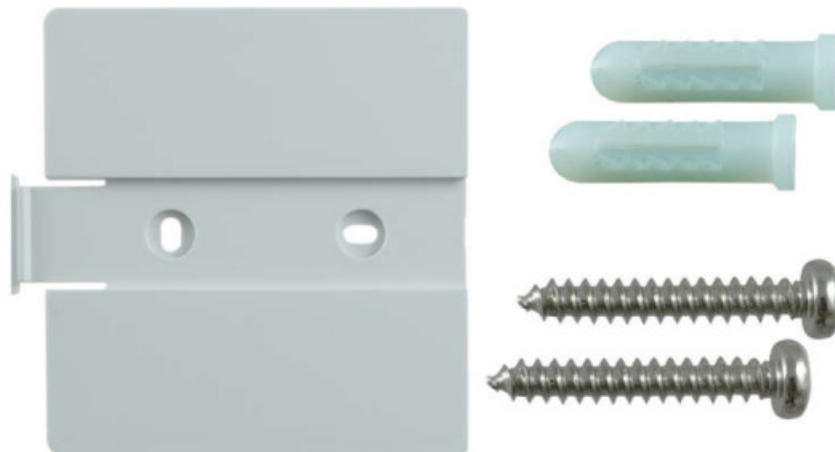

Wall-Mount Kit
M3.5 screws and
anchors for masonry

AP Overview:

Interfaces:




LED Indicators:



Wall Mount the AP


- Determine where the AP is to be placed and mark the location on the surface for the two mounting holes. You may adjust the position with a level.
- Use the appropriate drill bit to drill two 4mm wide and 37mm deep holes and insert the screw anchors into the openings. Fasten the mounting plate with provided screws.
- Slide the AP into the wall mounting plate.

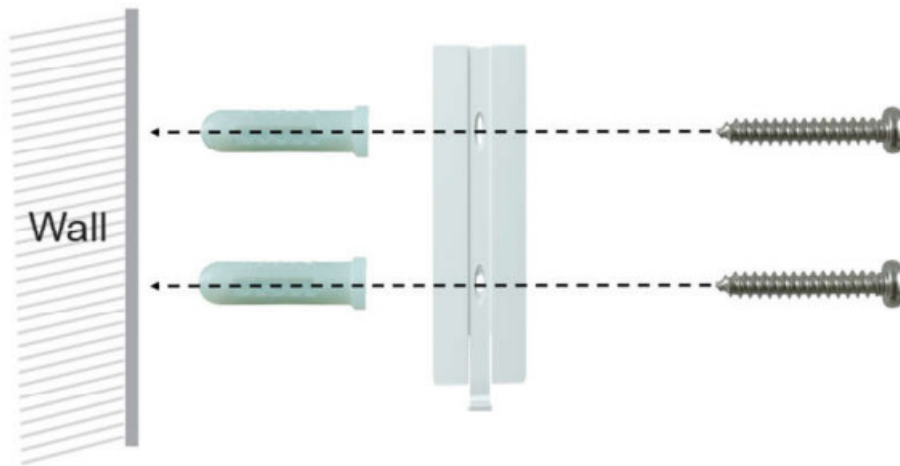

T-Rail Mount the AP

The RA621 T-Rail mount is sold separately. The order number is RA621-T-MK-01.


 


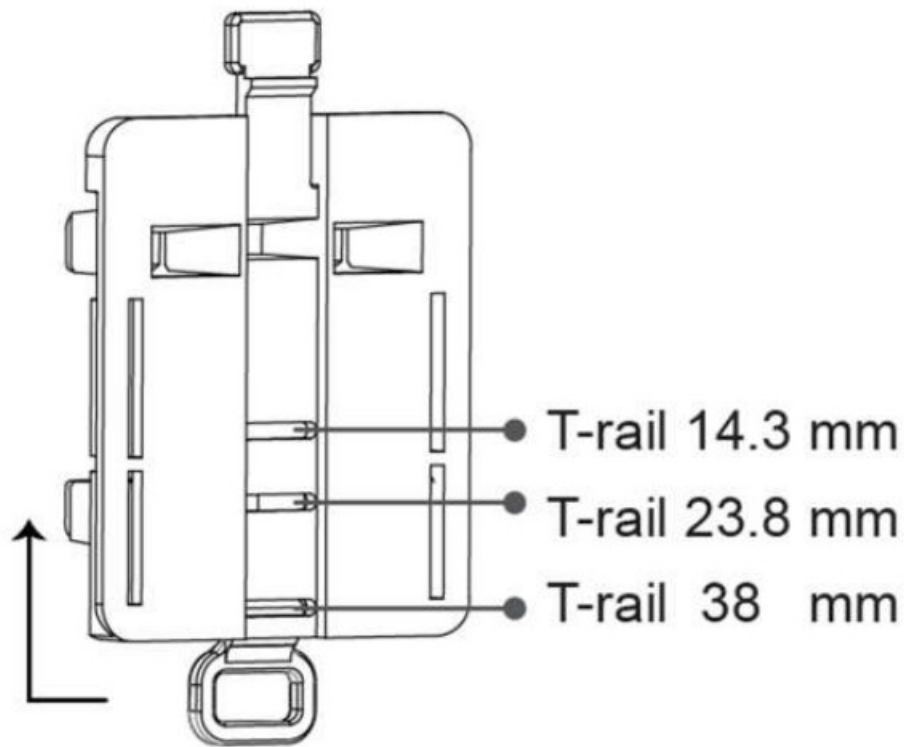- Adjust the T-rail mount to the used T-rail size and fix the mounting bracket to the T-rail.



Slide the AP into the T-rail mount which works similarly to the wall mount.

Verify RA621 Functionality

First, check if the status LED is solid green. During the first boot, it is highly likely that the AP is automatically updating its firmware, indicated by an amber blinking status LED. The status LED should turn solid green after the upgrade process has finished (normally within a few minutes). See the LED indicator table below for more details. Verify access point connectivity – use any 802.11 client device to connect to the RA621 AP and verify network connectivity using the client device web browser by going to a well-known web page. Check network coverage and confirm good signal strength in the desired coverage area.

States	AP Status LED Display			
				
State 1: Power On	Green solid	Off	Off	Link status
State 2: R2OS starting	Green solid	Green solid for 10s	Green solid for 10s	Link status
State 3: R2OS initializing	Green solid	Green slow blinking	Green slow blinking	Link status control
State 4: Radio up and ready	Green solid	Green solid	Green solid	PHY control
State 5: SCM connecting	Green solid	n/a	n/a	PHY control
State 6: CWCL connecting	Green solid	n/a	n/a	PHY control
State 7: AP up and running	Green solid	n/a	n/a	PHY control
State 8: AP Image upgrade	Green solid	n/a	n/a	PHY control
State 9: AP Radio down	Green solid	Green solid on/off	Green solid on/off	PHY control

FCC Disclaimer

§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Information to the user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.



Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

Documents / Resources

	Relay2 RA621 Smart Access Point [pdf] Installation Guide RA621, 2AAA9-RA621, 2AAA9RA621, RA621 Smart Access Point, Smart Access Point
	Relay2 RA621 Smart Access Point [pdf] Installation Guide RA621, RA620, RA620M, RA621 Smart Access Point, Smart Access Point, Access Point

References

- [Relay2 | WiFi as a Service + Edge Computing.](#)
- [Relay2 | WiFi as a Service + Edge Computing.](#)