 




[Home](#) » [REMATCH](#) » **049-023 Rematch Advanced Wired Controller User Guide** 

049-023 Rematch Advanced Wired Controller User Guide

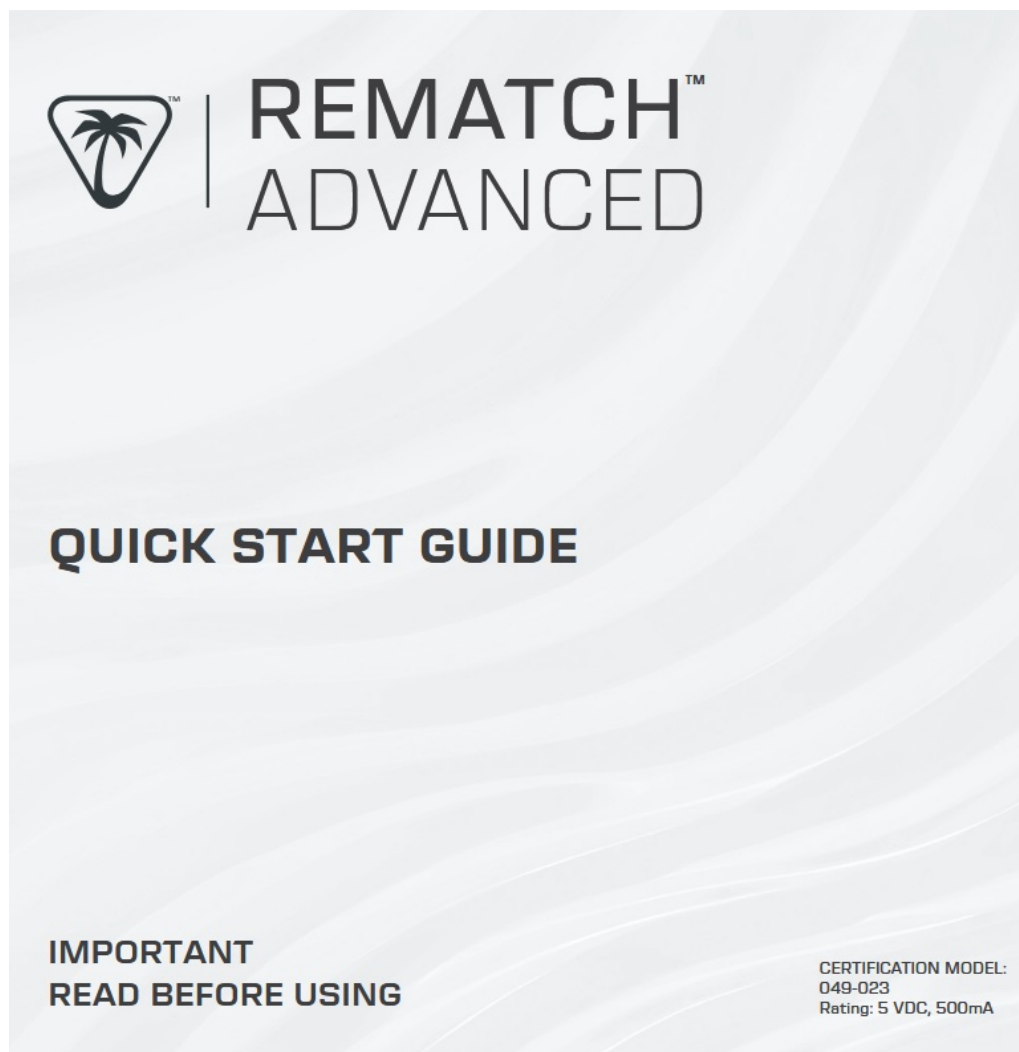

Contents [[hide](#)]

[1 PACKAGE CONTENTS](#)

[2 SETUP](#)

[3 Documents / Resources](#)

[3.1 References](#)

 
PACKAGE CONTENTS

- Rematch™ Advanced Wired Controller
- 8ft/2.4m USB-C Cable
- Quick-Start Guide

SETUP


1. Initial Setup

Plug the USB-C end of the cable into the top of the controller, and the USB-A side into your console or PC, then press the Xbox button on the controller. The light above the Xbox logo will illuminate to indicate it is connected.

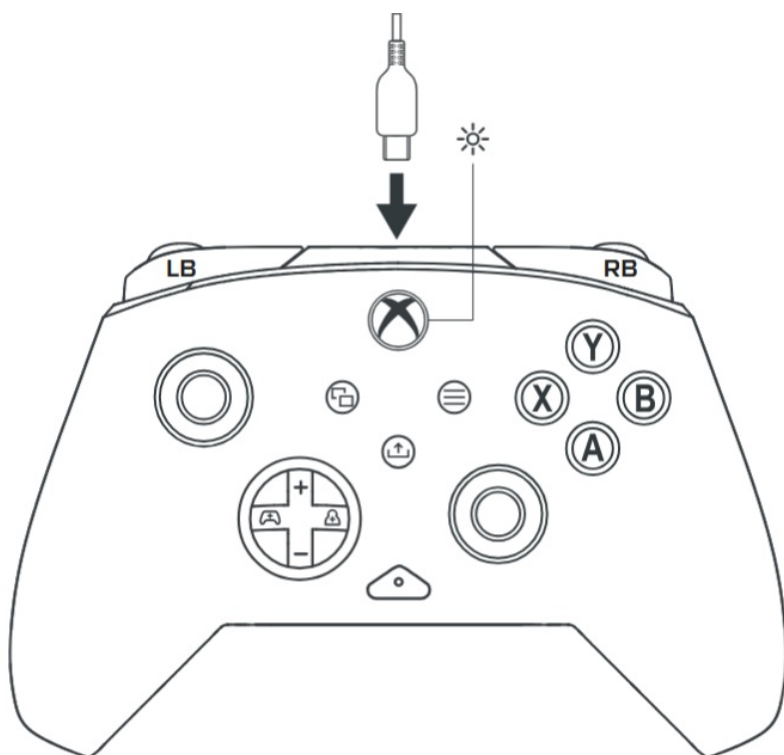


2. Mute Microphone

 Press the function button, located above the audio jack, twice to mute your microphone.

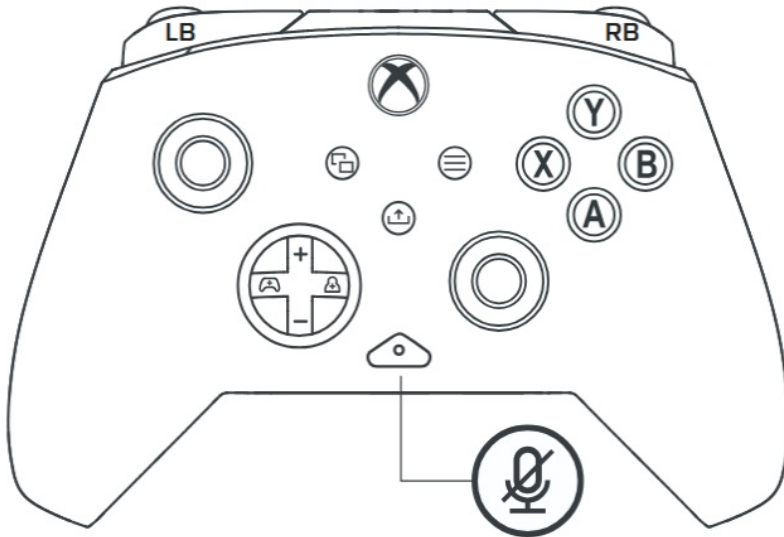


3. Control Volume

 While holding down the function button, press D-Pad +Up/-Down to adjust game volume.

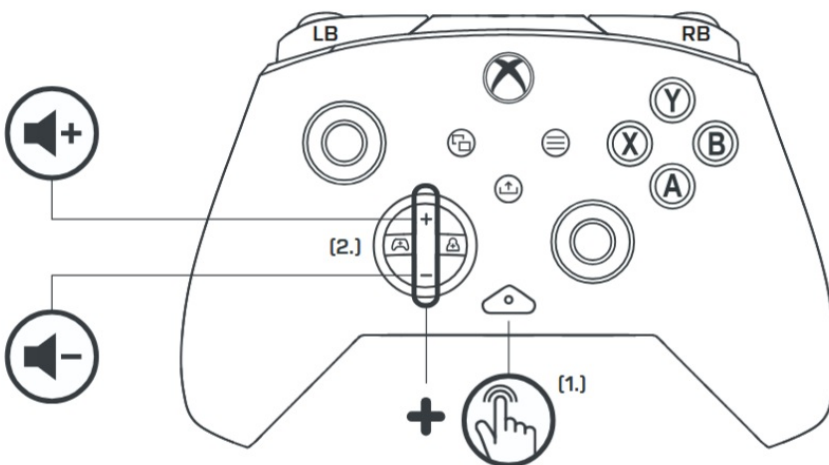


4. Game/Chat Balance

 While holding down the function button, press D-Pad Left/Right to adjust game/chat balance.

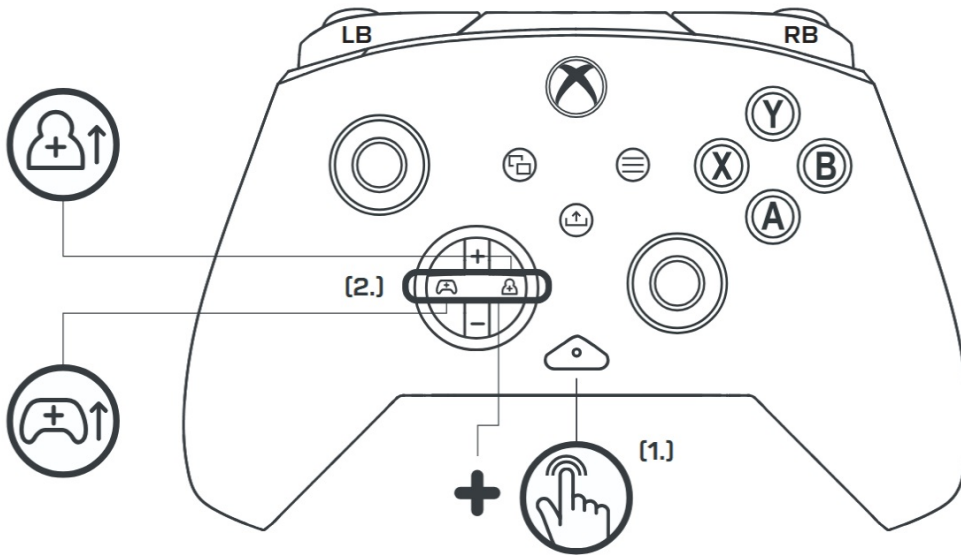


5. Program Back Buttons

 - While holding down the function button, press the back button you would like to map a function to, and the function button LED will start flashing.
- Press any button you would like mapped, and the function button LED will flash 3 times indicating a successfully mapped function.

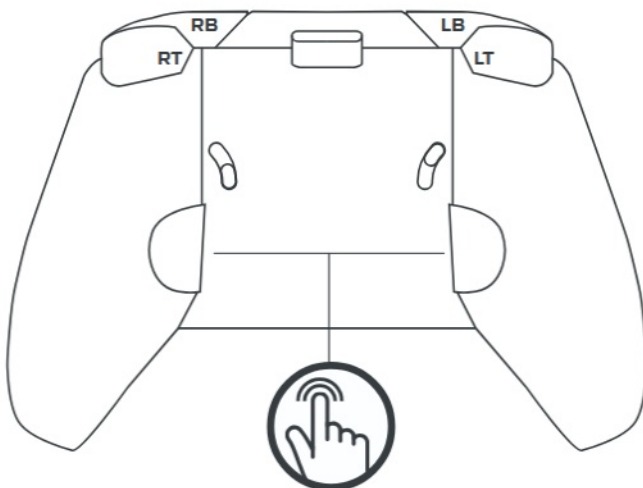

6. Hair Trigger Mode

 Hair triggers are a highly-sought after feature that allows for faster triggers pulls, and an enhanced gaming experience. Turtle Beach uses Hall-effect true digital hair triggers for a rapid and precise trigger response.

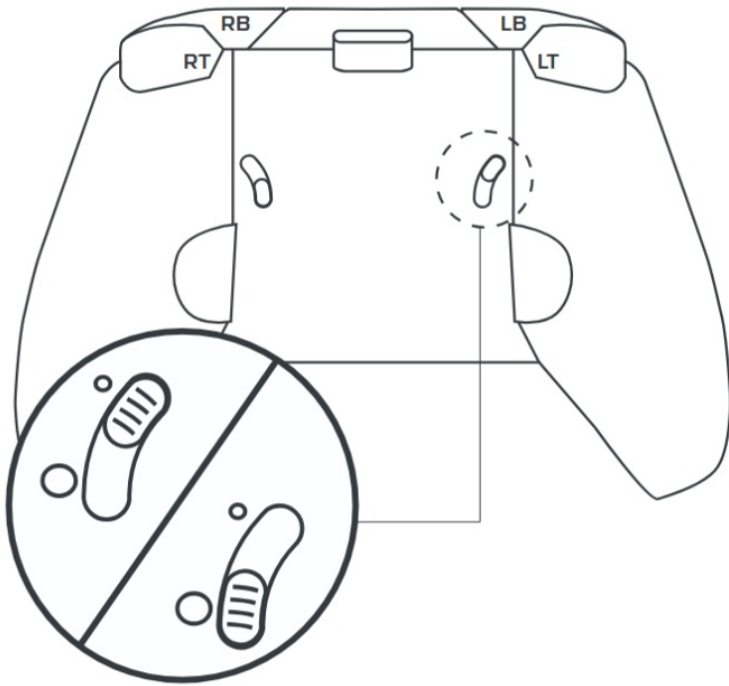

To enable hair trigger mode:

- Toggle the slider buttons on the back of the controller upward to set the trigger buttons to hair-trigger mode.
- Toggle the slider buttons on the back of the controller downward to set the trigger buttons back to full-distance mode.

7. Control Hub App

To customize your controller further, download the free Control Hub App from the Windows Store on your PC or Xbox. You can use it to re-map buttons, run diagnostics, recalibrate analog sticks and triggers, and much more.

Open the Microsoft Store from your PC or Xbox console, search and download “Turtle Beach- PDP Control Hub”.

Or, if you are on PC, download the App from this link:

<https://apps.microsoft.com/detail/9p3l4zvw8vdf?hl=en-US&gl=USon>





Any questions?

www.turtlebeach.com/support

 
Please register your product to receive important updates.

www.turtlebeach.com/productregistration

For warranty, visit:

www.turtlebeach.com/warranty

Documents / Resources

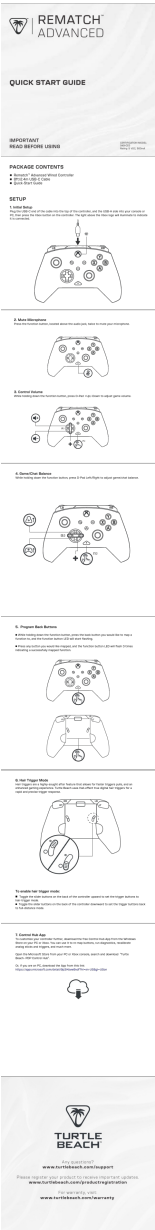 <p>The image shows the 'QUICK START GUIDE' for the REMATCH ADVANCED wired controller. It includes sections for 'IMPORTANT READ BEFORE USING', 'PACKAGE CONTENTS' (listing the controller, USB cable, and quick start guide), and a 'SETUP' section with 8 numbered steps: 1. Unbox, 2. Insert the USB cable into the controller, 3. Insert the USB cable into the PC, 4. Press the PS button, 5. Press the Share button, 6. Press the PS button again, 7. Press the PS button again, and 8. Press the PS button again. The guide also features the Turtle Beach logo and contact information at the bottom.</p>	<p>REMATCH 049-023 Rematch Advanced Wired Controller [pdf] User Guide</p> <p>049-023 Rematch Advanced Wired Controller, 049-023, Rematch Advanced Wired Controller, Advanced Wired Controller, Wired Controller</p>
---	---

References

- [User Manual](#)

REMATCH

049-023, 049-023 Rematch Advanced Wired Controller, Advanced Wired Controller, REMATCH, Rematch Advanced Wired Controller, Wired Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.