

**Remoking**

## Smart Robot Toy



# REMOKING Smart Robot Toy User Manual

[Home](#) » [Support](#) » REMOKING Smart Robot Toy User Manual 

### Contents

- 1 REMOKING Smart Robot Toy
- 2 Introduction
- 3 Specifications
- 4 Package Includes
- 5 Product Overview
- 6 Features
- 7 Dimension
- 8 Usage
- 9 Care and Maintenance of REMOKING Smart Robot Toy
- 10 Troubleshooting
- 11 Pros and Cons
- 12 Contact Information
- 13 Warranty
- 14 FAQs
- 15 Video- REMOKING Smart Robot Toy
- 16 References
- 17 Related Posts

**Remoking**

REMOKING Smart Robot Toy



**Launch Date:** November 7, 2024.

**Price:** \$23.99

## Introduction

Kids ages 3 and up can play with the REMOKING Smart Robot Toy, which is a cool and fun tool. It's fun and educational at the same time because it has many engaging features, like voice control, dancing, singing, and imitating language. The robot can also react to being touched, which makes it a fun, active toy that gets kids to play and move around. Because it can record and play back messages, the REMOKING Smart Robot Toy helps kids be creative and communicate better. It's a great gift for young students because it's small, made of safe materials, and easy to use. This robot will keep you entertained for hours, whether you want to dance, have a fun chat, or play with it.


## Specifications

- **Model Name:** Robot
- **Brand Name:** REMOKING
- **Batteries Required:** 3 Lithium Polymer batteries (not included)
- **Item Weight:** 0.38 kg
- **Item Dimensions:** 3.9"L x 3.7"W x 5.1"H
- **Material Type:** Plastic
- **Minimum Age Requirement:** 36 months (3 years and up)
- **Assembly Required:** No

## Package Includes

- 1 REMOKING Smart Robot Toy
- User Guide

## Product Overview

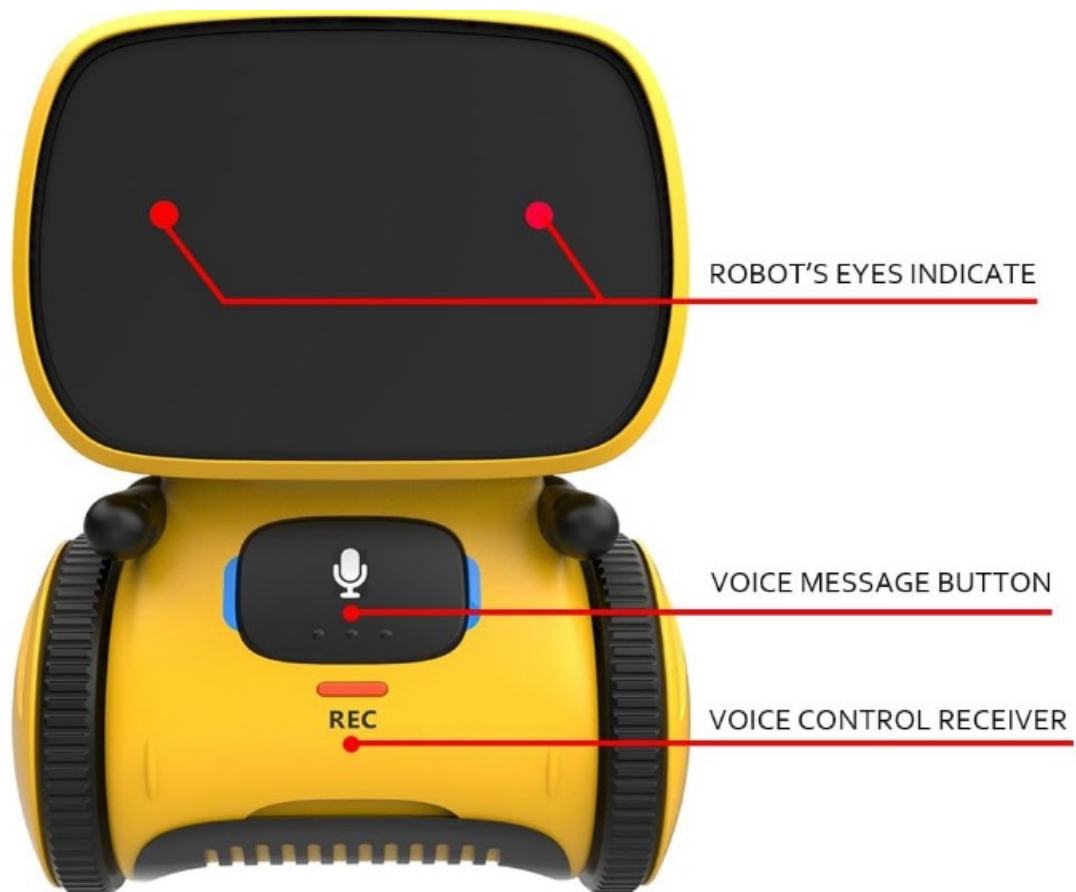

## Features

**TALK TO ME AND  
I TALK BACK.**

# ***Remoking***



**REPEAT  
WHAT  
YOU SAY**



**RECORDS  
WHAT  
YOU SAY**



**TALK BACK  
TO YOU**



**BRIGHTLY  
FLASHING  
LED EYES**



**SING AND  
DANCEING**

1. **Voice Control:** The REMOKING Smart Robot Toy can be controlled by voice commands, making the playtime very engaging. Simple instructions, like “come here,” are all kids need to tell the robot to do something for them. You can even speak directly to its head and have it repeat lines or words. This makes it more fun and personal.
2. **Obstacle Avoidance:** The robot has sensors built in that let it find and avoid things that are in its way. The REMOKING Smart Robot Toy can move around the room without getting stuck on furniture or other things, so it's great for free-roaming play.
3. **Toggle Switch:** This robot can toggle between singing and dancing, which is fun for kids. Little ones can watch the robot dance and then join in, making for a fun and busy game time. Kids are more likely to move around and play with the toy in a fun way.
4. **Interactive Learning:** The robot is made so that kids can use it to do tasks that help them learn. It can help with schoolwork like learning to count, the alphabet, or even basic speaking skills. When kids play with the robot, they can learn while having fun. This makes it both a teaching tool and a toy.
5. **Use of a Remote Control:** The REMOKING Smart Robot Toy comes with a remote control that can be used to control it. This makes it easier for kids to control the robot's moves, turn on its features, and play with it, giving the user more options.
6. **Programmable Actions:** You can set up and change certain moves on some models of the REMOKING Smart Robot Toy. Kids can make their own routines and sets of movements for the robot, which helps them be creative, solve problems, and think critically.
7. **Rechargeable Battery:** The robot's battery can be charged, so you can play with it for longer without having to keep replacing the battery. The toy can be used for up to an hour straight after being charged.

8. **Durable Design:** The robot is made of high-quality, long-lasting plastic, so it can handle being played with regularly. Because it's made to be strong and durable, it will last through rough play, even with little kids.
9. **Touch Induction:** When someone touches the robot, it can do things like walk forward or backward, turn left or right, or react to touch induction. A simple tap on the head can make it do different things, making the fun more involved.

**INTELLIGENT  
ROBOT**

**TOUCH  
INDUCTION**

**RECORDING**



10. **Recording Mode:** The REMOKING Smart Robot Toy has a fun mode for recording short 8-second messages that kids can playback. The robot can play back these records when told to, so kids can hear their own voices or have fun chatting with it.
11. **Play Music and Dance:** This toy can play fun music and dance routines. When turned on, it can sing songs, move to the beat, and do dance routines, making playtime fun and exciting for kids.
12. **Imitating Language:** The robot can repeat sentences or words that are spoken to it, which makes it a fun person to talk to. Kids can play with it, and it will talk back to them in a fun and interesting way.
13. **Sensors for Touch:** The REMOKING Smart Robot Toy has sensors for touch that let it respond to being touched. It can sing when you touch its head, and it will move when you touch both sides of its head. To keep from starting too many actions at once, it's important to touch the robot gently.
14. **Ideal Present for Kids:** The REMOKING Smart Robot Toy is a fun and useful present for kids ages 3 and up. It would make a great gift for a birthday, the holidays, or any other special event. This robot's dynamic features will keep kids busy for hours and help them learn and use their imaginations.
15. **Safety:** The toy is made of high-quality plastic that isn't harmful to kids, so it's safe for them to play with. Safety rules say it's okay for kids to use, so they can feel safe while having fun. It's a great choice for parents who want a toy that will both entertain and teach their kids.

## Dimension



## Usage

1. **Charging:** Before use, fully charge the **REMOKING Smart Robot Toy** using the provided USB charging cable. A full charge typically takes 2-3 hours.
2. **Turning On:** Press the power button on the robot to turn it on. The robot should power up and be ready for operation.
3. **Voice Commands:** Use voice commands to instruct the robot to move, sing, dance, or stop. Ensure the robot is within hearing range to recognize commands.
4. **Remote Control:** Alternatively, use the remote control to guide the robot's movements, activate specific functions, or change settings.
5. **App Control (if applicable):** Some versions allow connection to a mobile app for additional interactive features, like programming actions and playing games.

## Care and Maintenance of REMOKING Smart Robot Toy

- **Keep the Robot Clean:** Use a soft, dry cloth to clean the surface of the robot. Avoid using harsh chemicals or abrasive cleaners to prevent damage to the body or sensors.
- **Charge the Battery Properly:** Always use the included USB cable to charge the robot. Do not leave it plugged in for extended periods after it's fully charged.
- **Store Properly:** When not in use, store the robot in a cool, dry place to prevent damage from humidity or

extreme temperatures.

- **Check for Wear and Tear:** Regularly check the robot for signs of wear, especially around the joints and moving parts. If the robot's movements become restricted, clean any debris from the moving components.
- **Battery Care:** Avoid letting the battery completely drain each time. It's best to recharge the robot when the battery level is low, but not fully depleted, to prolong battery life.

## **Troubleshooting**

### **Robot Doesn't Turn On:**

- Ensure the robot is fully charged.
- Check if the power switch is in the "on" position.
- If the battery is not charging, check the charging cable and port for any issues.

### **The Robot Won't Respond to Voice Commands:**

- Make sure the robot is close enough for it to hear your voice.
- Check if the voice recognition function is activated.
- If the robot is not responding, try restarting it or resetting it according to the user manual.

### **The Robot is Not Moving Correctly:**

- Check if there is any obstruction blocking its movement.
- Ensure the floor is clean and smooth for optimal movement.
- If the robot's wheels are jammed, gently clean or clear any debris around the wheel area.

### **Remote Control Not Working:**

- Check the batteries in the remote control and replace them if necessary.
- Make sure the remote is pointed directly at the robot and within range.
- Try restarting both the robot and the remote.

### **Sound or Music Not Working:**

- Check if the volume control on the robot is set to an audible level.
- Ensure the robot is in a mode that plays sounds (e.g., dancing or singing mode).
- If no sound is emitted, try restarting the robot or checking for audio settings in the app (if available).

## **Pros and Cons**

Pros	Cons
Interactive features enhance learning	Requires batteries that are not included
Engaging music and movement	Limited battery life
Durable design suitable for young children	Voice recognition may vary

### Contact Information

For inquiries or support, please contact REMOKING customer service at [support@remoking.com](mailto:support@remoking.com) or call (123) 456-7890.

### Warranty

The REMOKING Smart Robot Toy comes with a one-year limited warranty covering manufacturing defects. Please retain your purchase receipt for warranty claims.

### FAQs

What is the REMOKING Smart Robot Toy?

The REMOKING Smart Robot Toy is an interactive toy designed for children aged 3 and up. It features voice recognition, dancing, singing, and touch induction for a fun and educational experience.

How does the REMOKING Smart Robot Toy respond to voice commands?

The REMOKING Smart Robot Toy responds to voice commands by imitating the words or phrases spoken to it. Children can talk to the robot, and it will repeat their voice.

What features does the REMOKING Smart Robot Toy offer for interactive play?

The REMOKING Smart Robot Toy offers dancing, singing, touch induction movements, voice command responses, and the ability to record and playback short messages, making it very interactive.

What age is the REMOKING Smart Robot Toy suitable for?

The REMOKING Smart Robot Toy is designed for children aged 3 years and older, offering both entertainment and educational value for young learners.

How does the REMOKING Smart Robot Toy move?

The REMOKING Smart Robot Toy can move forward, backward, turn left, or turn right in response to touch induction. It also dances and sings for added fun.

What material is the REMOKING Smart Robot Toy made of?

The REMOKING Smart Robot Toy is made of safe, non-toxic plastic, ensuring it is safe for young children to play with.

 
How do you turn on the REMOKING Smart Robot Toy?

To turn on the REMOKING Smart Robot Toy, simply press the button on its chest, and it will activate its interactive features.

What happens if the REMOKING Smart Robot Toy doesn't respond to voice commands?

If the REMOKING Smart Robot Toy doesn't respond, check if there's too much background noise, as it is a phonetic recognition robot that might make mistakes in noisy environments.

#### Video- REMOKING Smart Robot Toy



<https://www.manuals.plus/wp-content/uploads/2024/12/REMOKING-Smart-Robot-Toy.mp4>

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.