


**R** REMOTE PRO  
**CS12E**  
**Control**  
**Board**



## REMOTE PRO CS12E Control Board Instructions

[Home](#) » [Remote Pro](#) » REMOTE PRO CS12E Control Board Instructions 

### Contents

- [1 REMOTE PRO CS12E Control Board](#)
- [2 Product Information](#)
- [3 Specifications](#)
- [4 Product Usage Instructions](#)
- [5 FAQ](#)
- [6 Programme your new remote](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



### REMOTE PRO CS12E Control Board



## Product Information

- The Ditec CS12E is a control board designed for use with compatible remotes to operate motorized systems such as gates or garage doors.

## Specifications

- **Model:** Ditec CS12E
- **Compatibility:** Works with specific remotes
- **Power Source:** Coin/Button cell battery
- **Manufacturer:** Ditec

## Product Usage Instructions

- Press and release the ENTER button on the motor. The screen will display AT.
- Use the up or down arrow buttons until the screen displays RO, then press ENTER.
- If SR is not displayed, use the arrow buttons to navigate until it shows up. Press ENTER.
- Press ENTER again, and SR will start flashing.
- Hold down the button on the remote for 2 seconds. The screen will briefly display OK before returning to SR.
- Press the ESC button to exit programming mode.
- Test the remote to ensure successful programming.
- This product may contain a coin/button cell battery.
- Keep the product and batteries out of reach of children.
- Ingesting a battery can cause severe or fatal injuries within 2 hours. Seek immediate medical attention if ingestion is suspected.

## FAQ

- **Q:** How do I know if my remote is compatible with the Ditec CS12E Control Board?
- **A:** Please refer to the user manual of your remote or contact our customer support for compatibility information.

- **Q:** What should I do if the screen does not display SR during programming?
- **A:** Use the arrow buttons to navigate until SR is displayed, then proceed with the programming steps.

## Programme your new remote

### Programme your new remote into your Ditec CS12E Control Board

1. Press and release the “ENTER” button on the motor and the screen will display “AT”.
2. Press the up arrow or down arrow until the screen displays “RO” and then press “ENTER”.
3. The screen should then display “SR” (if “SR” is not displayed, press the up arrow or down arrow until it does).
4. Press “ENTER” and “SR” will begin flashing.
5. Press and hold the button on the remote for 2 seconds and the screen will display “OK” briefly before going back to “SR”.
6. Press the “ESC” button to return to exit out of programming.
7. Test the remote.

## WARNING

- This product may contain a coin/button cell battery.
- Keep products and batteries away from children.
- A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body.
- Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside any part of the body.



[www.remotepro.com.au](http://www.remotepro.com.au)

## Documents / Resources

<p><b>Other CS12E Instructions</b></p> <p>Programme your new remote into your Ditec CS12E Control Board</p> <ol style="list-style-type: none"> <li>1. Press and release the “ENTER” button on the motor and the screen will display “AT”.</li> <li>2. Press the up arrow or down arrow until the screen displays “RO” and then press “ENTER”.</li> <li>3. The screen should then display “SR” (if “SR” is not displayed, press the up arrow or down arrow until it does).</li> <li>4. Press “ENTER” and “SR” will begin flashing.</li> <li>5. Press and hold the button on the remote for 2 seconds and the screen will display “OK” briefly before going back to “SR”.</li> <li>6. Press the “ESC” button to return to exit out of programming.</li> <li>7. Test the remote.</li> </ol>	<p><a href="#">REMOTE PRO CS12E Control Board</a> [pdf] Instructions CS12E, CS12E Control Board, Control Board, Board</p>
--	---

## References

- [R Garage Door Remotes | Car Remotes | Free Shipping AU Wide – Remote Pro](#)
- [R Garage Door Remotes | Car Remotes | Free Shipping AU Wide – Remote Pro](#)

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.