Manuals+ — User Manuals Simplified.



REMOTE PRO Ditec-C Compatible Remote Gate Receiver Instructions

Home » Remote Pro » REMOTE PRO Ditec-C Compatible Remote Gate Receiver Instructions

REMOTE PRO Ditec-C Compatible Remote Gate



Contents

- 1 Programming a remote directly through to a receiver
- 2 Deleting Codes from Memory
- 3 Documents / Resources
 - 3.1 References

Programming a remote directly through to a receiver

- 1. Open the control box and locate the receiver. Ensure that jumper JR6 on the receiver board is on.
- 2. Press the black PRG button for 5 seconds. Press the button on the new remote you wish to activate the device for 1 second.
- 3. Wait for 10 seconds for receiver to reset and test. If coding fails, this could be because the receiver MEMORY is full.
- 4. DELETE all remotes and start again.

Deleting Codes from Memory

- 1. Press the little black program button (inside MOTOR BOX) until seeing the red light flashing slowly and release.
- 2. Press the button again until you see the light flashing fast. Then release.
- 3. Wait 10 seconds, then test.
- 4. Repeat for the garage door if fitted. The program button for garage should be in an ADD-ON receiver

WARNING

This product may contain a coin/button cell battery. Keep product and batteries away from children. A battery can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Seek immediate medical attention if it is suspected that a coin/button cell battery has been swallowed or placed inside of any part of the body.

www.remotepro.com.au

Documents / Resources



REMOTE PRO Ditec-C Compatible Remote Gate Receiver [pdf] Instructions
Ditec-C Compatible Remote Gate Receiver, Compatible Remote Gate Receiver, Remote Gate
Receiver, Gate Receiver, Receiver

References

- R Garage Door Remotes | Car Remotes | Free Shipping AU Wide Remote Pro
- R Garage Door Remotes | Car Remotes | Free Shipping AU Wide Remote Pro
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.