




Remote Pro RIB Sun Coding Gate Motor Instructions

[Home](#) » [Remote Pro](#) » Remote Pro RIB Sun Coding Gate Motor Instructions

RIB SUN CODING INSTRUCTIONS

Remove the cover of your gate motor.

2. On the gate, the motor move DIP 1 left to ON position (figure 1) and then DIP 3 left to ON position (figure 2). The programming two-color led DL10 flashes green for 10 seconds.
3. In less than 10 seconds on the new remote press the button you would like to code to the motor. If the remote control has been saved correctly, two-tone led DL1 (figure 3) turns red for an instant, and a buzzer tone confirms the saved entry. If you are coding more than one remote, the 10 seconds for programming the codes are reset automatically with two-tone led DL10 that flashes green to save the next remote control.
4. To finish programming, wait 10-15 seconds and the motor will exit learn mode. The motor has exited learn mode when the programming led DL10 stops flashing.
5. Switch DIP 1 to the right (of) and DIP 3 to the right (OFF).
6. Test all remotes to ensure they operate the gate.

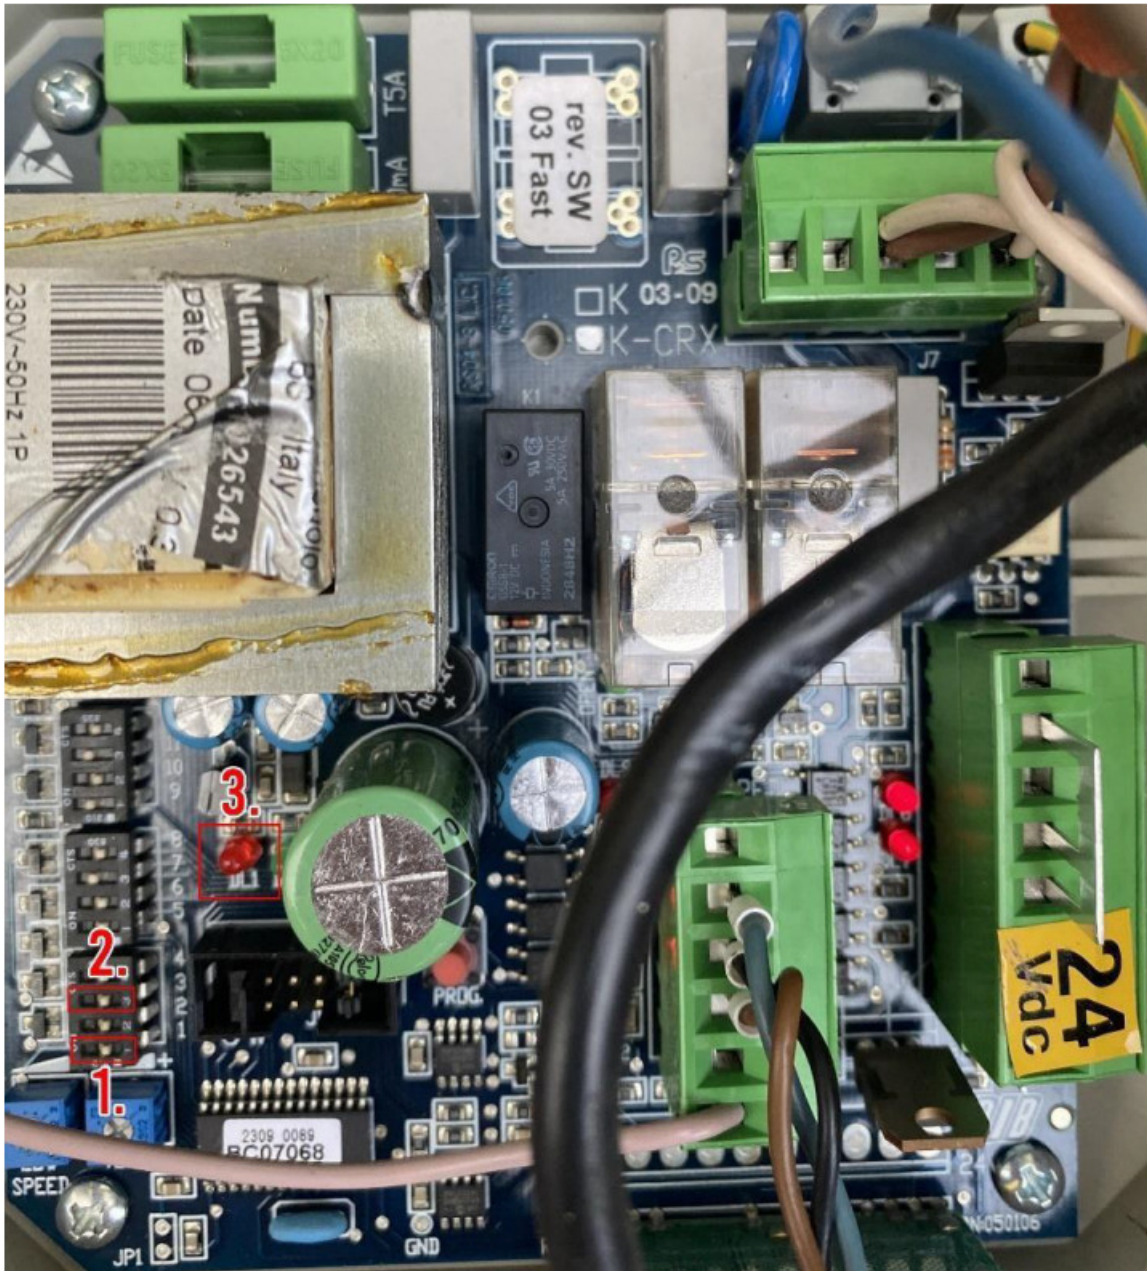

www.remotepro.com.au



WARNING

To prevent possible SERIOUS INJURY or DEATH:

- Battery is hazardous: NEVER allow children near batteries.
- If the battery is swallowed, immediately notify a doctor. To reduce risk of fire, explosion, or chemical burn:
- Replace ONLY with the same size and type battery
- DO NOT recharge, disassemble, heat above 100° C, or incinerate Battery will cause SEVERE or FATAL injuries in 2 hours or less if swallowed or placed inside any part of the body.

Contents [hide](#)

[1 Documents / Resources](#)

[2 Related Posts](#)

Documents / Resources



[Remote Pro RIB Sun Coding Gate Motor](#) [pdf] Instructions
DL10, Gate Moter, DL10 Gate Moter, RIB Sun Coding Gate Motor

[Manuals+](#),

- [home](#)
- [privacy](#)