

Remote Tech GV15 Smart Key



Remote Tech GV15 Smart Key User Manual

[Home](#) » [Remote Tech](#) » Remote Tech GV15 Smart Key User Manual 

Contents

- [1 Remote Tech GV15 Smart Key](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Electronic Key](#)
- [6 FCC COMPLIANCE STATEMENT](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

Remote Tech

Remote Tech GV15 Smart Key



Product Information

Specifications:

- FCC ID: 2AOKM-GV15
- IC: 24223-GV15
- Model: RT-YOGO1
- Part Numbers: RT-G1567, RT-G8440, RT-G1565, RT-G8437, RT-G1561, RT-G1559, RT-G8441, RT-G8860, RT-G6300, RT-G8851, RT-G8852

Product Usage Instructions

Locking and Unlocking:

To lock the vehicle, press the LOCK button. Exterior lights will flash, doors and fuel fill door will lock. Press UNLOCK to unlock driver's door, press again within 5 seconds to unlock all doors.

Trunk and Hatch Release:

Press the TRUNK button for one second to unlock and open the trunk. Press HATCH button for one second to unlock and open the hatch.

Panic Button:

Pressing the PANIC button activates the alarm. Press any button on the key to stop the alarm.

Remote Start:

Press REMOTE START button twice within 5 seconds to start the remote start mode. The vehicle will stay in this mode for a 15-minute cycle. Press once to exit Remote Start mode.

FCC Compliance Statement:

This device complies with FCC Part 15 rules and must not cause harmful interference. Any modifications not approved could void user's authority.

FAQ

Q: How long does the vehicle stay in Remote Start mode?

A: The vehicle stays in Remote Start mode for a 15-minute cycle.

Q: What should I do if the alarm is activated by pressing the PANIC button?

A: Press any button on the electronic key to stop the alarm.

Electronic Key

FCC ID:2AOKM-GV15

IC :24223-GV15

MODEL:RT-YOGO1

P/N: RT-G1567,RT-G8440,RT-G1565, RT-G8437,RT-G1561,RT-G1559,RT-G8441,RT-G8860,RT-G6300,RT-G8851 RT-G8852 This remote has lock, unlock, Trunk, Remote Start , Hatch and panic buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

- **LOCK Button:**

When you press the LOCK button, it locks all the doors.

- **Once:**

Some exterior lights flash, all the doors and fuel fill door lock, and the security system sets.

- **Twice:(within five seconds after the first push):**

Some exterior lights flash, the beeper sounds and verifies the security system is set.

- **UNLOCK Button:**

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors. Once:

Some exterior lights flash twice, and the driver's door and fuel fill door unlocks

- **Twice:**

Some exterior lights flash twice, and the remaining doors unlock.

- **TRUNK Button:**

Press the trunk release button for approximately one second to unlock and open the trunk

- **Hatch Button:**

Press the Hatch release button for approximately one second to unlock and open the Hatch

- **PANIC Button:**

When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp. To stop the alarm, press any button on the electronic key.

- **REMOTE START Button:**

Press the remote start button twice within 5 seconds. The vehicle will stay in the Remote Start mode for a 15-minute cycle. Press and release remote start button once to exit Remote Start mode.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


- 1. This device may not cause harmful interference, and
 - 2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

IC WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device

Documents / Resources

| | |
|---|--|
|  | <p>Remote Tech GV15 Smart Key [pdf] User Manual GV15 Smart Key, GV15, Smart Key, Key</p> |
|---|--|

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.