



## Remote Tech RT-HK4F16 Electronic Key User Manual

[Home](#) » [Remote Tech](#) » Remote Tech RT-HK4F16 Electronic Key User Manual 

### Contents

- [1 Remote Tech RT-HK4F16 Electronic Key](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FCC STATEMENT](#)
- [5 Documents / Resources](#)



### Remote Tech RT-HK4F16 Electronic Key



### Product Information

- FCC ID: 2AOKM-HK17
- IC: 24223-HK17
- Model: RT-HK4F16
- Part Number: RT-C1010

The Electronic Key is a remote transmitter that allows you to control various functions of your vehicle. It features the following buttons:

- **LOCK Button:** Pressing this button locks all the doors of the vehicle.
- **UNLOCK Button:** Pressing this button unlocks the driver's door. Pressing it again within 5 seconds unlocks the other doors.
- **Liftgate Unlock Hold Button:** Press and hold this button to open the liftgate if your vehicle is equipped with a power liftgate.
- **PANIC HOLD Button:** Pressing this button activates the vehicle's alarm system, causing the horn to sound and hazard lamps to flash. To stop the alarm, press any button on the electronic key.

## Product Usage Instructions

To use the Electronic Key, follow these steps:

1. Ensure that the battery of the electronic key is properly installed and functional.
2. To lock all the doors of the vehicle, press the LOCK button once.
3. To unlock the driver's door, press the UNLOCK button once. To unlock all the doors, press the UNLOCK button again within 5 seconds.
4. If your vehicle is equipped with a power liftgate, press and hold the Liftgate Unlock Hold Button to open the liftgate.
5. To activate the vehicle's alarm system, press and hold the PANIC HOLD button. The horn will start sounding, and the hazard lamps will flash. To stop the alarm, press any button on the electronic key.

**Note:** Ensure that you comply with all FCC regulations regarding the operation of this device. Any unauthorized changes or modifications to the device may void your authority to operate it.

## User's Manual

- Electronic Key
- FCC ID: 2AOKM-HK17
- IC: 24223-HK17
- MODEL: RT-HK4F16
- PART NUMBER: RT-C1010

This remote has lock, unlock, Liftgate Unlock Hold Button , , remote start Button and panic hold buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

**LOCK Button:** When you press the LOCK button, it locks all the doors.

**UNLOCK Button:** Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

**Liftgate Unlock Hold Button**

Press and Hold. Will open if equipped with power liftgate  
**PANIC HOLD Button:** When you press the PANIC button, the vehicle will start sounding the horn and flushing the hazard lamp. To stop the alarm, press any button on the electronic key.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
  - 2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources

	<p><a href="#">Remote Tech RT-HK4F16 Electronic Key</a> [pdf] User Manual RT-HK4F16, RT-HK4F16 Electronic Key, Electronic Key, Key</p>
---	--