



Remote Tech RT-HK4F18 Electronic Smart Key User Manual

[Home](#) » [Remote Tech](#) » Remote Tech RT-HK4F18 Electronic Smart Key User Manual 

Contents

- [1 Remote Tech RT-HK4F18 Electronic Smart Key](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Buttons](#)
- [5 FCC](#)
- [6 Documents / Resources](#)



Remote Tech RT-HK4F18 Electronic Smart Key



Product Information

The Electronic Key is a remote transmitter used for locking, unlocking, and controlling the trunk/hatch of a vehicle. It is equipped with lock, unlock, Liftgate Unlock Hold Button, and panic buttons. The key has the following specifications:

- **FCC ID:** 2AOKM-HK21
- **IC:** 24223-HK21
- **Model:** RT-HK4F18

Product Usage Instructions

To use the Electronic Key, follow these instructions:

1. **LOCK Button:** Press the LOCK button to lock all the doors of the vehicle.
2. **UNLOCK Button:** Press the UNLOCK button to unlock the driver's door. If you press the UNLOCK button again within 5 seconds, it will unlock the other doors as well.
3. **Liftgate Unlock Hold Button:** If your vehicle is equipped with a power liftgate, press and hold this button to open the liftgate.
4. **PANIC HOLD Button:** Pressing the PANIC button will activate the alarm system of the vehicle. The horn will start sounding, and the hazard lamp will flash. To stop the alarm, press any button on the electronic key.

Note: The Electronic Key complies with part 15 of the FCC Rules. It must not cause harmful interference and must accept any interference received. Any changes or modifications not approved by the responsible party may void the user's authority to operate the equipment.

User's Manual

- **Electronic Key**
- **FCC ID:** 2AOKM-HK21
- **IC:** 24223-HK21
- **MODEL:** RT-HK4F18

This remote has lock, unlock, Liftgate Unlock Hold Button and panic buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

Buttons

LOCK Button:

When you press the LOCK button, it locks all the doors.

UNLOCK Button:

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

Liftgate Unlock Hold Button:

Press and Hold. Will open if equipped with power liftgate

PANIC HOLD Button:

When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp. To stop the alarm, press any button on the electronic key.

FCC


FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device

Documents / Resources

	<p>Remote Tech RT-HK4F18 Electronic Smart Key [pdf] User Manual 2AOKM-HK21, 24223-HK21, RT-HK4F18, Electronic Smart Key, RT-HK4F18 Electronic Smart Key, Smart Key, Key, HK21</p>
---	---