

**Remote Tech
RT-KR5TP2
Electronic Key**



Remote Tech RT-KR5TP2 Electronic Key User Manual

[Home](#) » [Remote Tech](#) » Remote Tech RT-KR5TP2 Electronic Key User Manual 

Contents

- [1 Remote Tech RT-KR5TP2 Electronic Key](#)
- [2 Product Usage Instructions](#)
- [3 LOCK Button](#)
- [4 Hatch Hold Button](#)
- [5 PANIC HOLD Button](#)
- [6 FCC STATEMENT](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

Remote Tech

Remote Tech RT-KR5TP2 Electronic Key



Product Usage Instructions

- Press the LOCK button to lock all the doors of the vehicle.
- Press the UNLOCK button to unlock the driver's door.
- Pressing the button again within 5 seconds will unlock the other doors.
- Press the Hatch Hold button to open and close the trunk of the vehicle.
- Press the PANIC button to activate the vehicle alarm, sounding the horn and flashing the hazard lamps.
- To stop the alarm, press any button on the electronic key.

User's Manual

- Electronic Key
- FCC ID: 2AOKM-AC6
- IC: 24223- AC6

MODEL: RT-KR5TP2 This remote has lock, unlock, Hatch Hold, Remote Start, and panic buttons; you can open or close the vehicle with the remote transmitter.

LOCK Button

- When you press the LOCK button, it locks all the doors.

UNLOCK Button

- Pressing the button unlocks the driver's door.
- Pressing the button again within 5 seconds unlocks the other doors.

Hatch Hold Button

- Pressing the button opens and closes the trunk.

PANIC HOLD Button

- When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp
- To stop the alarm, press any button on the electronic key.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING


This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device

FAQ

- **Q: How do I replace the battery in the electronic key?**
 - **A:** To replace the battery, locate the battery compartment on the back of the key, open it using a small tool, replace the old battery with a new one (ensure correct polarity), and close the compartment securely.
- **Q: What should I do if the remote transmitter is not working?**
 - **A:** If the remote transmitter is not working, check the battery level in the electronic key. Replace the battery if necessary. If the issue persists, contact customer support for further assistance.

Documents / Resources

| | |
|---|--|
|  | <p>Remote Tech RT-KR5TP2 Electronic Key [pdf] User Manual 2AOKM-AC6, 24223-AC6, RT-KR5TP2 Electronic Key, RT-KR5TP2, Electronic Key, Key</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.