Remote Tech
RT-M3N8397
Electronic
Key





Remote Tech RT-M3N8397 Electronic Key Instructions

Home » Remote Tech » Remote Tech RT-M3N8397 Electronic Key Instructions

Contents

- 1 Remote Tech RT-M3N8397 Electronic
- **2 Product Usage Instructions**
- 3 FAQs
- 4 Documents / Resources
 - 4.1 References

Remote Tech

Remote Tech RT-M3N8397 Electronic Key



• FCC ID: 2AOKM-FD18

• IC: 24223-FD18

• Model: RT-M3N8397

• Features: Lock, Unlock, Trunk/Hatch, Remote Start, Panic buttons

Product Usage Instructions

This remote has lock, unlock, Trunk / Hatch, Remote Start, panic buttons; you can open or close the vehicle with the remote transmitter.

LOCK Button:

Pressing the LOCK button will lock all the doors of the vehicle.

UNLOCK Button:

- Pressing the UNLOCK button will unlock the driver's door.
- Pressing the button again within 5 seconds will unlock the other doors.

TRUNK/HATCH Button:

Pressing the TRUNK/HATCH button will open and close the trunk/hatch of the vehicle.

Remote Start Button:

Pressing this button, the car will be start to work.

PANIC Button:

When you press the PANIC button, the vehicle will start sounding the horn and flushing the hazard lamp. To stop the alarm, press any button on the electronic key.

FCC Compliance Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic

Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device

FAQs


Q: What should I do if my remote key is not working?

A: If your remote key is not working, try replacing the battery. If the issue persists, contact customer support for further assistance.

Q: Can I program the remote key myself?

A: Programming instructions may vary for different models. Refer to the user manual or contact customer support for guidance on programming your remote key.

Documents / Resources

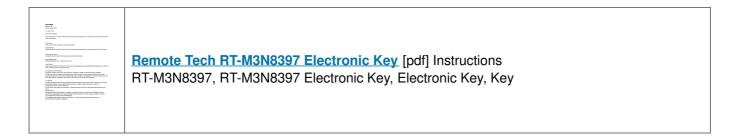

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.