

Remote GV16 Smart Key



Remote GV16 Smart Key User Manual

[Home](#) » [Remote](#) » Remote GV16 Smart Key User Manual 

Contents

- [1 Remote GV16 Smart Key](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 FCC COMPLIANCE STATEMENT](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Remote

Remote GV16 Smart Key



Product Information

Specifications:

- **FCC ID:** 2AOKM-GV16
- **IC:** 24223-GV16
- **Model:** RT-YOGO2
- **Part Numbers:** RT-G8860, RT-G6300, RT-G8851, RT-G8852

Product Usage Instructions

- **Lock Button:**
 - Press the LOCK button to lock all the doors. Once pressed, exterior lights flash, doors, and fuel fill door lock, and the security system sets. Pressing twice within 5 seconds after the first push will flash exterior lights, sound the beeper, and verify the security system is set.
- **Unlock Button:**
 - Press the UNLOCK button to unlock the driver's door. Pressing again within 5 seconds unlocks the other doors. Press once to flash exterior lights and unlock the driver's door and fuel-fill door. Press twice to unlock all doors.
- **Trunk Button:**
 - Press the trunk release button for approximately one second to unlock and open the trunk.
- **Hatch Button:**
 - Press the Hatch release button for approximately one second to unlock and open the Hatch.
- **Panic Button:**
 - Press the PANIC button to activate the alarm, sounding the horn and flashing the hazard lamp. Press any button on the electronic key to stop the alarm.
- **Remote Start Button:**
 - Press the remote start button twice within 5 seconds to enter Remote Start mode for a 15-minute cycle.

Press and release the button once to exit Remote Start mode.

FAQs

- **Q: How do I reset my electronic key if it stops working?**

- **A:** If your electronic key stops working, try replacing the battery first. If the issue persists, contact customer support for further assistance.

- **Q: Can I program multiple vehicles to respond to the same electronic key?**

- **A:** No, each electronic key is typically programmed to work with a specific vehicle. Attempting to use it with other vehicles may not yield the desired results.

FCC ID:2AOKM-GV16

IC :24223-GV16

MODEL:RT-YOGO2

P/N: RT-G8860, RT-G6300, RT-G8851, RT-G8852 This remote has a lock, unlock, Trunk, Remote Start, Hatch, and panic

buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

LOCK Button:

When you press the LOCK button, it locks all the doors.

Once:

Some exterior lights flash, all the doors and fuel fill door locks, and the security system sets.

Twice:(within five seconds after the first push):

Some exterior lights flash, the beeper sounds and verifies the security system is set.

UNLOCK Button:

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

Once:

Some exterior lights flash twice, and the driver's door and fuel fill door unlocks

Twice:

Some exterior lights flash twice, and the remaining doors unlock.

TRUNK Button:

Press the trunk release button for approximately one second to unlock and open the trunk

Hatch Button:

Press the Hatch release button for approximately one second to unlock and open the Hatch

PANIC Button:

When you press the PANIC button, the vehicle will start sounding the horn and flushing the hazard lamp. To stop the alarm, press any button on the electronic key.

REMOTE START Button:

Press the remote start button twice within 5 seconds. The vehicle will stay in the Remote Start mode for a 15-minute cycle. Press and release the remote start button once to exit Remote Start mode.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING:

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device

Documents / Resources

	Remote GV16 Smart Key [pdf] User Manual GV16 Smart Key, GV16, Smart Key, Key
---	---

References

- [User Manual](#)

