

Remote RT Series Smart Key User Manual

[Home](#) » [Remote](#) » Remote RT Series Smart Key User Manual 

Remote RT Series Smart Key User Manual



This remote has lock, unlock, power back door, Remote Start, panic buttons; you can open or close the vehicle with the remote transmitter.

Contents

- [1 LOCK Button](#)
- [2 UNLOCK Button](#)
- [3 LIFT GATE Button](#)
- [4 LIFT Glass Buttons](#)
- [5 REMOTE START Button](#)
- [6 PANIC Button](#)
- [7 FCC COMPLIANCE STATEMENT](#)
- [8 IC WARNING](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

LOCK Button

When you press the LOCK button, it locks all the doors

UNLOCK Button

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

LIFT GATE Button

Pressing the LIFTGATE button twice on the remote opens and closes the LIFTGATE.

LIFT Glass Buttons

Pressing LIFT Glass buttons twice within five seconds on the remote opens and closes the LIFT Glass.

REMOTE START Button

Press the remote start button twice within 5 seconds. The vehicle will stay in the Remote Start mode for a 15-minute cycle. Press and release remote start button once to exit Remote Start mode.

PANIC Button

When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp. To stop the alarm, press any button on the electronic key.

FCC COMPLIANCE STATEMENT



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

Documents / Resources

	<p>Remote RT Series Smart Key [pdf] User Manual G4EABC, 2AOKM-G4EABC, 2AOKMG4EABC, RT-G8796E, RT-G9177E, RT-G8414E, RT-G8771E, RT-G1090E, RT-G9636E, RT-G5728E, RT-G6667E, RT-G1629E, Smart Key, RT Series Smart Key, Key</p>
	<p>Remote RT Series Smart Key [pdf] User Manual G2EBC, 2AOKM-G2EBC, 2AOKMG2EBC, RT-G8512E, RT-G8538E, RT-G8516E, RT-G1382E, RT Series Smart Key, RT Series, Smart Key, Key</p>