

PROGRAM/CODE A **TILTAMATIC**



RemotePro Seip Coding Instructions


[Home](#) » [RemotePro](#) » RemotePro Seip Coding Instructions 

Contents

- [1 RemotePro Seip Coding](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)



RemotePro Seip Coding

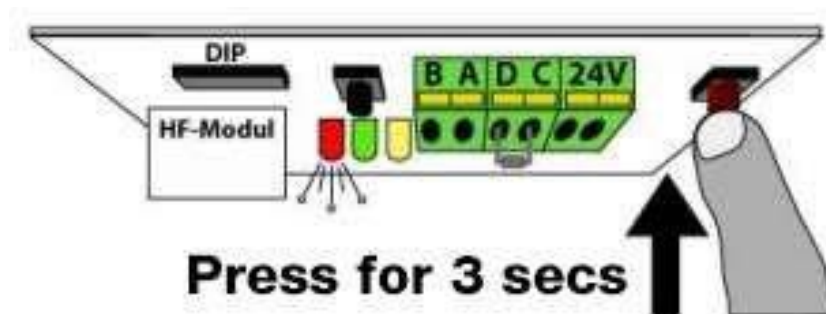

1. Depending on your motor's model you may need to remove a screw to allow the hinged cover to open. Once open locate the RED push-button which is located on the main circuit board panel.
2. Press this button for approximately 3-5 seconds until the LED indicator light begins to flash. Once flashing this indicates that your motor has successfully entered learn mode.
3. On the new remote, press and hold any button (should only take about 1-2 seconds) that you wish to operate the door. The LED on the motor should stop flashing once the remote has been programmed.

www.remotepro.com.au



swallowed or placed inside any part of the body.

[illegible]