



# RemoteTech RT-CYZ4B 4-Button Remote Head Electronic Key User Manual

[Home](#) » [RemoteTech](#) » RemoteTech RT-CYZ4B 4-Button Remote Head Electronic Key User Manual 

## Contents

- [1 RemoteTech RT-CYZ4B 4-Button Remote Head Electronic Key](#)
- [2 Electronic Key](#)
- [3 LOCK Button:](#)
- [4 UNLOCK Button:](#)
- [5 PANIC Button:](#)
- [6 LIFTGATE Button:](#)
- [7 TRUNK Button:](#)
- [8 REMOTE START Button:](#)
- [9 FLIPPER GLASS Button:](#)
- [10 FCC COMPLIANCE STATEMENT:](#)
- [11 IC WARNING:](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)



**RemoteTech RT-CYZ4B 4-Button Remote Head Electronic Key**



## **Electronic Key**

- FCC ID: 2AOKM-CYV15
- IC: 24223- CYV15
- MODEL: RT-CYZ3B, RT-CYZ4B, RT-CYZ5B, RT-CYZ7B, RT-CYZ6B

This remote has a lock, unlock, panic, and depending on the style, one of the following buttons – Remote Start or Trunk or Liftgate or Flipper Glass buttons.

### **LOCK Button:**

When you press the LOCK button, it locks all the doors.

### **UNLOCK Button:**

To unlock the driver's door, press and release the UNLOCK button on the remote once. To unlock all doors press UNLOCK button twice.

### **PANIC Button:**

When you press and hold the PANIC button for at least one second and then release it, the vehicle will start sounding the horn and flashing the park lamps. To stop the alarm, press Panic button again on the remote.

### **LIFTGATE Button:**

Pressing the LIFTGATE button twice on the remote opens and closes the hatch.

**TRUNK Button:**

Pressing the TRUNK button twice on the remote opens and closes the trunk.

**REMOTE START Button:**

Press the remote start button twice within 5 seconds. The vehicle will stay in the Remote Start mode for a 15-minute cycle. Press and release remote start button once to exit Remote Start mode.

**FLIPPER GLASS Button:**

Pressing the FLIPPER GLASS button twice on the remote opens and closes the liftgate flipper glass.

**FCC COMPLIANCE STATEMENT:**


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
  - 2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IC WARNING:**

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

**Documents / Resources**

	<p><a href="#">RemoteTech RT-CYZ4B 4-Button Remote Head Electronic Key</a> [pdf] User Manual CYV15, 2AOKM-CYV15, 2AOKMCYV15, RT-CYZ3B, RT-CYZ4B, RT-CYZ5B, RT-CYZ7B, RT-CYZ6B, 4-Button Remote Head Electronic Key, RT-CYZ4B 4-Button Remote Head Electronic Key</p>
---	--