



# RemoteTech RT-HK4F11 Electronic Key User Manual

[Home](#) » [RemoteTech](#) » RemoteTech RT-HK4F11 Electronic Key User Manual 

## Contents

- [1 RemoteTech RT-HK4F11 Electronic Key](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 BUTTON FUNCTION](#)
- [5 FCC COMPLIANCE STATEMENT](#)
- [6 Documents / Resources](#)

## RemoteTech

### RemoteTech RT-HK4F11 Electronic Key



## Product Information

- FCC ID: 2AOKM-HK14
- IC: 24223-HK14
- Model: RT-HK4F11
- Part Numbers:
  - RT-D5310
  - RT-G2010
  - RT-G2500
  - RT-G2000
  - RT-D3110
  - RT-D3100

## Product Usage Instructions

This electronic key remote provides the following functions:

- LOCK Button: Pressing this button locks all the doors of the vehicle.
- UNLOCK Button: Pressing this button unlocks the driver's door. Pressing it again within 5 seconds unlocks the other doors.
- Liftgate Unlock Hold Button: Press and hold this button to open the trunk or hatch if the vehicle is equipped with a power liftgate.
- PANIC HOLD Button: Pressing this button activates the alarm system, causing the vehicle to sound the horn and flash the hazard lamps. To stop the alarm, press any button on the electronic key.

### Please note the following:

- This device complies with part 15 of the FCC Rules.
- Operation is subject to the following conditions:
  - This device may not cause harmful interference.
  - This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## User's Manual Electronic Key

- **FCC ID:** 2AOKM-HK14
- **IC:** 24223-HK14
- **MODEL:** RT-HK4F11

### PART NUMBER:

RT-D5310, RT-G2010, RT-G2500, RT-G2000, RT-D3110, RT-D3100

This remote has lock, unlock, Liftgate Unlock Hold Button and panic buttons; you can lock and unlock the vehicle doors and trunk/hatch with the remote transmitter.

## BUTTON FUNCTION

### **LOCK Button:**

When you press the LOCK button, it locks all the doors.

### **UNLOCK Button:**

Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.

### **Liftgate Unlock Hold Button:**

Press and Hold. Will open if equipped with power liftgate

### **PANIC HOLD Button:**

When you press the PANIC button, the vehicle will start sounding the horn and flashing the hazard lamp. To stop the alarm, press any button on the electronic key.

## FCC COMPLIANCE STATEMENT


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference
  2. this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **IC WARNING:**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

## Documents / Resources

	<p><a href="#">RemoteTech RT-HK4F11 Electronic Key</a> [pdf] User Manual RT-HK4F11, RT-D5310, RT-G2010, RT-G2500, RT-G2000, RT-D3110, RT-D3100, RT-HK4F11 Electronic Key, RT-HK4F11, Electronic Key, Key</p>
---	--