

RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit



RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit User Guide

[Home](#) » [RENISHAW](#) » RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit User Guide 

Contents

- 1 RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit
- 2 general information
- 3 Warranty
- 4 Packaging
- 5 HCU2 product compliance
- 6 FCC STATEMENT
- 7 introduction
- 8 installation
- 9 Using
- 10 Teach signal
- 11 Probe functions
- 12 error reporting
- 13 CONTACT
- 14 Documents / Resources
 - 14.1 References



RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit



general information

© 2015 - 2023 Renishaw plc. All rights reserved.

ORIGINAL LANGUAGE VERSION

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language by any means, without the prior written permission of Renishaw.

Disclaimer

WHILE CONSIDERABLE EFFORT WAS MADE TO VERIFY THE ACCURACY OF THIS DOCUMENT AT PUBLICATION, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS AND LIABILITY, HOWSOEVER ARISING, ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW.

RENISHAW RESERVES THE RIGHT TO MAKE CHANGES TO THIS DOCUMENT AND TO THE EQUIPMENT, AND/OR SOFTWARE AND THE SPECIFICATION DESCRIBED HEREIN WITHOUT OBLIGATION TO PROVIDE NOTICE OF SUCH CHANGES.

Trade marks

RENISHAW®, the probe symbol and REVO® are registered trademarks of Renishaw plc.

Renishaw product names, designations and the mark 'apply innovation' are trademarks of Renishaw plc or its subsidiaries.

Other brand, product or company names are trademarks of their respective owners.

WEEE



The use of this symbol on Renishaw products and/or accompanying documentation indicates that the product should not be mixed with general household waste upon disposal. It is the responsibility of the end user to dispose of this product at a designated collection point for waste electrical and electronic equipment (WEEE) to enable reuse or recycling. Correct disposal of this product will help to save valuable resources and prevent potential negative effects on the environment. For more information, please contact your local waste disposal service or

Renishaw distributor.

Warranty

- Unless you and Renishaw have agreed and signed a separate written agreement, the equipment and/or software are sold subject to the Renishaw Standard Terms and Conditions supplied with such equipment and/or software, or available on request from your local Renishaw office.
- Renishaw warrants its equipment and software for a limited period (as set out in the Standard Terms and Conditions), provided that they are installed and used exactly as defined in associated Renishaw documentation. You should consult these Standard
- Terms and Conditions to find out the full details of your warranty.
- Equipment and/or software purchased by you from a third-party supplier is subject to separate terms and conditions supplied with such equipment and/or software. You should contact your third-party supplier for details.

Care of equipment

Renishaw probes and associated systems are precision tools used for obtaining precise measurements and must therefore be treated with care.

Changes to Renishaw products

Renishaw reserves the right to improve, change or modify its hardware or software without incurring any obligations to make changes to Renishaw equipment previously sold.

Company registration details

Renishaw plc. Registered in England and Wales. Company no: 1106260. Registered office: New Mills, Wotton-under-Edge, Gloucestershire, GL12 8JR, UK.

Packaging

To aid end-user recycling and disposal the materials used in the different components of the packaging are stated here:

Packaging component	Material	94/62/EC code	94/62/EC number
Outer box	Corrugated fibreboard	PAP	20
Packaging insert	Corrugated fibreboard	PAP	20
Plastic bags	Low-density polyethylene bag	LDPE	4

HCU2 product compliance

EU declaration of conformity

Contact Renishaw plc or visit www.renishaw.com/EUCMM for the full EU declaration.

UK declaration of conformity

Contact Renishaw plc or visit www.renishaw.com/UKCMM for the full UK declaration.

EMC conformity

This equipment must be installed and used under this installation guide. This product is intended for industrial use only and should not be used in a residential area or connected to a low voltage power supply network which supplies buildings used for residential purposes.

FCC STATEMENT

Information to user (47 CFR 15.105)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

Information to user (47 CFR 15.21)

The user is cautioned that any changes or modifications not expressly approved by Renishaw plc or authorised representative could void the user's authority to operate the equipment.

Equipment label (47 CFR 15.19)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

ICES-001 (Canada only)

This ISM device complies with Canadian ICES-001(A) / NMB-001(A).

Cet appareil ISM est conforme à la norme ICES-001 A / NMB-001 A du Canada.

REACH regulation

Information required by Article 33 1 of Regulation EC No. 1907/2006 "REACH" relating to products containing substances of very high concern (SVHCs) is available at: www.renishaw.com/REACH

China RoHS

Contact Renishaw plc or visit www.renishaw.com/ChinaRoHSCMM for the full China RoHS tabulation.

**introduction**


- The HCU2 is a hand control unit for use with all Renishaw PH10 motorised probe head systems.



- HCU2 enables the probe head to be used in a manual mode and is invaluable for component set-up, operator-controlled inspection and teach cycle programming. HCU2 has a two-speed action, with a choice of jog or sweep moves. The LCD screen provides head angle and system status information as well as error analysis.
- A transmit button is provided for teach cycle programming. The unit comes complete with probe DAMPING and probe reset functions. The unit is supplied with a 5 m long cable, which can be extended to up to 25 m if required.

installation

- HCU2 is plugged into the 9-way 'D' connector marked HCU on the rear panel of the motorised probe head controller as shown below.

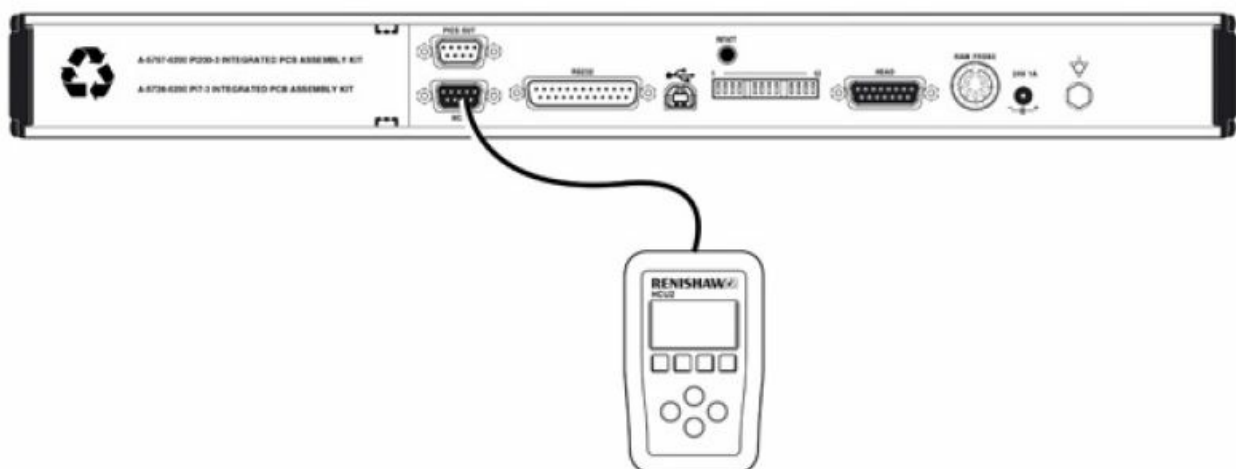

Using

Layout



Key	Description
1	Display
2	Beep on / off button
3	Probe function buttons (see ' Probe functions ')
4	Direction buttons
5	Teach button

Manual and automatic modes

Manual and automatic modes are selected by the CMM computer.

Manual mode


- In manual mode, the HCU2 is used to control the motorised head, to set probe functions or to send teach point commands.
- The display indicates MANUAL.
- If the HCU2 is connected to the motorised head controller before power is applied, the system will power up in manual mode.

Automatic mode

- In automatic mode, the motorised head system is under control of the CMM computer.
- The display indicates AUTO.
- The HCU2 displays information, but it is not possible to use it to move the head or set probe functions.
- If the HCU2 is not connected to the motorised head controller when power is applied, the system will enter automatic mode.

Jog move


- This feature is used to move the probe head in single steps.
- Press and immediately release the appropriate direction key.

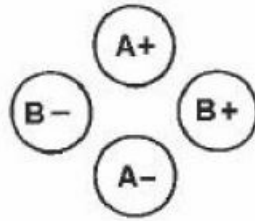

- The head will unlock and the LCD will display ACTIVE. The head will rotate by a single 7.5° step.
- If the direction key is pressed again before the head begins to lock, the head will rotate by another 7.5° step.
- If no further keys are pressed, the head will lock, the LCD will display READY and the motorised head will be ready for measurement.

Sweep move

- This feature is used to move the probe head in one continuous movement.
- Press and hold down the appropriate direction key.

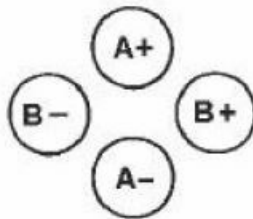

- The head will unlock, and the LCD will display ACTIVE. The head will rotate by a single 7.5° step.
- After a short delay the head will continue to rotate in this direction until either the key is released or the axis limit is reached.
- There will be another short delay, then the head will lock and the LCD will display READY.

Teach signal



- The T (transmit) key is used to send a signal to the CMM computer.
- The action and use of this signal are dependent on the integration of this function by your CMM supplier.
- When the operator is “teaching” the CMM a sequence of positions to follow, the T key is pressed to signal that a required position has been reached. It can also be used to instruct the CMM computer to memorise the angle of the probe head during a teach cycle.
- Please refer to the relevant CMM-specific documentation provided by your CMM supplier for details of the use

of the T key.

Probe functions

Probe reset



NOTE: The probe reset function is only available if it has been integrated by your CMM supplier. Some Renishaw probe interfaces have a probe reset button mounted on the front panel. The function of this button is to reset the probe sensor to a seated condition, for instance following a manual stylus change. This button has been reproduced on the HCU2 for ease of access. Probe reset is only available from the HCU2 if the motorised probe head is in manual mode. Please refer to your probing system user's guide or to your CMM supplier for details of the use of this feature. **CAUTION:** This button should only be pressed when the probe is physically seated and clear of the workpiece.

Probe DAMPing



- Probe DAMPing is a feature of your Renishaw probe interface which reduces the sensitivity of the probing system and helps to reduce unwanted triggering caused by CMM acceleration or vibration during position moves.
- It is normally used by the CMM computer to filter unwanted triggers during automatic position moves.
- The HCU2 enables probe DAMPing to be set manually to eliminate unwanted triggers during manual position moves. Probe DAMPing is only available from the HCU2 if the motorised head system is in manual mode. In automatic mode probe DAMPing is controlled from the CMM application software and motorised head controller and this key has no effect.
- The DAMP key toggles between probe DAMPing ON and OFF.

Probe DAMPing display summary

System mode	Probe DAMPing	HCU2 LCD display
Manual or automatic	OFF	
Manual or automatic	ON	DAMPED

CAUTION: Probe DAMPing must be switched off when measurement points are being taken. The use of probe DAMPing during measurement will significantly affect measurement accuracy.

Audible key press confirmation



- It is possible to switch on an audible indicator which emits a tone when any key is pressed. The Audible key toggles between audible tone ON and OFF.
- The HCU2 powers up with the audible indicator OFF.

Effect of PICS STOP

If a PICS STOP signal is sent to the motorised head system by the CMM controller while it is in manual mode, the motorised head will react as follows:

Manual mode STOP reactions

Action	Reaction	Removal of STOP
STOP sent while direction key on HCU2 is being pressed.	Continuous head movement immediately disabled. Head will continue to move in single steps. Head will lock up as normal when movement key released.	Continuous movement enabled.
The direction key on HCU2 pressed after STOP has been sent.	Single step manual movement only. Head will lock up as normal when movement key released.	Continuous movement enabled.

error reporting

The HCU2 LCD display gives information on head and system errors.

Datum error

Fault	The motorised probe head has not locked up to the required level of accuracy.
Action	Refer to your motorised head user's guide for further information concerning this error condition.

Obstruct error

Fault	The motorised probe head has been obstructed while rotating to the required position.
Action	Refer to your motorised head user's guide for further information concerning this error condition.

Overload error

Fault	The motorised probe head head has been overloaded during a machine quill move.
Action	Refer to your motorised head user's guide for further information concerning this error.

Head not present

Fault	The motorised head is not electrically connected to the probe head controller.
Action	Check the head is electrically connected. Check cable integrity. Contact your CMM supplier for further assistance.

HCU2 not recognised

Fault	There is a communications error between the HCU2 and the motorised head controller.
Action	Check cable connections. Contact your Renishaw representative for further assistance.

No response from controller

Fault	There is a communications error between the HCU2 and the probe head controller.
Action	Check the cable connections. Return both units to your Renishaw representative for service.

System error

Fault	Internal motorised head system failure.
Action	No user recovery action. Return motorised head to your Renishaw representative for service.


CONTACT

Renishaw plc

- New Mills, Wotton-under-Edge
- Gloucestershire, GL12 8JR
- United Kingdom
- T +44 (0)1453 524524
- F +44 (0)1453 524901
- www.renishaw.com/cmmsupport

For worldwide contact details, please visit our main website at www.renishaw.com/contact.

Documents / Resources

	<p>RENISHAW PHC10-3 PLUS 3D Touch Probe Control Unit [pdf] User Guide PHC10-3 PLUS 3D Touch Probe Control Unit, PHC10-3 PLUS, 3D Touch Probe Control Unit, Probe Control Unit, Control Unit</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.