



RENOGY Bt-2 Bluetooth Module User Manual

[Home](#) » [Renogy](#) » RENOGY Bt-2 Bluetooth Module User Manual



BT-2
BLUETOOTH
MODULE
Bluetooth Module for Solar Charge Controllers

Version 1.0



Contents [[hide](#)]

- [1 General Information](#)
- [2 Key Features](#)
- [3 Identification of Parts](#)
- [4 Operation](#)
- [5 Technical Specifications](#)
- [6 To Download App](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

General Information


The Renogy BT-2 is a new generation of Bluetooth modules for Renogy solar charge controllers, smart lithium batteries, and inverter chargers. Powered by its RJ45 communication port, the BT-2 provides wireless monitoring of the system data and allows users to change parameters through the Renogy BT/Renogy DCHome smartphone App.

Key Features

- Wirelessly monitor and control compatible solar charge controllers via Bluetooth
- Connects to our user-friendly smart phone App, Renogy BT/Renogy DCHome, to keep track of your system
- Embedded exclusive Bluetooth chip with high efficiency and low energy consumption
- Bluetooth 4.2 and BLE technology provides fast and uninterrupted communication
- Powered directly through RJ45 communication port
- Signal range up to 82ft

- Two LED lights indicate the power and Bluetooth connection condition

Identification of Parts

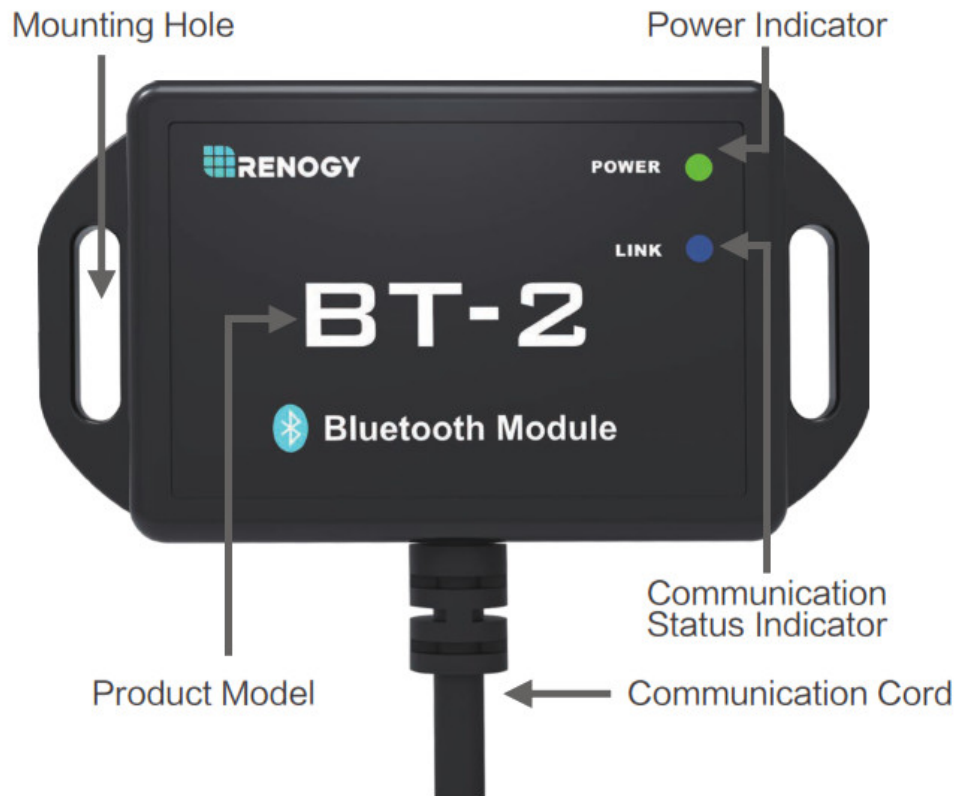

Operation

Connection

Connect the BT-2 Bluetooth module to any Renogy solar charge controller, smart lithium battery, and inverter charger with an RJ45 port and RS485 communication protocol.



Communication status indicator

Green Power Indicator:

Power Indicator	Status	Note
	Solid (Green)	Power On
	Off	Power Off

Blue Communication Indicator:

Link Indicator	Status	Note
	Flashing (Blue)	Communicating
	Off	Stand by

Compatible Models

Compatible Models	All Renogy Products with RJ45 Port
Communication Protocol	RS485
Port Type	RJ45

Technical Specifications

Description	Parameter
Model	BT-2
Input Voltage	5V or 12V
Standby Power Consumption	0.04W
Operating Power Consumption	0.05W
Communication Range	≤82ft
Serial Baud Rate	Fixed Baud Rate 9600bps
Communication Protocol	RS485
Port Type	RJ45
Cable Length	5.00m (16.4ft)
Dimensions	67.3 X 35 X 14mm
	2.65 X 1.38 X 0.55in
Installation Dimensions	67.3 ϕ3.5mm 2.66 ϕ 0.14in
Operation Temperature	-20 °C~85 °C -4°F to 185°F
Protection Grade	IP54
Weight	130g(4.58oz)

To Download App

1. The Android version of the Renogy BT APP is available to download on Renogy.com and the Google Play Store.

In the Google Play Store, simply search “Renogy BT” or “Renogy DCHome” in App store to download.

2. For IOS version, simply search “Renogy BT” or “Renogy DCHome” in App store to download.

The admin password in App is 135790123

3. How to Connect via Bluetooth

Please ensure your device’s Bluetooth setting is turned on.

Select:

Configuration > Search Devices > Device

The green indicator on the BT-2 will turn on once it has successfully connected to the power.

The blue indicator on the BT-2 will blink once it has successfully connected and during communication.



[RENOPY.COM](https://www.renogy.com)

Renogy reserves the right to change the contents of this manual without notice.

US

2775 E Philadelphia St, Ontario, CA 91761, USA

909-287-7111

www.renogy.com

support@renogy.com

CA

<https://ca.renogy.com>

supportca@renogy.com

UK

<https://uk.renogy.com>

supportuk@renogy.com

Documents / Resources

	RENogy Bt-2 Bluetooth Module [pdf] User Manual Bt-2 Bluetooth Module
	RENogy BT-2 Bluetooth Module [pdf] User Manual BT-2, Bluetooth Module
	RENogy BT-2 Bluetooth Module [pdf] User Manual BT-2, Bluetooth Module

References

- [Renogy® Official- offer all off grid solar system products](#)
- [Renogy® Official- offer all off grid solar system products](#)
- [Solar Power Kits & Equipment for Sale | Renogy Australia](#)
- [Renogy® Canada solar off-grid items, Canadian solar panels](#)
- [alle Produkte für netzunabhängige Solarsysteme| Renogy DE](#)
- [Top off-grid solar kits, lithium batteries supplies | Renogy UK](#)
- [RENogy | _____](#)
- [ç<-ç««âž<â²âé™1/2â...%ç™ºé»»ã.ã.1ãf†ãf â°.é-€ | RENOGY JAPANã.ãf³ãf©ã.ãf³ã.ãfšãffãf—](#)