

reolink Argus Eco Solar Power Security Camera User Guide

Home » reolink » reolink Argus Eco Solar Power Security Camera User Guide 🖺



Contents


- 1 reolink Argus Eco Solar Power Security Camera
- 2 What's in the Box
- **3 Camera Introduction**
- 4 Set up the Camera
- **5 Charge the Battery**
- 6 Install the Camera
- 7 Mount the Camera to Wall
- 8 Attach the Camera to a Tree
- 9 Notes on PIR Motion Sensor
- 10 Important Notes on Reducing False Alarms
- 11 Important Notes on Rechargeable Battery **Usage**
- 12 Troubleshooting
- 13 Specifications
- 14 Notification of Compliance
- 15 Correct Disposal of This Product
- **16 Limited Warranty**
- 17 Documents / Resources
- **18 Related Posts**



reolink Argus Eco Solar Power Security Camera




What's in the Box

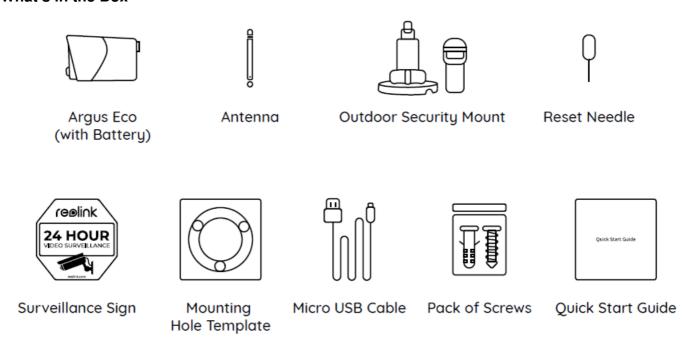

Camera Introduction

- Built-in Mic
- Lens
- Status LED
- · Daylight Sensor

- · Built-in PIR Sensor
- · Micro SD Card Slot
- · Battery Status LED
- Speaker
- · Reset Hole
- Power Switch
- Micro USB Port
- Antenna
- Press the reset button with a
- pin to restore the camera to factory settings.
- Always keep the rubber plug closed firmly

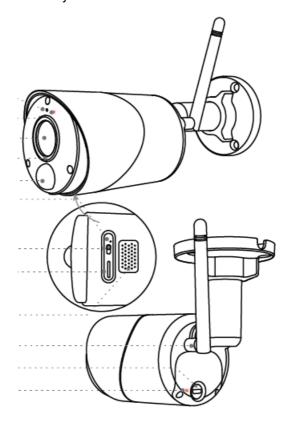

Different states of the status LED:

• Red Light: WiFi connection failed

• Blue Light: WiFi connection succeeded

· Blinking: Standby status

• On: Working status

Set up the Camera

Download and launch the Reolink App or Client software, and follow the onscreen instructions to finish initial setup.

On Smartphone

Scan to download the Reolink App.





On PC

Download path of the Reolink Client: Go to https://reolink.com > Support > App & Client.

Charge the Battery

It's recommended to fully charge the battery before mounting the camera outdoors.





- Charge the battery with a power adapter. (not included)
- Charge the battery with Reolink Solar Panel (Not included if you only purchase the camera).
- For better weatherproof performance, please always cover the USB charging port with the rubber plug after charging the battery.




Charging indicator:

• Orange LED: Charging


• Green LED: Fully charged

Install the Camera

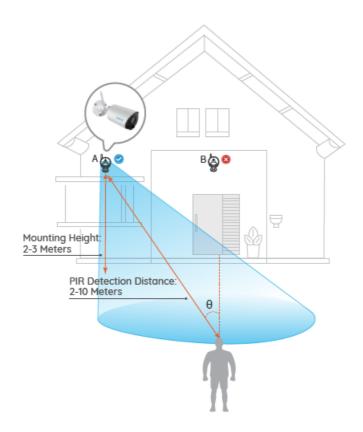

- Install the camera 2-3 meters (7-10 ft) above the ground. This height maximizes the detection range of the PIR motion sensor.
- For better motion detection performance, please install the camera angularly.NOTE: If a moving object approaches the PIR sensor vertically, the camera may fail to detect motion.


Mount the Camera to Wall

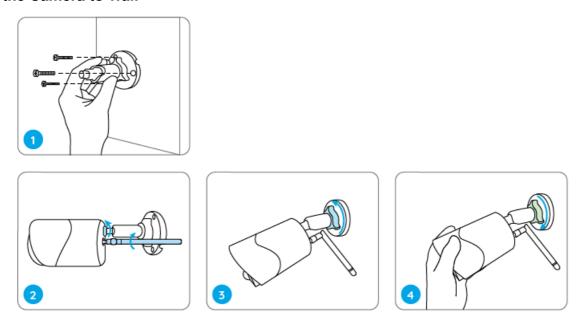



- Drill holes in accordance with a mounting hole template and screw the security mount into the wall. If you are mounting the camera on any hard surface, insert plastic anchors into the holes first.
- Screw the antenna to the camera and then install the camera to the security mount.
- Loose the adjusting knob on the mount and adjust the camera to the proper direction.

· Stiffen the adjustment knob to lock the camera.

Attach the Camera to a Tree

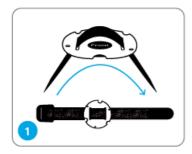

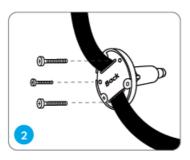

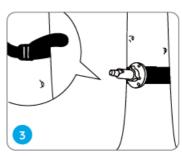

- 1. Thread the provided strap to the mounting plate.
- 2. Attach the plate to the security mount with the smaller screws.
- 3. Fasten the security mount to a tree.
- 4. Install the camera and adjust the camera angles as instructed in step 3 in the previous installation guide.

Notes on PIR Motion Sensor

PIR Sensor Detection Distance

The PIR detection range can be customized to meet your specific needs. You can refer to the following table to set it up in Device Settings via Reolink App.

Canaitivity	Value	Detection Distance
Sensitivity	value	(For moving and living objects)
Low	0 – 50	Up to 5 meters (16ft)
Mid	51 – 80	Up to 8 meters (26ft)
High	81 – 100	Up to 10 meters (33ft)

NOTE: Higher sensitivity offers longer detection distance but it may lead to more false alarms. It's recommended to set up the sensitivity level to "Low" or "Mid" when you install the camera outdoors.

Important Notes on Reducing False Alarms

- Do not face the camera towards any objects with bright lights, including sunshine, bright lamp lights, etc.
- Do not place the camera too close to a place with heavy traffic. Based on our numerous tests, the recommended distance between the camera and the vehicle would be 16 meters (52ft).
- Do not place the camera near outlets, including the air conditioner vents, humidifier outlets, the heat transfer vents of projectors, etc.
- Do not install the camera at places with strong wind.
- Do not face the camera towards a mirror.
- Keep the camera at least 1 meter away from any wireless devices, including WiFi routers and phones in order to avoid wireless interference.

Important Notes on Rechargeable Battery Usage

Reolink Argus Eco is not designed for 24/7 full capacity running or around-the-clock live streaming. It's designed to record motion events and remotely view live streaming only when you need it. Learn useful tips on how to extend the battery life in this post: https://support.reolink.com/hc/en-us/articles/360006991893

- 1. Charge the rechargeable battery with a standard and high-quality DC 5V/9V battery charger or Reolink solar panel. Do not charge the battery with solar panels from any other brands.
- 2. Charge the battery when temperatures are between 0°C and 45°C and always use the battery when temperatures are between -20°C and 60°C.
- 3. Keep the USB charging port dry, clean and free of any debris and cover the USB charging port with the rubber plug when the battery is fully charged.
- 4. Do not charge, use or store the battery near any ignition sources, such as fire or heaters.
- 5. Do not disassemble, cut, puncture, short-circuit the battery, or dispose of the battery in water, fire, microwave ovens and pressure vessels.
- 6. Do not use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any ways. If the battery is being used or charged, turn off the power switch or remove the charger immediately, and stop using it.
- 7. Always follow the local waste and recycle laws when you get rid of the used battery.

Troubleshooting

The camera is not Powering on

If your camera is not powering on, please apply the following solutions:

- Make sure the power switch is turned on.
- Charge the battery with a DC 5V/2A power adapter. When the green light is on, the battery is fully charged.
- Remove the protective film from the camera lens.
- Wipe the camera lens with a dry paper/towel/tissue.
- Vary the distance between your camera and the mobile phone so that the camera can focus better.
- Try to scan the QR code under sufficient lighting.
- Please make sure the WiFi band is 2.4GHz, the camera does not support 5GHz.
- Ensure that you have entered the correct WiFi password.
- Put the camera closer to your router to ensure a strong WiFi signal.
- Change the encryption method of the WiFi network to WPA2-PSK/WPA-PSK (safer encryption) on your router interface.
- Change your WiFi SSID or password and make sure that SSID is within 31 characters and password is within 64 characters.
- Set your password using only the characters available on the keyboard.

Specifications

Video

Video Resolution: 1080p HD at 15 frames/sec

• Field of View: 100°

diagonal Night Vision: Up to 10m (33 ft)

PIR Detection & Alerts

• PIR Detection Distance: Adjustable/up to 10m (33 ft)

• PIR Detection Angle: 100° horizontal

Audio Alert: Customized voice-recordable alerts

· Other Alerts: Instant email alerts and push notifications

General

• Operating Temperature: -10°C to 55°C (14°F to 131°F)

• Weather Resistance: IP65 certified weatherproof

Size: 71 x 186 mm

• Weight (Battery included): 320g (11.2 oz)

Notification of Compliance

FCC Compliance Statement

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: this device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation. For more information, visit: https://reolink.com/fcc-compliance-notice/. Reolink declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Correct Disposal of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Limited Warranty

This product comes with a 2-year limited warranty that is valid only if purchased from Reolink Official Store or a Reolink authorized reseller. Learn more:

https://reolink.com/warranty-and-return/. NOTE: We hope that you enjoy the new purchase. But if you are not satisfied with the product and plan to return, we strongly suggest that you reset the camera to factory default settings and take out the inserted SD card before returning.

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at https://reolink.com. Keep out of reach of children.

End-User License Agreement

By using the Product Software that is embedded on the Reolink product, you agree to the terms of this End User License Agreement ("EULA") between you and Reolink. Learn more: https://reolink.com/eula/.

ISED Radiation Exposure Statement

This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Documents / Resources



reolink Argus Eco Solar Power Security Camera [pdf] User Guide Argus Eco, Solar Power Security Camera, Power Security Camera, Security Camera, Argus Eco, Camera

Manuals+,