

reolink Argus-Track Wi-Fi IP Camera



reolink Argus-Track Wi-Fi IP Camera User Guide

[Home](#) » [reolink](#) » reolink Argus-Track Wi-Fi IP Camera User Guide 

Contents

- [1 reolink Argus-Track Wi-Fi IP Camera](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 What's in the Box](#)
- [6 Camera Introduction](#)
- [7 Set up the Camera](#)
- [8 Charge the Camera](#)
- [9 Install the Camera](#)
- [10 Safety Instructions of Battery Usage](#)
- [11 Troubleshooting](#)
- [12 Specification](#)
- [13 Notification of Compliance](#)
- [14 Correct Disposal of This Product](#)
- [15 Limited Warranty](#)
- [16 Documents / Resources](#)
 - [16.1 References](#)
- [17 Related Posts](#)



reolink Argus-Track Wi-Fi IP Camera



Product Specifications

- **Model:** Argus Track
- **Series:** Argus Series B730
- **Variant:** Argus Track Plus
- **Power Source:** Battery-powered
- **Connectivity:** 2.4 GHz and 5 GHz Wi-Fi networks
- **Storage:** microSD card slot
- **Charging:** Power adapter or Reolink Solar Panel (sold separately)
- **Mounting Height:** 2-3 meters
- **PIR Detection Distance:** 2-10 meters

Product Usage Instructions

Set up the Camera:

1. Set up the Camera Using a Smartphone:

- **Step 1:** Download the Reolink App from the App Store or Google Play store.
- **Step 2:** Power on the camera using the power switch.
- **Step 3:** Launch the Reolink App, add the camera by scanning the QR code, and follow onscreen instructions.

2. Set up the Camera on PC (Optional):

- **Step 1:** Download and install the Reolink Client from the Reolink website.
- **Step 2:** Input the UID code of the camera in the Reolink Client to add it and complete setup.

Charge the Camera:

- It's recommended to fully charge the camera before installing it.
- **Charging Indicator:**

- **Orange LED:** Charging
- **Green LED:** Fully charged

Install the Camera:

• Notes on Camera Installation Position:

- Mounting Height: 2-3 Meters
- PIR Detection Distance: 2-10 Meters
- If a moving object approaches the PIR sensor vertically, the camera may fail to detect motion.

Mount the Camera:

1. Drill holes according to the mounting hole template and install the mounting bracket.
2. Attach the camera base to the bracket, align it properly, and lock it in place.
3. Tighten the bracket and camera base securely with screws.

Safety Instructions of Battery Usage:

The camera is designed for motion events recording and live feed viewing, not for continuous live streaming. Refer to tips on extending battery life on the Reolink Support website.

Frequently Asked Questions (FAQ)

• What do different LED colors indicate on the camera?

Red Light indicates WiFi connection failure, Blue Light indicates WiFi connection success, Blinking means standby status, and On means working status.

• How do I reset the camera to factory settings?

Press and hold the Reset Button for more than five seconds to reset the device.

• What is the recommended Wi-Fi network for connecting the camera?

The device supports both 2.4 GHz and 5 GHz networks, with a recommendation to connect to a 5 GHz network for better performance.

What's in the Box

Camera Introduction

1. Wide-Angle Lens
2. Indicator Light
3. Telephoto Lens
4. Daylight Sensor
5. Mic
6. Infrared Light
7. Spotlights
8. microSD Card Slot
9. Power Switch
10. Reset Button

* Press for more than five seconds to reset the device to factory settings. Speaker


11. USB-C Port
12. Back Cover
13. Screws for Installing the Back Cover

Different states of the status LED:

- **Red Light:** WiFi connection failed
- **Blue Light:** WiFi connection succeeded
- **Blinking:** Standby status
- **On:** Working status


Set up the Camera

Set up the Camera Using a Smartphone

- **Step 1** Scan to download the Reolink App from the App Store or Google Play store.
- **Step 2** Turn on the power switch to power on the camera.
- **Step 3** Launch the Reolink App, click the “” button in the top right corner to add the camera. Scan the QR code on the device and follow the onscreen instructions to finish initial setup.

NOTE: This device supports 2.4 GHz and 5 GHz Wi-Fi networks. It is recommended to connect the device to 5 GHz Wi-Fi for a better network experience.

Set up the Camera on PC (Optional)

- **Step 1** Download and install the Reolink Client: Go to <https://reolink.com> > Support > App&Client.
- **Step 2** Launch the Reolink Client, click the “” button, input the UID code of the camera to add it and follow the onscreen instructions to finish initial setup.

Charge the Camera

It's recommended to fully charge the camera before installing it.

Charging Indicator:

- **Orange LED:** Charging
- **Green LED:** Fully charged
- Charge the battery with a power adapter. (not included).
- Charge the battery with the Reolink Solar Panel (Not included if you only purchase the camera).
- For better weatherproof performance, please always cover the charging port with the rubber plug after charging the camera.

Install the Camera

Notes on Camera Installation Position

- Install the camera 2-3 meters (7-10 ft) above ground. This height maximizes the detection range of the PIR motion sensor.
- For effective detection, please install the camera angularly.
NOTE: If a moving object approaches the PIR sensor vertically, the camera may fail to detect motion.

Mount the Camera

1. Drill holes in accordance with the mounting hole template.
Install the mounting bracket with screws included in the package.
2. Attach the camera base to the bracket. Choose a proper direction for the camera and then align the bracket to the security mount and lock the camera in place by turning it clockwise.**NOTE:** Use the drywall anchors included in the package if needed.
3. Tighten the bracket and the camera base with a screw.
NOTE: To minimize the monitoring blind spot, the bracket is designed with a 10° inclination.

Safety Instructions of Battery Usage

(For Battery-Powered Cameras)

The camera is not designed for running 24/7 at full capacity or around-the-clock live streaming. It's designed to record motion events and remotely view live feed as needed. Learn useful tips on how to extend the battery life in this post:

How to Extend the Battery Life of Reolink Battery Powered Cameras – Reolink Support

1. Do not remove a built-in battery from the camera.
2. Charge the battery with a standard and high-quality DC 5V battery charger or Reolink solar panel. It's not compatible with solar panels from any other brands.
3. Charge the battery only if in temperatures between 0°C and 45°C. The battery is intended for use only in temperatures between -10°C and 55°C.
4. Keep the charging port dry, clean and free of any debris. Cover it with the rubber plug after the battery is fully charged.
5. Do not charge, use or store the battery next to areas that may become hot. Examples include, but are not limited to, on or near a space heater, cooking surface, cooking appliance, iron, radiator, or fireplace.
6. Do not use the battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
7. Always follow the local waste and recycling laws to dispose of used batteries.

Troubleshooting

• Camera is Not Powering On

If your camera is not powering on, please apply the following solutions:

- Make sure the power switch is turned on.
- Charge the battery with a DC 5V/2A power adapter. When the green light is on, the battery is fully charged.

If these won't work, please contact Reolink Support <https://support.reolink.com/>.

• Failed to Scan QR Code on Smartphone

If the camera cannot scan the QR code on your phone, please try the following solutions:

- Remove the protective film from the camera lens.
- Wipe the camera lens with a dry paper/towel/tissue.
- Vary the distance between your camera and the mobile phone so that the camera can focus better.
- Try to scan the QR code under sufficient lighting.

If these won't work, please contact Reolink Support <https://support.reolink.com/>.

Specification

- **Dimension:** L84mm*W85mm*H118mm
- **Weight (Battery included):**476g
- **Operating Temperature:** -10°C~ 55°C (14°F~131°F)

For more specifications, visit <https://reolink.com>

Notification of Compliance

CE Declaration of Conformity

Reolink declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and Directive 2014/30/EU.

UKCA Declaration of Conformity

Reolink declares that this product is in compliance with Radio Equipment Regulations 2017 and Electromagnetic Compatibility Regulations 2016.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Compliance Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic

Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

ISED Radiation Exposure statement

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

NOTE: Operation of 5150-5250 MHz is restricted to indoor use only in Canada.

Correct Disposal of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Limited Warranty

This product comes with a 2-year limited warranty that is valid only if purchased from Reolink Official Store or a Reolink authorized reseller. Learn more: <https://reolink.com/warranty-and-return/>.

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at reolink.com. Keep out of reach of children.

WiFi Operating Frequency

OPERATING FREQUENCY :


(the maximum conducted power) 2.4GHz: (For 2.4GHz camera only):

- 2.4 GHz: < 18.17dBm
- 5GHz:
- 5.2 GHz :< 11.63dBm
- 5.8GHz: < 11.80dBm

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products, <https://support.reolink.com>.

Documents / Resources

	reolink Argus-Track Wi-Fi IP Camera [pdf] User Guide Argus-Track Wi-Fi IP Camera, Argus-Track, Wi-Fi IP Camera, IP Camera, Camera
---	--

References

-  [Reolink Official: Security Cameras and Systems for Home & Business](#)

- [!\[\]\(eae20f1adff742df783f6f7e3bbe72d1_img.jpg\) **Reolink Official: Security Cameras and Systems for Home & Business**](#)
- [!\[\]\(43c6e08c5a1618d745b54da5c843274e_img.jpg\) **Warranty & Return – Reolink**](#)
- [!\[\]\(f5ee48910650695cea680b2433c1d60d_img.jpg\) **Reolink Support - Official Reolink Help Center**](#)
- [!\[\]\(da0f02caffeb5a74776a1d5d1892b059_img.jpg\) **Reolink Support - Official Reolink Help Center**](#)
- [**User Manual**](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.