

reolink FE-P Fisheye Security Camera Instruction Manual

Home » reolink » reolink FE-P Fisheye Security Camera Instruction Manual

Contents

- 1 reolink FE-P Fisheye Security
- Camera
- **2 Product Usage Instructions**
- 3 What's in the Box
- **4 Camera Introduction**
- **5 Connection Diagram**
- 6 Set up the Camera
- 7 Mount the Camera
- 8 Troubleshooting
- 9 Specifications
- 10 FCC Statements
- 11 Limited Warranty
- **12 Technical Support**
- **13 FAQ**
- 14 Documents / Resources
 - 14.1 References



reolink FE-P Fisheye Security Camera




Product Usage Instructions

- Download and Launch the Reolink App or Client software, and follow the onscreen instructions to finish the initial setup.
- The camera can be powered via a PoE-powering device such as a PoE injector, PoE switch, or Reolink NVR (not included in the package).
- Connect the camera to a Reolink NVR (not included) with an Ethernet cable.
- Connect the NVR to your router, and then power on the NVR.
- Attach the camera to the base and rotate the camera clockwise to lock it in position.
- If you want to remove the camera from the mount base, press the release mechanism and rotate the camera counterclockwise.
- Drill holes in accordance with the mounting hole template. Use the drywall anchors included in the package if needed.
- Secure the mount base to the ceiling with screws.
- Run the cable of the fisheye camera through the cable groove on the mount base, and rotate the camera clockwise to lock it in position. Fit the three mounting holes of the camera into the mount base.

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products: https://support.reolink.com.

What's in the Box

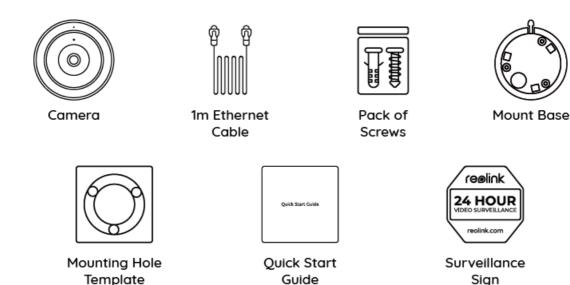


Sign


Camera Introduction

Template

- 1. Built-in Mic
- 2. Daylight Sensor
- 3. Lens
- 4. IR LEDs
- 5. Ethernet Port
- 6. Power Port

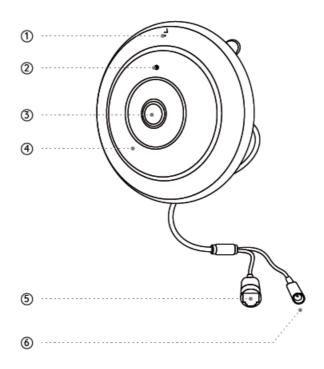

- 1. Micro SD Card Slot
 - Lift the rubber cover to access the microSD card slot.
- 2. Reset Button
 - Press and hold the reset button for 5s with a pin to restore factory settings.
- 3. Speaker

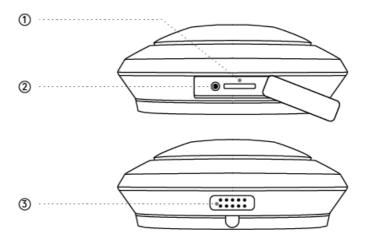


Connection Diagram

Before using the camera, please connect your camera as instructed below to finish the initial setup.

- 1. Connect the camera to a Reolink NVR (not included) with an Ethernet cable.
- 2. Connect the NVR to your router, and then power on the NVR.

NOTE: The camera can be powered via a PoE powering device such as a PoE injector, PoE switch, or Reolink NVR (not included in the package).

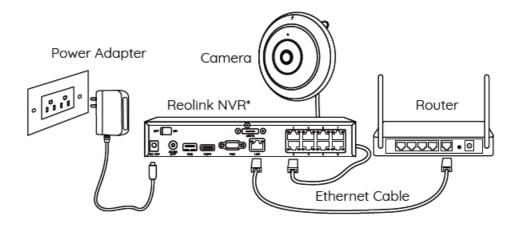

The camera can also be powered via a 12V DC adapter (not included in the package).

Set up the Camera

• Download and Launch the Reolink App or Client software, and follow the onscreen instructions to finish the initial setup.

On Smartphone

• Scan to download the Reolink App.







On PC

• Download the path of the Reolink Client: Go to https://reolink.com > Support > App & Client.

NOTE


• If you are connecting the PoE camera to a Reolink PoE NVR, please set up the camera via the NVR interface.


Mount the Camera

Installation Tips

- Do not face the camera towards any light sources.
- Do not point the camera toward a glass window. Or, it may result in poor image quality because of the window glare by infrared LEDs, ambient lights, or status lights.
- Do not place the camera in a shaded area and point it towards a well-lit area. Or, it may result in poor image quality. To ensure the best image quality, the lighting conditions for both the camera and the captured object shall be the same.
- To ensure better image quality, it's recommended to clean the lens with a soft cloth from time to time.
- Make sure the power ports are not directly exposed to water or moisture and not blocked by dirt or other elements.
- Do not install the camera at places where rain and snow can hit the lens directly.

Mount the Camera to the Wall

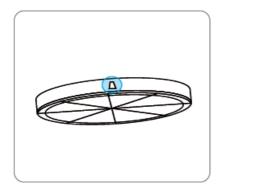


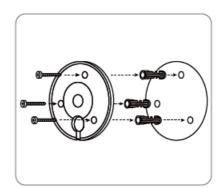


- 1. Before drilling the required holes, mark the direction of the lock printed on the mounting base. Make sure the lock is facing up, as shown in the diagram. This will help you align the mount base in the same orientation when installing.
- 2. Drill holes by the mounting hole template. Use the drywall anchors included in the package if needed. And use

screws to secure the mount base to the wall with its cable groove facing downward.

3. Run the cable of the fisheye camera through the cable groove on the mount base.

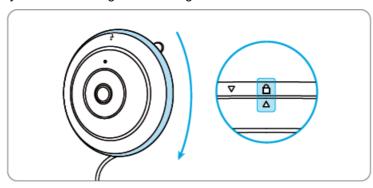

4. Attach the camera to the base and rotate the camera clockwise to lock it in position. Make sure the orientation arrow on the camera and the lock on the base are aligned.

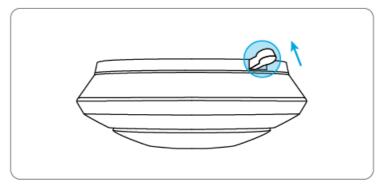


5. If you want to remove the camera from the mount base, press the release mechanism and rotate the camera counterclockwise.

Mount the Camera to the Ceiling

- 1. Drill holes in accordance with the mounting hole template. Use the drywall anchors included in the package if needed.
- 2. Secure the mount base to the ceiling with screws.
- 3. Run the cable of the fisheye camera through the cable groove on the mount base, and rotate the camera clockwise to lock it in position.

NOTE: Fit the three mounting holes of the camera into the mount base.

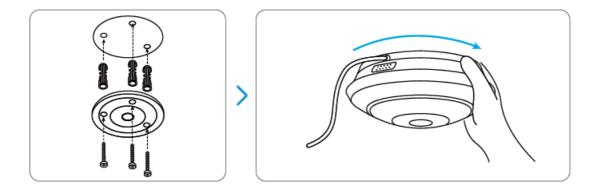

Troubleshooting

Infrared LEDs Stop Working

If the Infrared LEDs of your camera stop working, please try the following solutions:

- Enable infrared lights on the Device Settings page via Reolink App/Client.
- Check if the Day/Night mode is enabled and set up auto infrared lights at night on the Live View page via Reolink App/Client.
- Upgrade the firmware of your camera to the latest version.
- · Restore the camera to factory settings and check out the infrared light settings again.

If these won't work, contact Reolink Support at https://support.reolink.com/.

Failed to Upgrade the Firmware

If you fail to upgrade the firmware for the camera, try the following solutions:

- Check out the current camera firmware and see if it is the latest one.
- Make sure that you download the correct firmware from the Download Center.
- Make sure that your PC is working on a stable network.

If these won't work, contact Reolink Support at https://support.reolink.com/.

Specifications

Hardware Features

Night Vision: 8 Meters

• Day/Night Mode: Auto Switchover

General

Operating Temperature: -10°C to 55°C (14°F to 131°F)

• Operating Humidity: 10%-90%

For more specifications, visit https://reolink.com/.

FCC Statements

Notification of Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

ISED Compliance Statements

• This Class B digital apparatus complies with Canadian ICES-003.

Simplified EU Declaration of Conformity

• C EReolink declares that this device is in compliance with the essential requirements and other relevant provisions of EMC Directive 2014/30/EU and LVD 2014/35/EU.

UKCA Declaration of Conformity

 Reolink declares that this product is in compliance with the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment Safety Regulations 2016.

Correct Disposal of This Product

This marking indicates that this product should not be disposed of with other household wastes. throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Limited Warranty

- This product comes with a 2-year limited warranty that is valid only if purchased from the Reolink Official Store
 or a Reolink authorized reseller.
- Learn more: https://reolink.com/warranty-and-return/.

Terms and Privacy

- Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at <u>reolink.com</u>.
- Keep out of reach of children.

Technical Support

If you need any technical help, please visit our official support site and contact our support team before
returning the products: https://support.reolink.com.

REOLINK INNOVATION LIMITED

 FLAT/RM 705 7/F FA YUEN COMMERCIAL BUILDING 75-77 FA YUEN STREET MONG KOK KL HONG KONG

FAQ

- Q: How do I reset the camera to factory settings?
 - A: Press and hold the reset button for 5 seconds with a pin to restore factory settings.
- Q: Can the camera be powered using a different adapter?
 - A: The camera can also be powered via a 12V DC adapter.

Documents / Resources



<u>reolink FE-P Fisheye Security Camera</u> [pdf] Instruction Manual FE-P, FE-P Fisheye Security Camera, Fisheye Security Camera, Camera

References

- Reolink Official: Security Cameras and Systems for Home & Business
- Your Ultimate Resource for Millions of User Manuals
- Reolink Official: Security Cameras and Systems for Home & Business
- R reolink.com/warranty-and-return/
- Reolink Support Official Reolink Help Center
- Reolink Support Official Reolink Help Center
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.