

Contents [[hide](#)]

1 [reolink NVS4 4-Channel PoE Network Video Recorder Instruction Manual](#)

2 1. Specs

3 2. Setup and Install

4 Access the NVR System via Reolink App

5 Documents / Resources

5.1 References


reolink NVS4 4-Channel PoE Network Video Recorder Instruction Manual




If you want 24/7 video recording or if you have multiple IP cameras to manage, NVS4 is

your best choice. You can choose up to 4 cameras (not included) to work with this NVR and build your own video surveillance system. NVS4 features PoE (Power over Ethernet), with a single network cable connecting each of your IP cameras to the NVR for both power supply and video signal transmission. Easy wiring – the wiring process cannot be simpler for DIY enthusiasts.

1. Specs

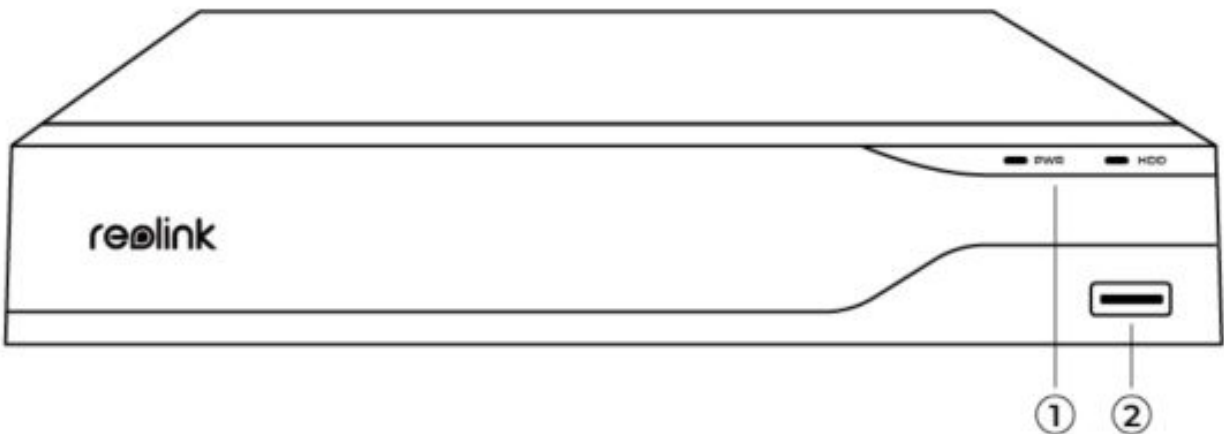

1	Power LED/HDD LED
2	USB Port

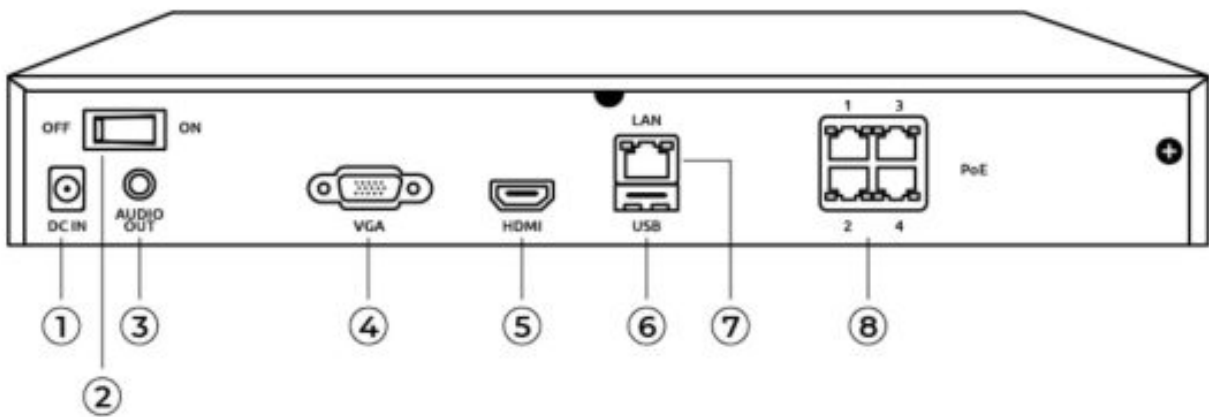

1	Power Input
2	On/Off Switch
3	Audio Out
4	VGA Port
5	HDMI Port
6	USB Port
7	LAN Port
8	RJ45

2. Setup and Install

Set up the System

What's in the Box

Note: The package content may vary and update with different version and platforms, please take the below information only for a reference. And the actual package content are subject to the latest information on the product selling page. NVS4



NVS4



NVR Power Adapter



HDMI Cable



USB Mouse



1m Network
Cable*1




Quick Start Guide*1

Connection Diagram


Before initialization, please connect the cameras to the NVR and power on the NVR.

1. Connect the NVR's LAN port to router with an Ethernet cable, and connect the mouse to the USB port of the NVR.

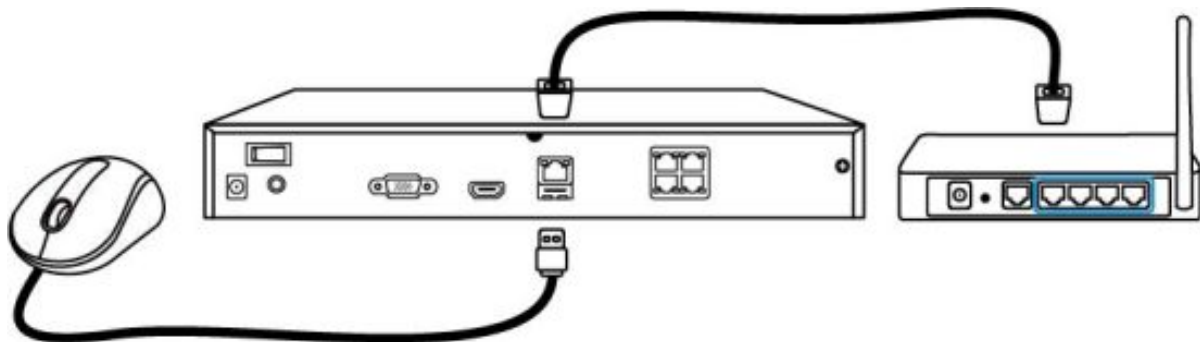


2. Connect the NVR to a monitor via HDMI/VGA.


Note: There is no VGA cable included in the package.

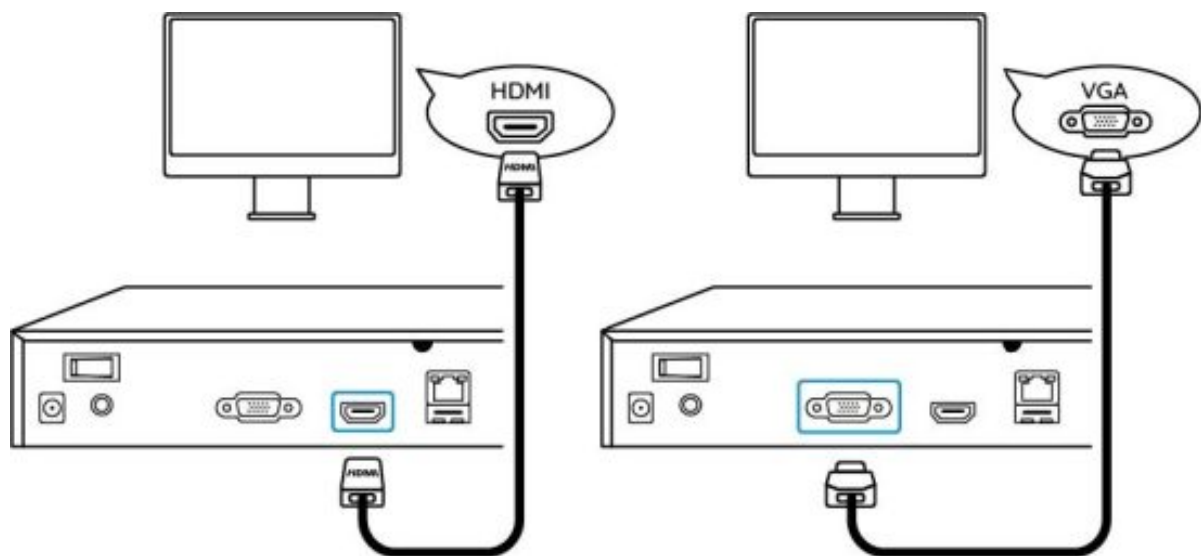

3. Connect the PoE cameras to PoE ports of the NVR.

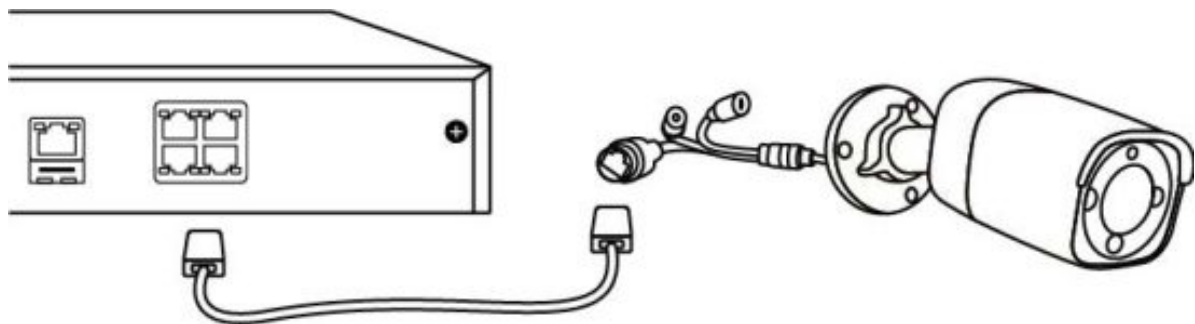

4. Connect the power adapter to the NVR, and switch on the NVR. Network (LAN)

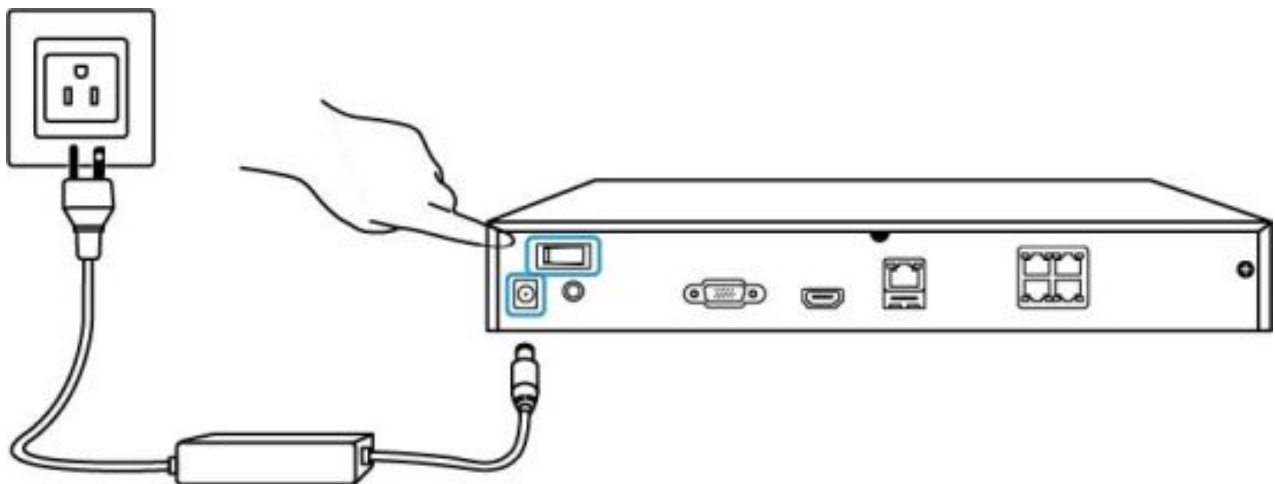

Set up the NVR System on the Monitor

A setup wizard will guide you through the NVR system configuration process. Please set a password for your NVR (for the initial access) and follow the wizard to configure the system.


Step 1. After turning on the NVR system, you will see the splash screen below. System booting up might take a few seconds.




Step 2. General Configurations. Set up the language, screen resolution, date format, and time format. Then click **Next**.

The image shows the "General" configuration screen of the Reolink system. At the top, the "reolink" logo is centered. Below it is a horizontal navigation bar with seven icons and labels: "General" (gear icon), "DST" (clock icon), "Login" (person icon), "Password Security" (lock icon), "Device Info" (info icon), "Network" (globe icon), and "Email Settings" (envelope icon). The "General" tab is currently selected. The main content area contains four settings, each with a label and a dropdown menu: "Language" set to "English", "Screen Resolution" set to "1280*720", "Date Format" set to "DD/MM/YYYY", and "Time Format" set to "24-hour". At the bottom right, there is a blue button labeled "Next" with a mouse cursor pointing at it.


Step 3. DST settings. Set up the system time and time zone, and enable/disable the DST option. Then click **Next**.

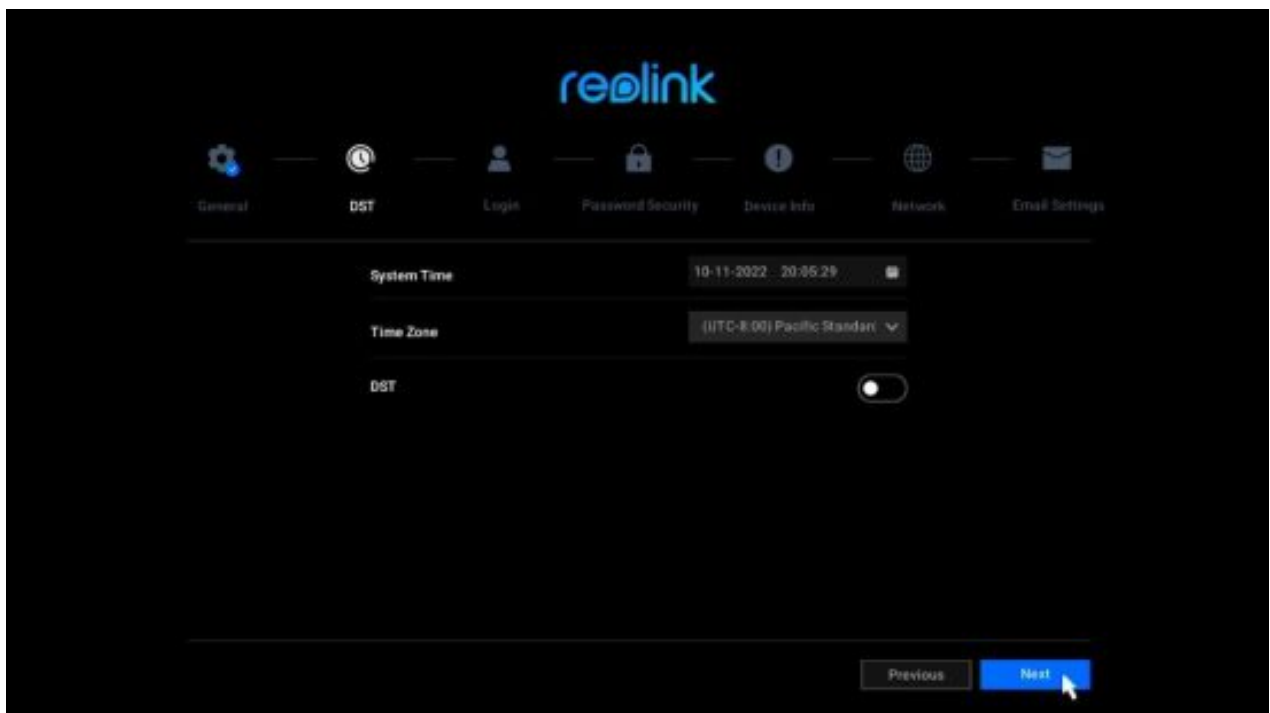

Step 4. Create a login password for your NVR, and enable/disable screen auto-lock. Then click **Next**.

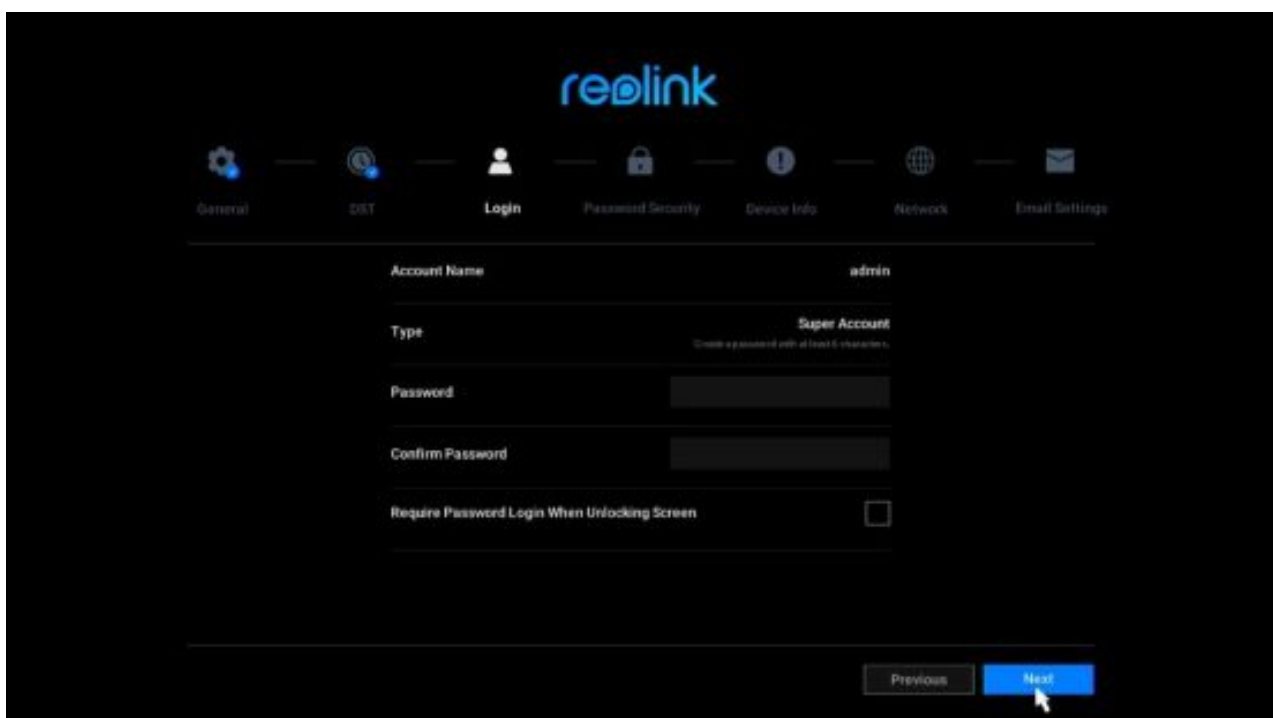

Step 5. Set up password security questions. Then click Next.

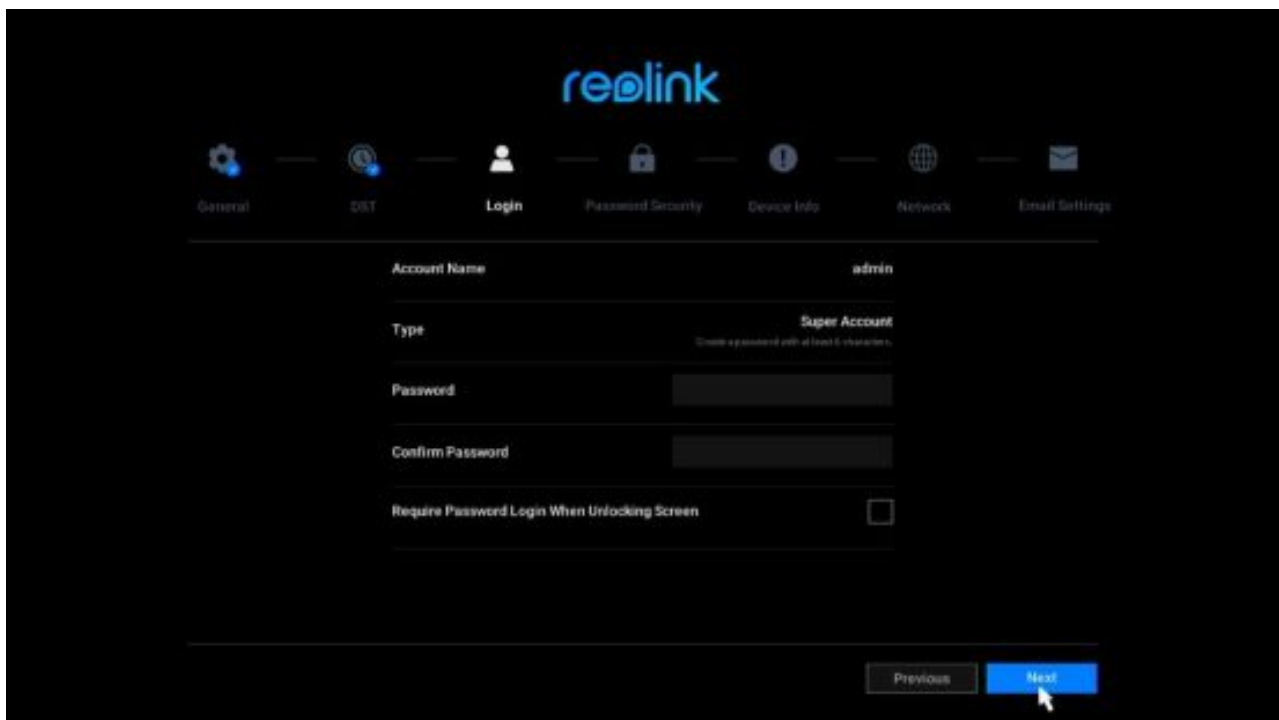


The screenshot shows the Reolink setup wizard at the 'Login' step. The top navigation bar includes icons for General, DST, Login, Password Security, Device Info, Network, and Email Settings. The 'Login' step is highlighted. The form contains the following fields and options:

- Account Name:** admin
- Type:** Super Account (with a note: "Create a password with at least 8 characters.")
- Password:** [Redacted]
- Confirm Password:** [Redacted]
- Require Password Login When Unlocking Screen:** ☐

At the bottom right, there are 'Previous' and 'Next' buttons. A mouse cursor is pointing at the 'Next' button.

Step 6. Name your device and manage your HDD. Then click Next.

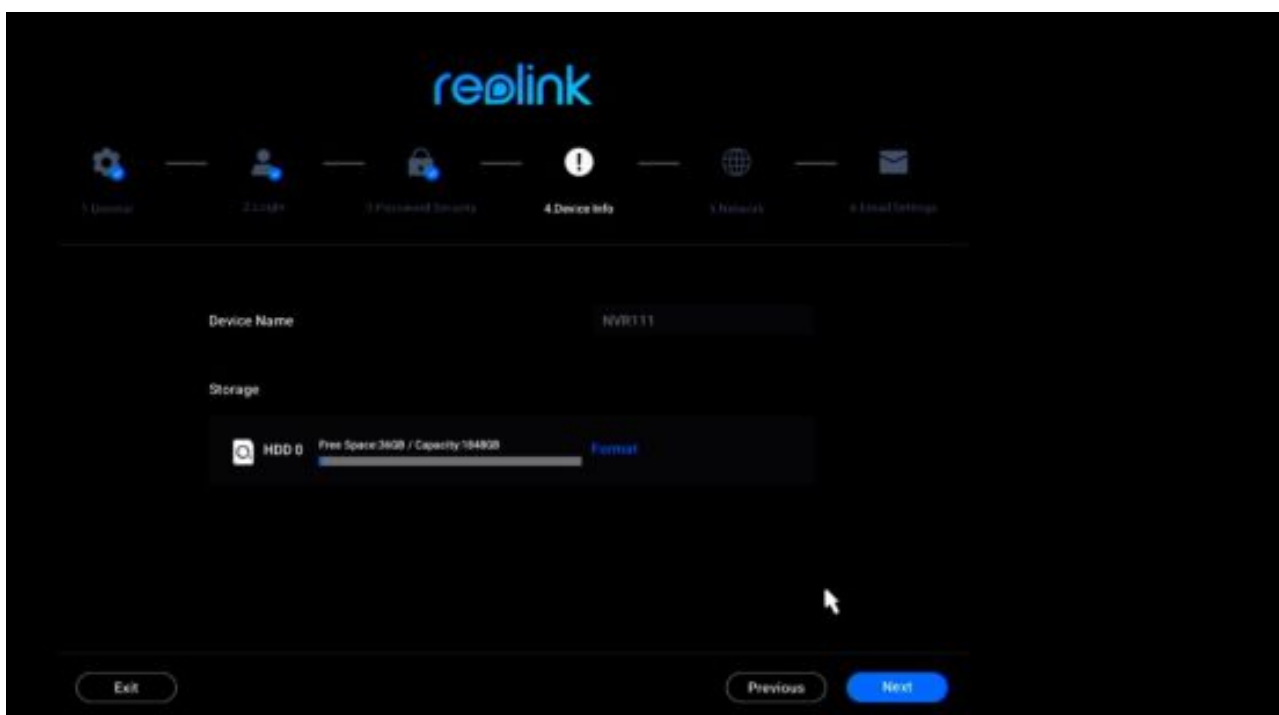


The screenshot shows the Reolink setup wizard at the 'Device Info' step. The top navigation bar highlights the 'Device Info' step. The form contains the following fields and options:


- Device Name:** NVR111
- Storage:** HDD 0. Free Space 34GB / Capacity 104GB. A 'Format' button is next to the storage information.

At the bottom, there are 'Exit', 'Previous', and 'Next' buttons. A mouse cursor is pointing at the 'Next' button.

Step 7. Configure the network for your NVR. Then click Next.

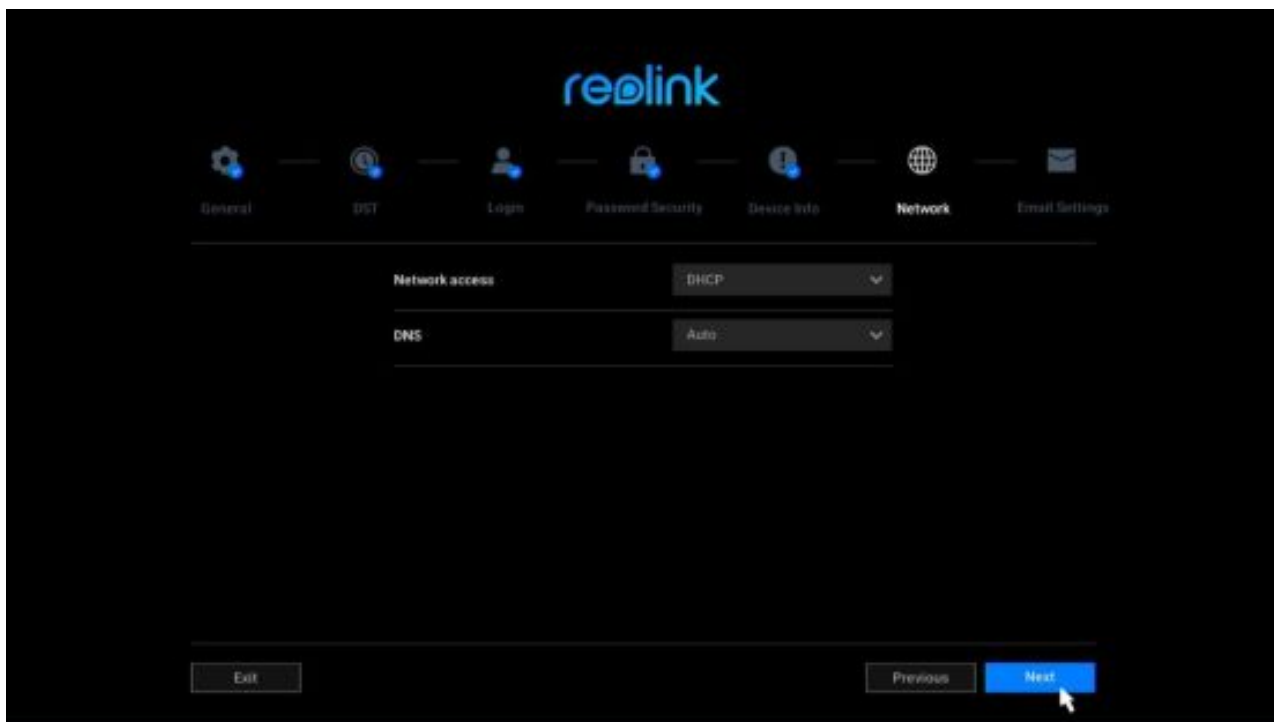


Step 8. Set up email alerts for your NVR up to your need. Then click **Next**.

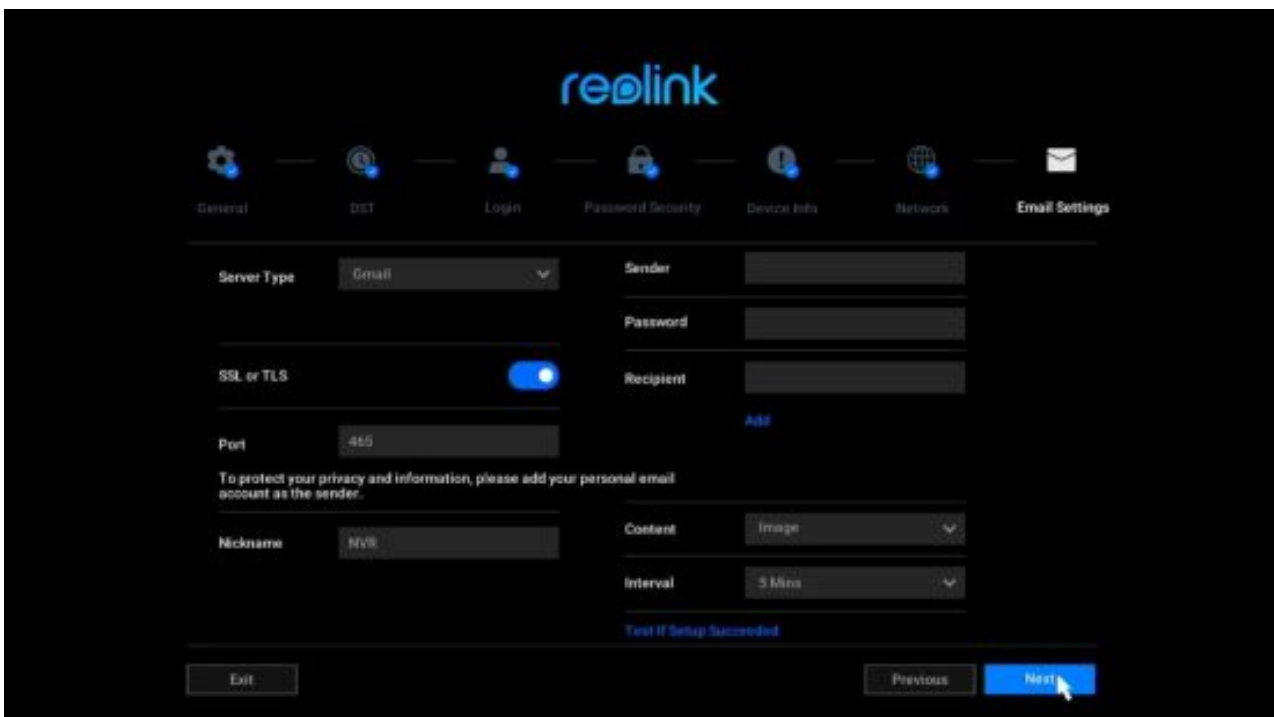


Step 9. Initialization finished! You can start to use the NVR system now.


Access the NVR System via Reolink App

You can add the NVR to Reolink App for easy access via smartphone.

Step 1. Tap the  icon on the top right corner.

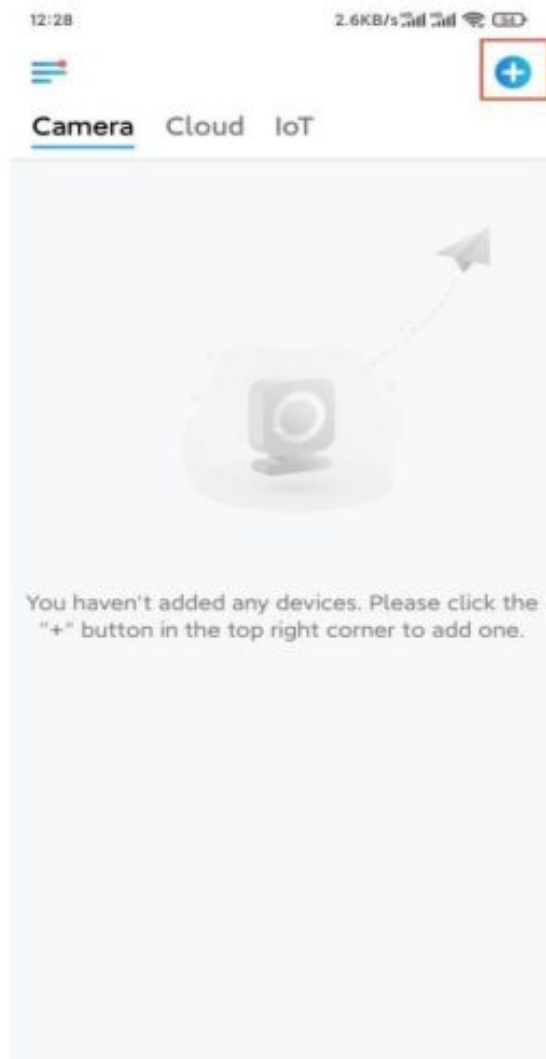


Step 2. Scan the QR code on your NVR, or tap **Input UID/IP** to enter the UID of the NVR (a 16-digit number under the QR code). Then tap Next.

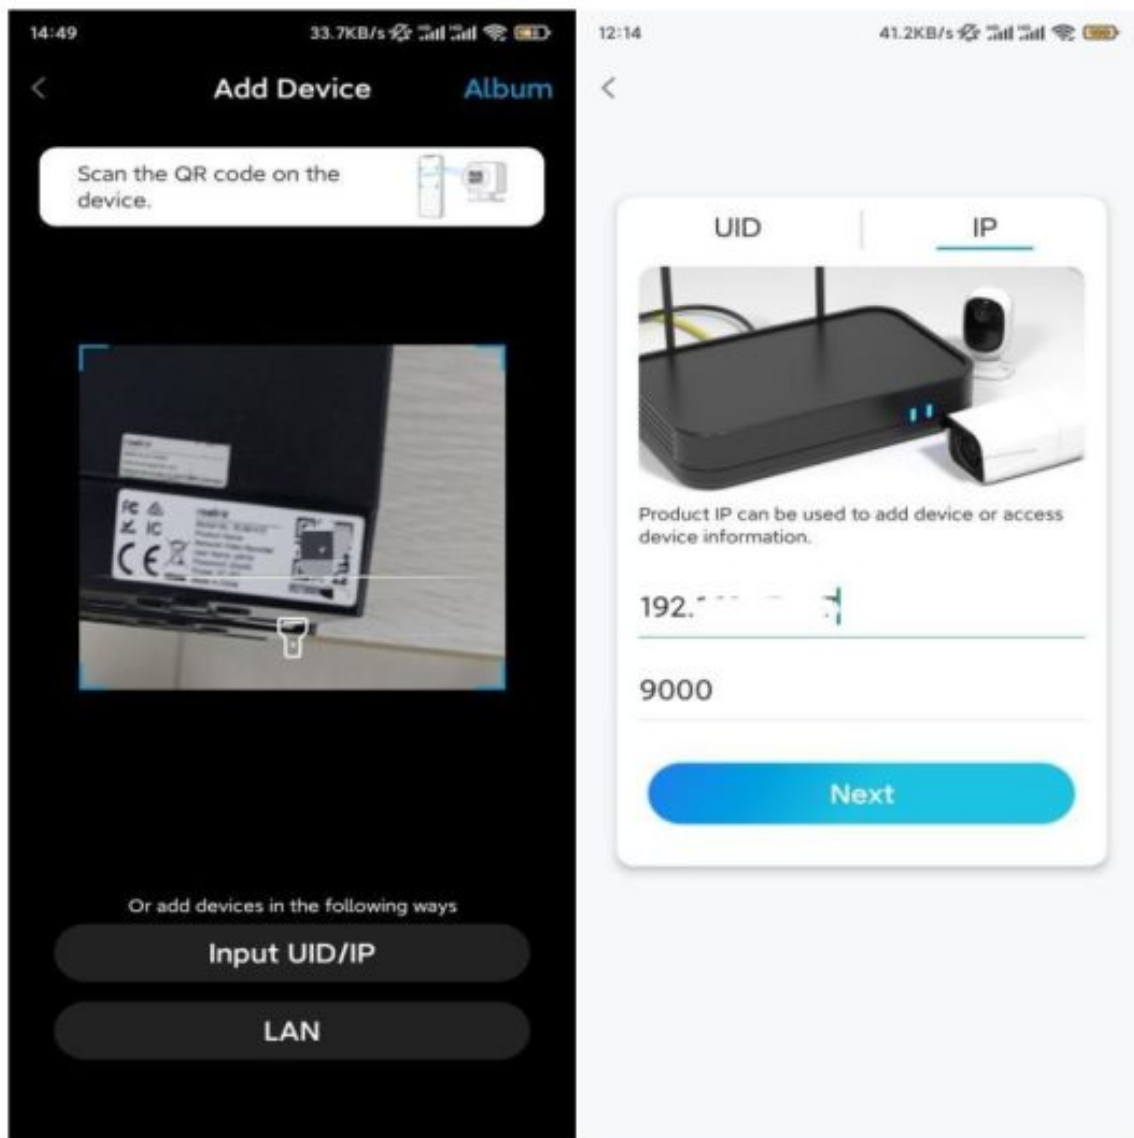

Step 3. Enter the username and login password for the NVR. By default, the username is **admin**. And the password is the one you created during initialization.




Step 4. Done! You can start to live view now.

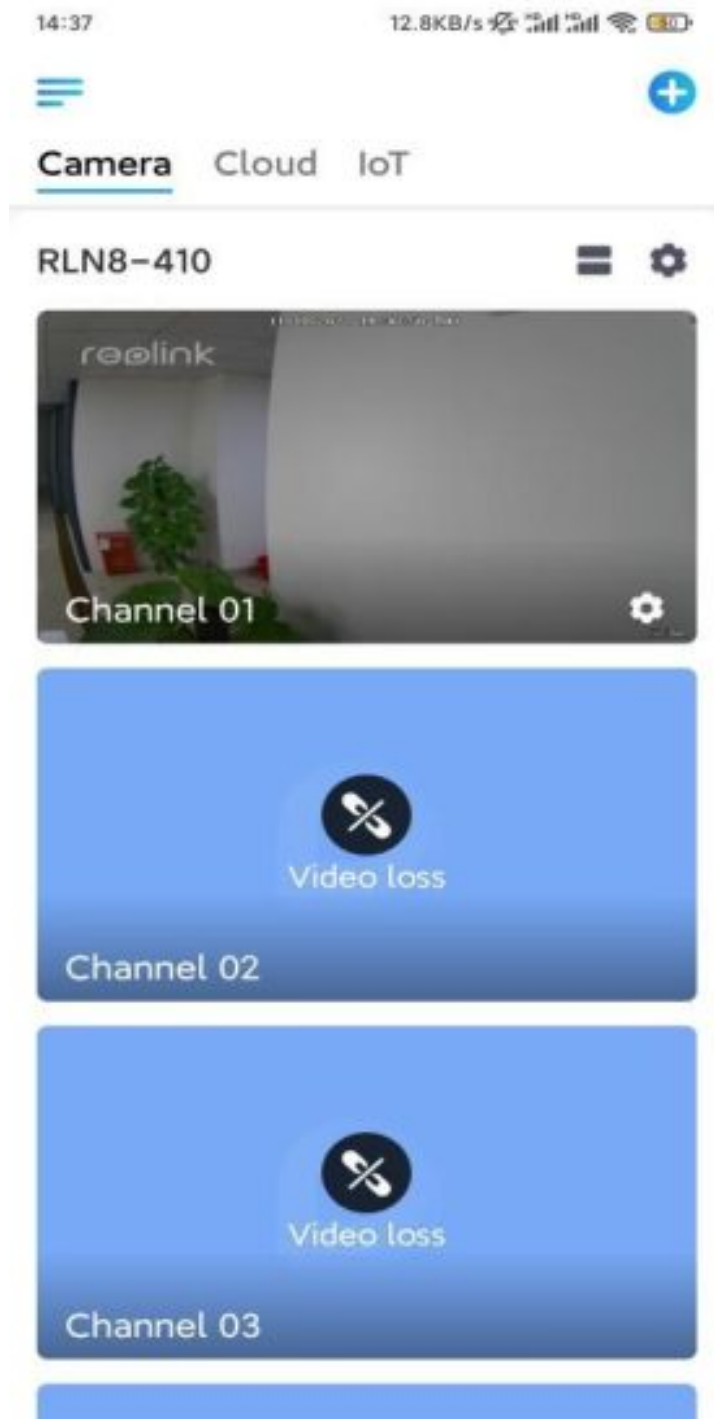

Read More About This Manual & Download PDF:

Documents / Resources

	<p>reolink NVS4 4-Channel PoE Network Video Recorder [pdf] Instruction M anual</p> <p>NVS4, NVS4 4-Channel PoE Network Video Recorder, NVS4, 4-Channel PoE Network Video Recorder, PoE Network Video Recorder, Network Video Recorder, Video Recorder, Recorder</p>
---	---

References

- [User Manual](#)

reolink

4-Channel PoE Network Video Recorder, Network Video Recorder, NVS4, NVS4 4-Channel PoE Network Video Recorder, PoE Network Video Recorder, Recorder, reolink, Video Recorder

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.