



reolink RLC Series Smart HD Wireless WiFi Camera with Zoom Instruction Manual

[Home](#) » [reolink](#) » reolink RLC Series Smart HD Wireless WiFi Camera with Zoom Instruction Manual 



Operational Instruction
Apply to: RLC-511WA, RLC-410W, RLC-510WA

 


@ReolinkTech <https://reolink.com>

Contents

- [1 What's in the Box](#)
- [2 Camera Introduction](#)
- [3 Connection Diagram](#)
- [4 Set up the Camera](#)
- [5 Install the Camera](#)
- [6 Troubleshooting](#)
- [7 Specifications](#)
- [8 Notification of Compliance](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

What's in the Box



Camera



 
Antenna




Power Adapter



1m
Network Cable



 4.5m Power
Extension Cable




Pack
of Screws



Surveillance Sign




Quick Start Guide

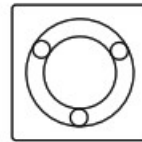


Mounting
Template

NOTE: Camera and accessories vary with different camera models that you purchase.

Camera Introduction

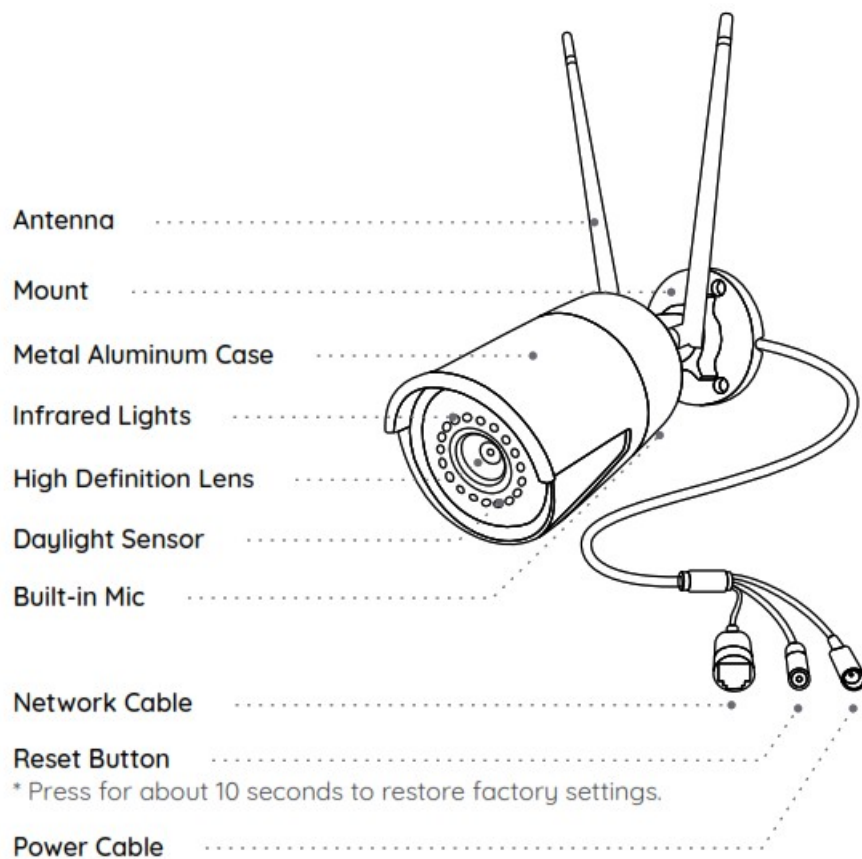

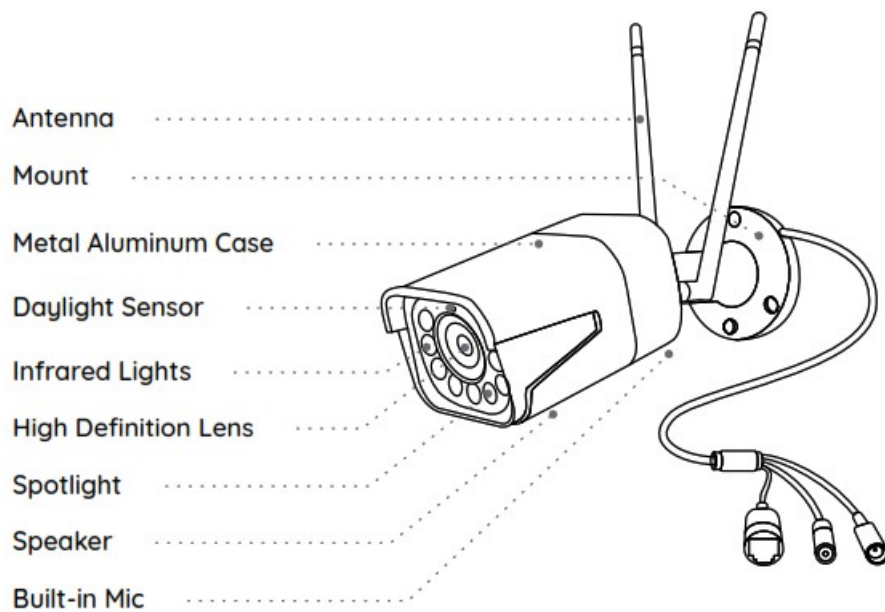


NOTE:

- Different types of cameras are introduced in this section. Please check out the camera included in the package and check out the details from
- The actual appearance and components may vary with different model of product.

Connection Diagram

Before initial setup, follow the steps below to connect your camera.

1. Connect the camera to a LAN port on your router with an Ethernet cable.
2. Power on the camera with a power adapter.

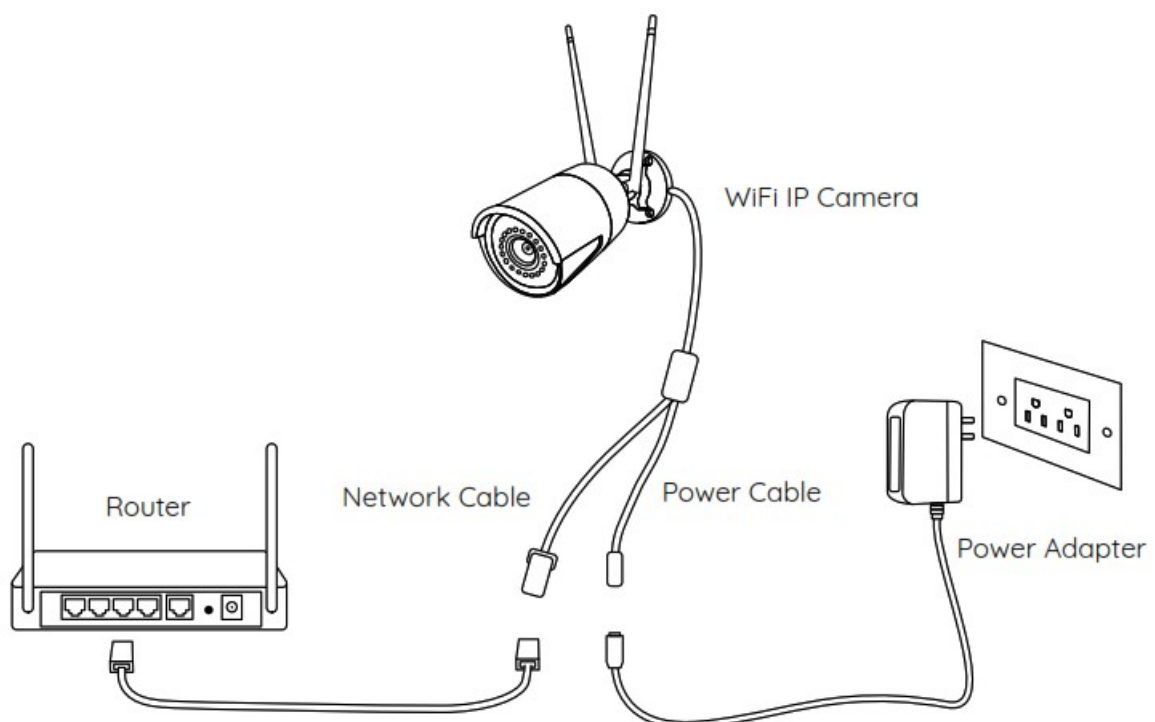

Set up the Camera

Download and launch the Reolink App or Client software, and follow the onscreen instructions to finish initial setup.

- **On Smartphone**

Scan to download the Reolink App.



<https://reolink.com/wp-json/reo-v2/app/download>

- **On PC**

Download path of the Reolink Client: Go to <https://reolink.com> >Support > App & Client.





Install the Camera

Installation Tips


- Do not face the camera towards any light sources.
- Do not point the camera towards a glass window. Or, it may result in poor image performance because of the window glare by infrared LEDs, ambient lights or status lights.
- Do not place the camera in a shaded area and point it towards a well-lit area. Or, it may result in poor image performance. For better image quality, please make sure that the lighting condition for both the camera and the capture object is the same.
- For better image quality, it's recommended to clean the lens with a soft cloth from time to time.
- Make sure the power ports are not exposed to water or moisture or blocked by dirt or other elements.
- Do not install the camera at places where rain and snow may hit the lens directly.
- The camera may work in extreme cold conditions as low as -25°C. Because when it is powered on, the camera will produce heat. You may power on the camera indoors for a few minutes before installing it outdoors.

NOTE: There are two different types of mounts for bullet cameras. Please check out the mount included in the package and follow the corresponding instruction to install the camera properly.


Mount the Camera

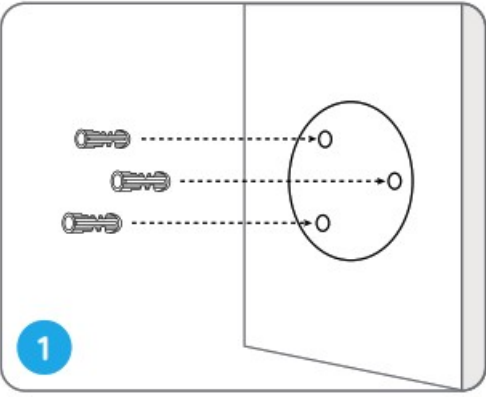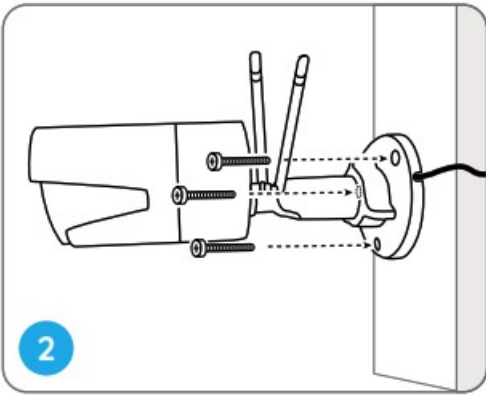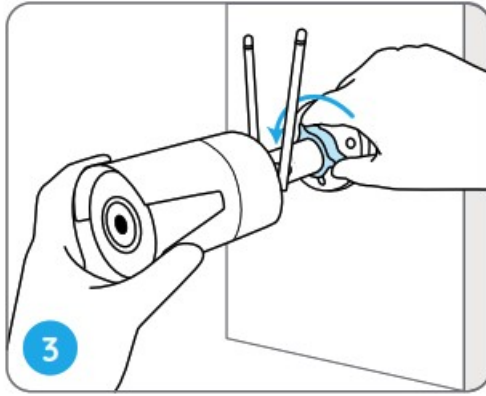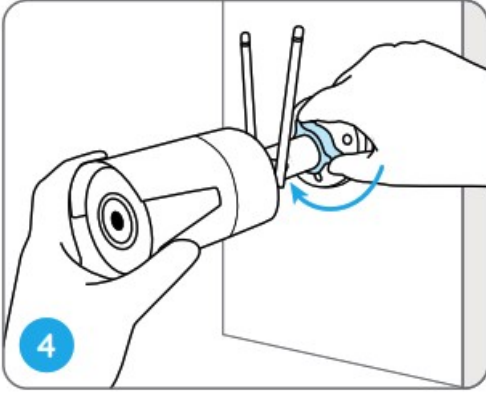 <p>Diagram 1 shows a circular mounting template with three holes. Three screws are shown being inserted into the holes. A blue circle with the number '1' is in the bottom left corner.</p>	<p>Drill holes in accordance with the mounting hole template. NOTE: Use the drywall anchors included in the package if needed.</p>
 <p>Diagram 2 shows the camera mount base being attached to the wall. Four screws are shown being inserted into the base. A blue circle with the number '2' is in the bottom left corner.</p>	<p>Install the mount base with the mounting screws included in the pack NOTE: Run the cable through the cable notch on the mount base.</p>
 <p>Diagram 3 shows a hand loosening the adjustment knob on the camera. A blue arrow indicates the direction of rotation. A blue circle with the number '3' is in the bottom left corner.</p>	<p>To get the best field of view, loosen the adjustment knob on security camera.</p>
 <p>Diagram 4 shows a hand tightening the adjustment knob on the camera. A blue arrow indicates the direction of rotation. A blue circle with the number '4' is in the bottom left corner.</p>	<p>Stiffen the adjustment knob to lock the camera.</p>

NOTE: If your camera has another mount without the adjusting knob, please loosen the adjusting screw with the provided hex key and turn the camera as shown below to adjust the angle.

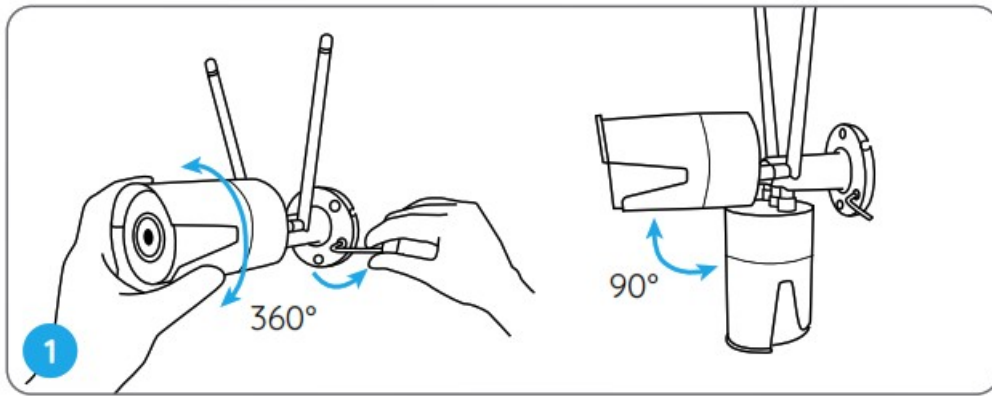

Twist the screws with the wrench to unlock the camera and adjust its direction.

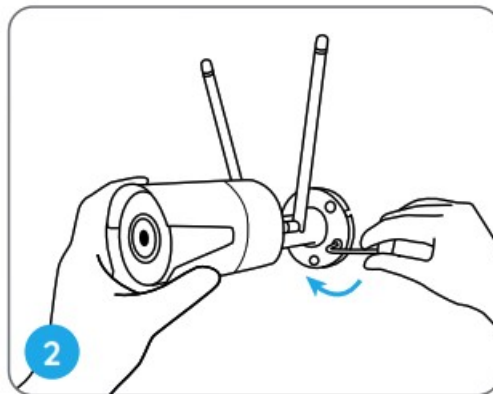

After adjustment, twist the screws back to lock the camera.

Troubleshooting

IP Camera is not Powering on

If you find your camera is not powering on, try the following solutions:

- Please check whether the outlet is working properly or not. Try to plug the camera into a different outlet and see if it works.
- Please check whether the DC adapter is working or not. If you have another 12V DC power adapter which is working, please use another power adapter and see if it works.

If these won't work, please contact Reolink Support <https://support.reolink.com>

IR LEDs Stop Working

If you find the IR LEDs of your camera stop working, try the following solutions:

- Go to Device Settings and check whether you have enabled Infrared LEDs. If the LEDs are disabled, please enable them.
- Please go to Live View and check the Day/Night mode. Set the mode to Auto to activate the IR lights.
- Upgrade your camera's firmware to the latest version.
- Restore the camera to the factory settings and check the IR light settings again.

If these won't work, please contact Reolink Support <https://support.reolink.com>

Specifications

Hardware Features

IR Distance: 30 meters (100ft)
Day/Night Mode: Auto switchover

General

Operating Temperature: -10°C to 55°C (14°F to 131°F)
Operating Humidity: 10%-90%
Weather Resistance: IP66 certified weatherproof

Notification of Compliance

FCC Compliance Statement

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. For more information, visit: <https://reolink.com/fcc-compliance-notice/>.



Simplified EU Declaration of Conformity

Reolink declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



Correct Disposal of This Product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

Limited Warranty

This product comes with a 2-year limited warranty that is valid only if purchased from Reolink Official Store or Reolink authorized resellers. Learn more: <https://reolink.com/warranty-and-return/>.

NOTE: We hope that you enjoy the new purchase. But if you are not satisfied with the product and plan to return, we strongly suggest that you reset the camera to factory default settings and take out the inserted SD card before returning.

Terms and Privacy

Use of the product is subject to your agreement to the Terms of Service and Privacy Policy at reolink.com. Keep out of the reach of children.

End User License Agreement

By using the Product Software that is embedded on the Reolink product, you agree to the terms of this End User License Agreement ("EULA") between you and Reolink. Learn more: <https://reolink.com/eula/>.

ISED Radiation Exposure Statement

This equipment complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

OPERATING FREQUENCY

(the maximum transmitted power)

2412MHz—2472MHz (19dBm)

5180 MHz—5320 MHz (18dBm)

5745 MHz—5825 MHz (18dBm)

Technical Support

If you need any technical help, please visit our official support site and contact our support team before returning the products, <https://support.reolink.com>

REOLINK INNOVATION LIMITED

FLAT/RM 705 7/F FA YUEN COMMERCIAL BUILDING 75-77 FA YUEN STREET MONG KOK KL HONG KONG

EU REP Product Ident GmbH

Hoferstasse 9B, 71636 Ludwigsburg, Germany

prodsg@libelleconsulting.com


UK REP APEX CE SPECIALISTS LIMITED

89 Princess Street, Manchester, M1 4HT, UK

info@apex-ce.com

Aug 2021 QSG1_C 58.03.005.0011

Documents / Resources

	reolink RLC Series Smart HD Wireless WiFi Camera with Zoom [pdf] Instruction Manual RLC-511WA, RLC-410W, RLC-510WA, RLC Series Smart HD Wireless WiFi Camera with Zoom, RLC Series, Smart HD Wireless WiFi Camera with Zoom, Camera with Zoom, WiFi Camera, Camera, Wireless Camera
---	---

References

- [reolink.com](#)
- [Reolink: Global Innovator in Smart Home Security and Camera Solutions](#)
- [Reolink: Global Innovator in Smart Home Security and Camera Solutions](#)
- [Reolink® Deutschland: Zuverlässige Sicherheitslösungen im DIY-Stil](#)
- [Reolink® Deutschland: Zuverlässige Sicherheitslösungen im DIY-Stil](#)
- [Innovador Global en Soluciones de Cámaras y Seguridad para el Hogar Inteligente](#)
- [Reolink : une entreprise innovante internationale en matière de solutions de caméras de surveillance et de sécurité intelligentes](#)
- [Garantie et Retour - Reolink](#)
- [Reolink: un innovatore globale nel campo della sicurezza per la casa intelligente e delle soluzioni di videosorveglianza](#)
- [Warranty & Return – Reolink](#)
- [Reolink Support - Official Reolink Help Center](#)

