



REPEATER BUILDER STM32-DVM Bridgecom BCR Repeater User Guide

[Home](#) » [REPEATER BUILDER](#) » REPEATER BUILDER STM32-DVM Bridgecom BCR Repeater User Guide 



BUILDER STM32-DVM Bridgecom BCR Repeater
User Guide

Contents

- [1 Cable Information](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Cable Information

STM32-DVM	Signal	BCR	Notes
1	N/A		
2	→→TX Audio (Flat / 9600 Baud) 4→→	21	
3	←← DVM Inhibit (Act. Low) EE←←	17#	Active Low
4	→→ RSSI →→	10#	
5	→→PTT→→	20	
6	←←RX Audio (Discriminator)←←	8	
7	N/A		
8	EE Ground 4	25	
9	E -F12V 4	1	

NOTES:

#optional connection

*Pin 1 can be used to feed power to the STM32-DVM V3 ONLY if the optional 12v buck converter has been installed.

DO NOT use on pre-version 3 boards!

Documents / Resources

	REPEATER BUILDER STM32-DVM Bridgecom BCR Repeater [pdf] User Guide STM32-DVM Bridgecom BCR Repeater, STM32-DVM, Bridgecom BCR Repeater, BCR Repeater, Repeater
---	--