



AA6720 Retro Arcade Game Console User Manual

[Home](#) » [Retro Arcade](#) » AA6720 Retro Arcade Game Console User Manual 

RETRO ARCADE

Retro Arcade
Game Console



User Manual
AA6720

Contents

- 1 Box Contents:
- 2 Product Diagram:
- 3 Installation:
- 4 Operation:
- 5 Menu Functions:
- 6 Settings:
- 7 Troubleshooting:
- 8 Safety:
- 9 Features:
- 10 Specifications:
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Box Contents:



1 x Retro Arcade Game Console



1 x Inbuilt 32GB microSD Card



1 x 3m HDMI Cable

 


1 x 1.2m USB to DC Power Cable



1 x USB Mains Power Adaptor

Product Diagram:

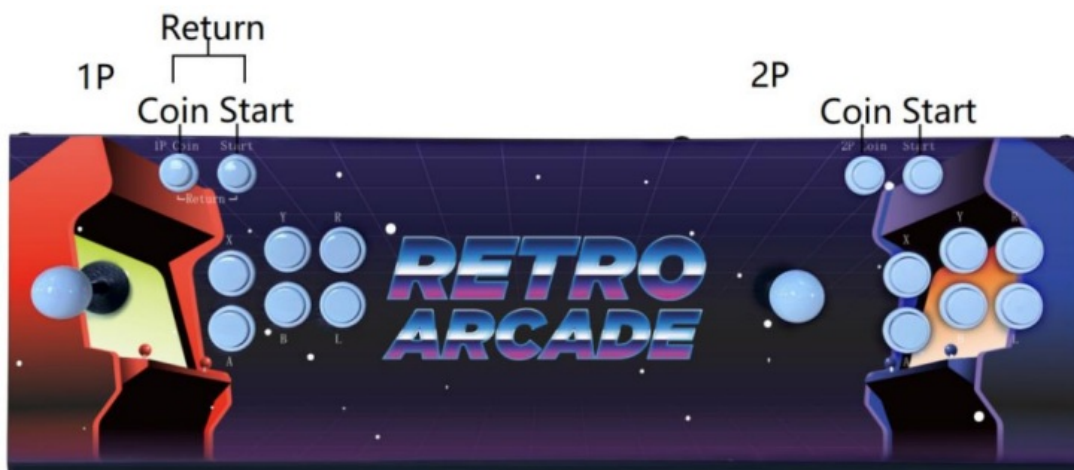

Feature:	Description:
Joystick	Push up/down to sort through the games list Push left/right to sort through the game pages Push up/down/left/right movements while in game
X, Y, R, A, B, L Buttons	Press A to select the current game Press X,Y,R,A,B,L buttons for actions while in game
Return/Pause (1st Player)	Press the coin and start buttons at the same time to return to the previous menu
Coin (1st Player)	Press the coin button while in the game menu so that you can start playing
Start (1st Player)	Press the start button after the coin has been added to the game
Coin (2nd Player)	Press the coin button while in the game menu so that it adds a second player
Start (2nd Player)	Press the start button after the coin has been added to the game to add a second player



Feature:	Description:
Power On/Off	Press the switch to turn the unit On and press again to turn the unit Off
HDMI Input	Connect to the HDMI socket of a TV, monitor or projector using a HDMI cable
Power Socket (DC5V,1A)	Connect to the USB to DC power cable and USB mains power adaptor to power the unit
microSD Card Slot	Insert a microSD card up to 128GB (32GB included)
USB Input	Connect to a USB external game controller

Installation:

1. Insert the USB plug of the USB to DC power cable in to a the USB mains power adaptor.

Note: If using a third party USB mains power adaptor or TV USB port, the voltage and current needs to match 5VDC, 1A otherwise it may not work.

2. Insert the DC plug of the USB to DC power cable in to the power socket located on the rear of the game console.

3. Plug the USB mains power adaptor into a suitable 240VAC mains wall socket and turn on.
4. Press the power switch to On, the LED status indicator should light up blue.
5. Connect the HDMI cable to the HDMI socket of your TV, monitor or project.
6. Connect the opposite end of the HDMI cable to the HDMI socket of the game console.

Operation:

Once the game console has been powered on, the menu will show as below:



List:

To sort through the list of games and activate the game, use the following commands shown below:

Menu Functions:

Feature:	Description:
Scroll Games List Up	Push the joystick up
Scroll Games List Down	Push the joystick Down
Turn Page Left	Push the joystick left
Turn Page Right	Push the joystick right
Select game	Press the A button

Class:

Press the R/L buttons to select the class menu to display the list of ROMs available as shown below:



History:

Press the R/L buttons to display a list of previous games played.



Collect:

Press the R/L buttons to select the collect menu which displays your favourite saved games.

 
When viewing the main menu games list; press the coin and start buttons together to add the game to your favourite list. Press the coin and start buttons again to cancel it from the list.



Search:

Press the R/L buttons to select the search menu which allows you to search a game within the main menu game list.

Push the joystick in the direction of each letter you want to search and press the A button to select.

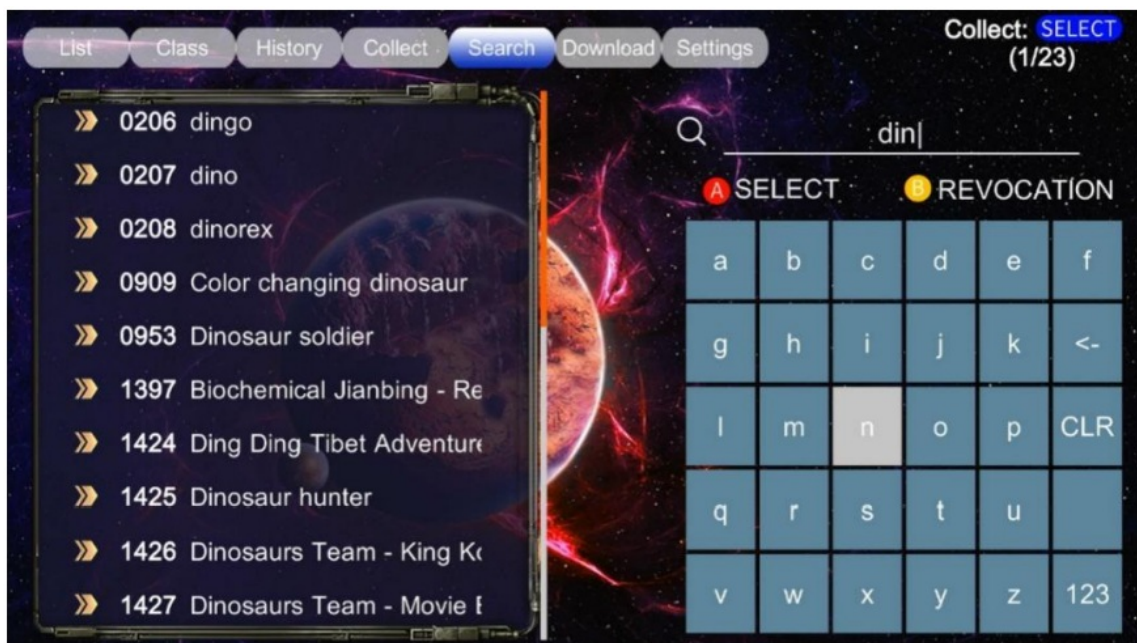

Download:

Press the R/L buttons to display downloaded games that you have added to the inbuilt 32GB microSD card.

 


1. To add downloaded games to this game console, you require to remove the inbuilt 32GB microSD card from the rear of the console and insert inside a computer.


Note: A microSD card reader may be required if your computer or laptop does not have a microSD card slot.

Note: Do NOT delete any other folders besides the ones in the download folder otherwise the system may not operate.

2. Once the microSD card has been inserted; open up the microSD card folder in My Computer.
3. Select the folder called download which is shown below:

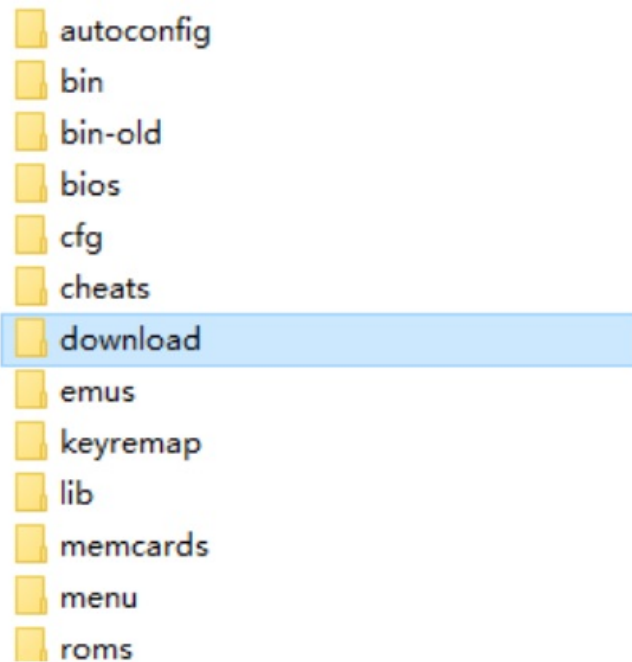

 4. Insert the game depending on the format to the correct emulator folder as shown below:

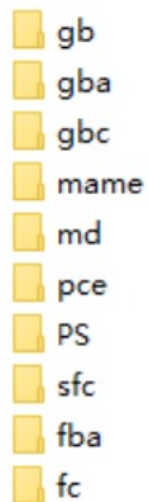


Note: The games are required to be inside a ZIP folder when placed inside the emulator folder otherwise they may not play correctly.

Note: Depending on the format and type of game, some games may not be compatible with this system.

Settings:

Press the R/L buttons to display the settings menu.

 It shows different language options, keytone settings, factory settings and system information.

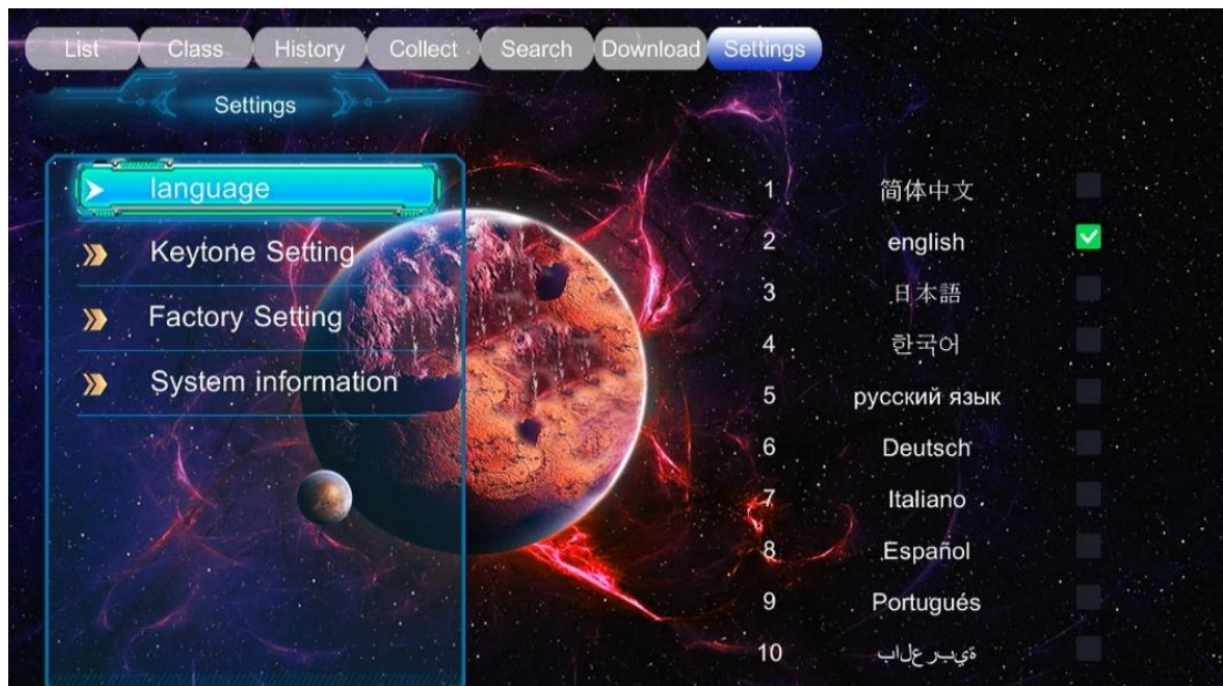

Troubleshooting:

Problem:	Solution:
Unit Will Not Power On	Connect the USB mains power adaptor to the USB to DC power cable and DC socket on the game console, and connect properly to a 240VAC wall socket.
	Make sure the power switch is turned to on
	If using a third party USB mains power adaptor or TV USB port, ensure the voltage and current matches 5VDC, 1A otherwise it may not power on
No Display	Connect the USB mains power adaptor to the USB to DC power cable and DC socket on the game console, and connect properly to a 240VAC wall socket.
	Make sure the power switch is turned to on
	If using a third party USB mains power adaptor or TV USB port, ensure the voltage and current matches 5VDC, 1A otherwise it may not power on Ensure the HDMI cable is connected properly from the game console to the TV, monitor or display Ensure the microSD card has been inserted correctly

Problem:	Solution:
Added Game Won't Play	Ensure the game is the correct M.A.M.E format and placed in a ZIP folder.
	Ensure the game file is placed in the correct folder on the microSD card
	Some games may not be compatible with this system

Safety:

1. Do not open the case of the game console to avoid damage and injury.
2. Keep the game console away from high temperatures as it may cause damage to the unit.

3. Disconnect the USB mains power adaptor when not in use long term as it may cause permanent damage.
4. If using a replacement or third-party USB mains power adaptor; make sure the voltage and current match the specifications as 5VDC, 1A.

Features:

- 2 Players
- Add & Play your own ROMs
- Inbuilt 32GB microSD Card
- External USB Controller Port

Specifications:

Supported Resolution: Up to 4K (3840 x 2160)

Resolution: 1080p (1920 x 1080)

HDMI: 1.4

microSD Card Capacity: Up to 128GB (32GB Included)


microSD Card Format: FAT32

Power: 5VDC, 1A

Dimensions: 762(L) x 246(W) x 122(H)mm



Documents / Resources

<p>Retro Arcade Game Console</p>  <p>User Manual AA6720</p>	<p>Retro Arcade AA6720 Retro Arcade Game Console [pdf] User Manual</p> <p>AA6720 Retro Arcade Game Console, AA6720, Retro Arcade Game Console, Arcade Game Console, Game Console</p>
--	--

References

- [E Electus Distribution - Home](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.