



[Home](#) » [RETRO FIGHTERS](#) » **RETRO FIGHTERS D6 Dreamcast Wireless 6 Button Controller**

User Guide 

Contents [[hide](#)]

 
- [1 RETRO FIGHTERS D6 Dreamcast Wireless 6 Button Controller](#)
- [2 CONTROLLER LAYOUT](#)
- [3 PAIRING INSTRUCTIONS](#)
- [4 INPUT MODES & MACROS](#)
- [5 BUTTON MAPPING GUIDE](#)
- [6 LED GUIDE](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



RETRO FIGHTERS D6 Dreamcast Wireless 6 Button Controller




CONTROLLER LAYOUT

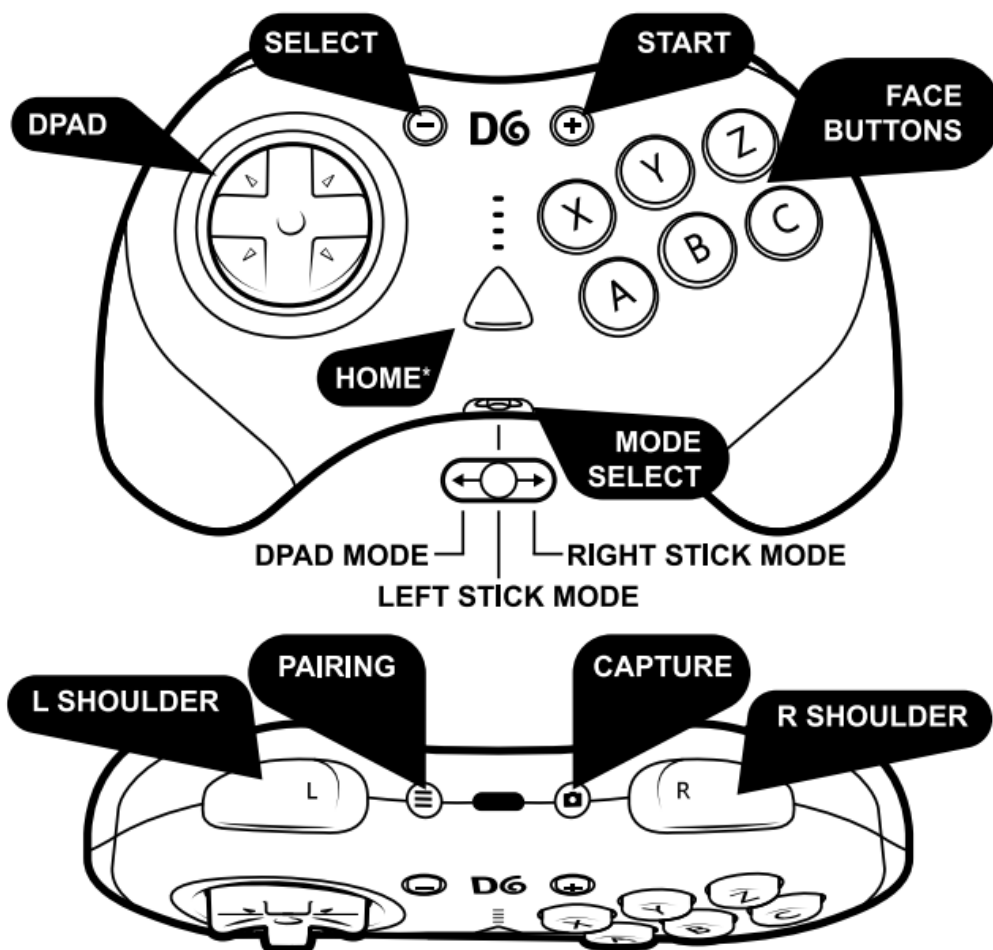

HOME BUTTON IS A START BUTTON WHEN USED ON DREAMCAST FOR AUTHENTIC FEEL.

 PAIRING INSTRUCTIONS

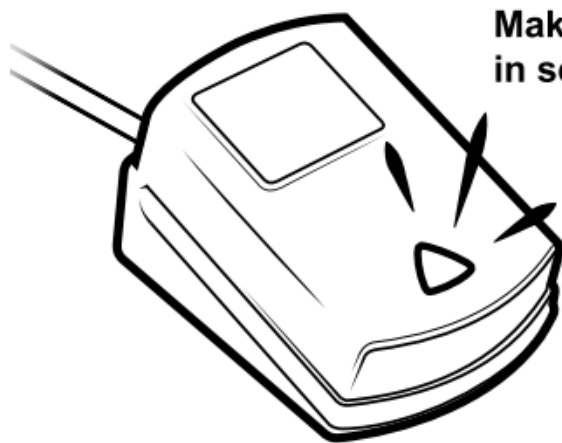


Make sure your receiver is plugged in securely and in pairing mode




After plugging into system the DC receiver requires pushing the sync button on the top of the receiver

 Press the pairing button

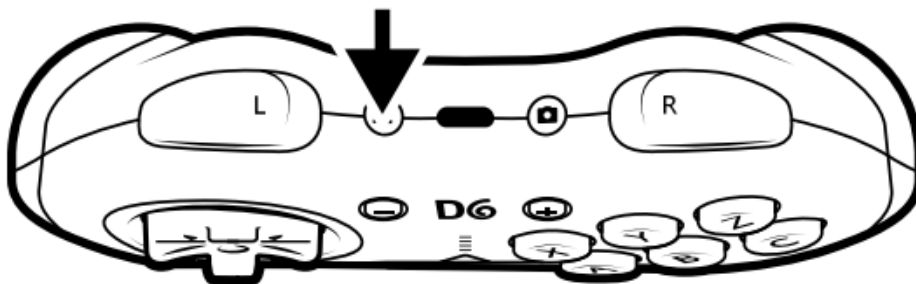

Wait for a stable LED light on the receiver for successful pairing.

 DO NOT PRESS THE RECEIVER SYNC BUTTON WHILE PLUGGING IN. RECEIVER WILL ENTER THE FW UPGRADE MODE. RE-PLUG TO CANCEL FW UPDATE MODE.

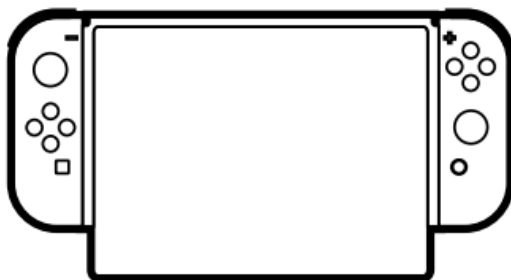

Problems with your Switch?

 
You may need a couple more steps to setup your controller before gaming!

Problems with your Switch?

You may need a couple more steps to set up your controller before gaming!

1. Navigate to: SETTINGS > CONTROLLERS AND SENSORS
2. Turn on: PRO CONTROLLER WIRED COMMUNICATION
3. Check that your USB receiver or cable connection is secure
4. Retrthe y initial pairing instructions

INPUT MODES & MACROS

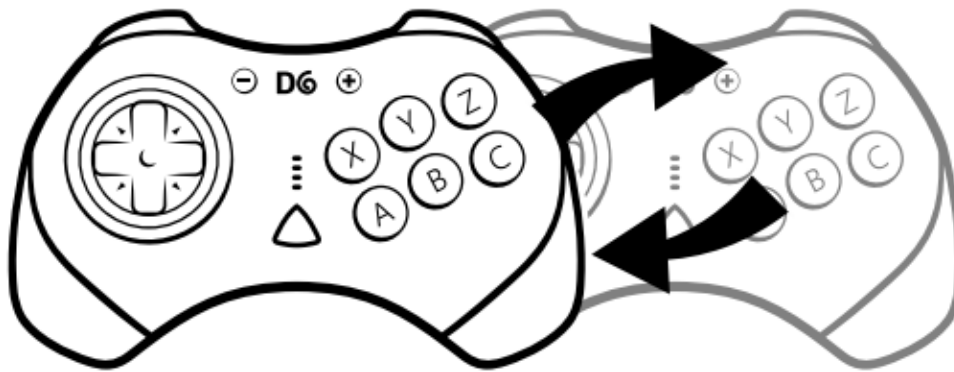

Dreamcast ZIC Button Mode

- Dreamcast natively supports C/Z buttons! However, not all games support these buttons... Thankfully, we added a macro to enable full C/Z button mode.
- Hold (-) + C to enable

Alternate Mode

Not all fighting game mappings are the same! We have added an alternate mode to cover most use cases. If you know one not mentioned, feel free to reach out to our team for added support!

There are two modes: normal and a secondary mode that changes button assignments. In normal mode, you cannot change button assignments; there is always a standard profile to roll back to (see [BUTTON MAPPING GUIDE](#))

- Hold (+) + (-) to enable
- Within the alternate mode, hold L + (+)

Switch Alternate Mode

- Switch controllers use a separate macro to swap the button assignments. (see [BUTTON MAPPING GUIDE](#))
- Hold (+) + (-) to enable

Switch Trigger to Shoulder Mode


We have added this macro to simply swap the shoulder and trigger button input positions. Hold + z


Input Mode Swap


Some games and devices prefer one protocol over another. This macro allows free swapping between X and input modes for best compatibility. Hold HOME (triangle button) to enable.


BUTTON MAPPING GUIDE

	X-INPUT		D-INPUT		SWITCH		DC	
PAIRING	PAIRING		PAIRING		PAIRING		PAIRING	
CAPTURE	L3		L3		CAPTURE		N/A	
HOME	HOME		HOME		HOME		+/START	
-/SELECT	-/SELECT		-/SELECT		-/SELECT		N/A	
+/START	+/START		+/START		+/START		N/A	
DPAD	DPAD		DPAD		DPAD		DPAD	
A	A		A		B		A	
B	B		B		A		B	
X	X		X		Y		X	
Y	Y		Y		X		Y	
Z	LB	RB	L1	R1	L	R	L	Z
C	RB	RT	R1	R2	R	ZR	R	C
L	LT	LB	L2	L1	ZL	L	L	
R	RT	LT	R2	L2	ZR	ZL	R	


L + (+)


L + (+)


(-) + Z


(-) + C

(+) + (-) ALT. MODE

LED GUIDE



CUSTOMER SERVICE

We strive to make our fellow gamers happy. If you experience any issues with this product, please contact us directly. We are here to help and will make it right! You email us at: SUPPORT@RETROFIGHTERS.COM

FAQs

The DPAD is not working in the correct mode. How do I fix it?

Make sure that the mode switch is in the correct mode (if DP is to the left) or RS (to the right). Not all games use the same input method, so it's best to check what mode your game accepts for movement/etc.

My controller is acting weird. How do I reset the controller?

You can reset the controller to factory settings by pressing the button through the small hole on the back of the shell. A small paperclip or pin should be perfect to press this button.


Why is my D6 not connecting to my PC?

Make sure that after you plug in the USB dongle that you hold down the top of the USB dongle so that it enters pairing mode. Simply press sync on the top of the controller to instantly complete the connection.

How do I check for the latest firmware?

Our firmware updates will be listed on the controller’s product page on our website (RetroFighters.com)

Documents / Resources

	<p>RETRO FIGHTERS D6 Dreamcast Wireless 6 Button Controller [pdf]</p> <p>User Guide</p> <p>D60-20250612-gamepad-v2, D60-USB-20260612, D6 Dreamcast Wireles s 6 Button Controller, D6, Dreamcast Wireless 6 Button Controller, Wireles s 6 Button Controller, 6 Button Controller, Controller</p>
-----------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

RETRO FIGHTERS

6 Button Controller, controller, D6, D6 Dreamcast Wireless 6 Button Controller, D60-20250612-gamepad-v2, D60-USB-20260612, Dreamcast Wireless 6 Button Controller, RETRO FIGHTERS, Wireless 6 Button Controller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.