



RetroSound Apache Radio Face User Guide

[Home](#) » [RetroSound](#) » RetroSound Apache Radio Face User Guide 

Contents

- [1 RetroSound Apache Radio Face User Guide](#)
- [2 What's in the Box](#)
 - [2.1 Apache Face](#)
 - [2.2 Shafts](#)
 - [2.3 Hardware](#)
 - [2.4 Installation](#)
- [3 Control Layout](#)
 - [3.1 Apache Mode](#)
- [4 Radio Presets](#)
 - [4.1 Setting Radio Presets](#)
 - [4.2 Recalling Radio Presets](#)
- [5 Basic Operation](#)
 - [5.1 Power On/Off](#)
 - [5.2 Volume](#)
 - [5.3 Changing Source Modes](#)
 - [5.4 Changing Radio Bands](#)
 - [5.5 Tune](#)
 - [5.6 Mute On/Off](#)
 - [5.7 Equalizer \(EQ\)](#)
 - [5.8 Setting the Clock](#)
 - [5.9 Display Color*](#)
 - [5.10 Beep On/Off](#)
- [6 Read More About This Manual & Download PDF:](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

RetroSound Apache Radio Face User Guide

 


What's in the Box


Apache Face




Shafts

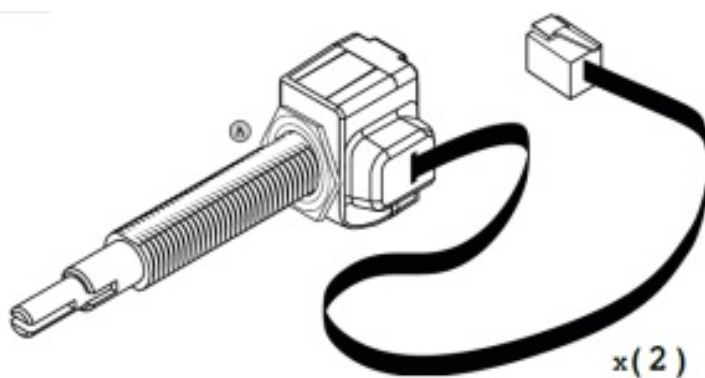

Hardware

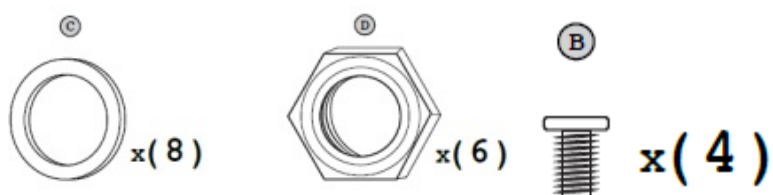 

Installation

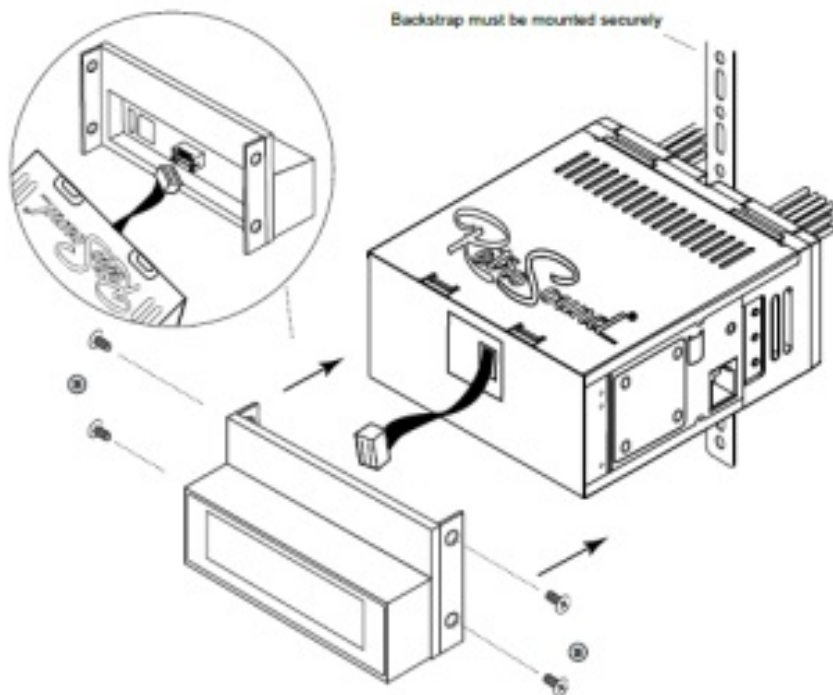 

Plug the ribbon cable from the Radio Motor into the Radio Face. Attach the Radio Face to the Radio Motor with the four small screws.

Refer to the user's manual included in your motor box or on our website for more comprehensive instructions.

Control Layout



Apache Mode

To set up your radio to function with the Apache Radio Face, press and hold the Right-Front Knob(3) for three seconds to access the sub-menu system. Rotate the Right-Front Knob(3) to cycle through the choices until SEL PANEL appears. Press and release the Right-Front Knob(3) to select between APACHE and NORMAL. With APACHE displayed on the screen, let the unit time out to set.

Radio Presets

Setting Radio Presets

To store a preset on the Apache Radio Face, rotate the Right-Front Knob(3) to tune to the desired station, then rotate the Right-Rear Knob(4) clockwise to select the desired preset (1-6). Once selected, press the Right-Front Knob(3) to store.

Recalling Radio Presets

To recall a preset, turn the Right-Rear Knob(4) clockwise and release. Repeat to move through the saved presets.

Basic Operation

Power On/Off

Press the Left-Front Knob(1) to power the unit on.

Press and hold the Left-Front Knob(1) to power the unit off.

Volume

Rotate the Left-Front Knob(1) to change the volume.

Changing Source Modes

Rotate the Left-Rear Knob(2) clockwise to cycle through the source modes.

Changing Radio Bands

Rotate the Right-Rear Knob(4) counter-clockwise to cycle through the radio bands.

Tune

Rotate the Right-Front Knob(3) to scroll through the stations.

Mute On/Off

Press the Right-Front Knob(3) to mute and unmute.

Equalizer (EQ)

Press the Left-Front Knob(1) to enter the Tone Control sub-menu. Press and release the Left-Front Knob(1) until you see the EQ setting you'd like to adjust. Rotate the Left-Front Knob(1) to adjust the setting. Press the Left-Front Knob(1) to move to the next item, and repeat to adjust each option. Let the unit time out to set.

Setting the Clock

Press and hold the Right-Front Knob(3) to enter the System Settings sub-menu. Rotate the Right-Front Knob(3) to cycle through the choices until you see CLK, then press the Right-Front Knob(3) to select. Rotate the Right-Front Knob(3) to adjust the hours. Then press the Right-Front Knob(3) again to move on to minutes. Rotate the Right-Front Knob(3) to adjust the minutes. Let the unit time out to set.

Display Color*

Press and hold the Right-Front Knob(3) to enter the System Settings sub-menu. Rotate the Right-Front Knob(3) to cycle through the choices until you see SCAN, then press the Right Front Knob(3) to cycle through the colors. Let the unit time out to set.

Beep On/Off

Press and hold the Right-Front Knob(3) to enter the System Settings sub-menu. Rotate the Right-Front Knob(3) to cycle through the choices until you see BE

Read More About This Manual & Download PDF:

Documents / Resources

| | |
|---|---|
|  | RetroSound Apache Radio Face [pdf] User Guide Apache, Radio Face |
|---|---|

Manuals+