

### **RETTBOX 20A Plugs and Sockets User Guide**

Home » RETTBOX » RETTBOX 20A Plugs and Sockets User Guide 🖫

#### **Contents**

- 1 RETTBOX 20A Plugs and Sockets
- 2 Main Feature
- **3 INSTALLATION STEPS & DIMENSIONS**
- **4 TYPICAL CONNECTING DIAGRAM RETTBOX®**
- **5 WIRING DIAGRAM/RETTBOX® 20 A**
- **6 WIRING DIAGRAM/RETTBOX® 32 A**
- **7 OPTIONS**
- **8 SPARE PARTS RETTBOX® 20 A**
- 9 SPARE PARTS RETTBOX® 32 A & RETTBOX®-AIR 32

Δ

- 10 WEBSITE
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts



#### **RETTBOX 20A Plugs and Sockets**





#### 20 A/32 A

- For all types of emergency vehicles
- DECONTACTOR™ for power supply with secure/automatic ejection RETTBOX® or power supply with compressed air RETTBOX®-Air
- AISI 316 L stainless steel housing with the electromagnetic coil (12 V DC-24 V DC)
- Automatic ejection of the coupler socket upon start-up of the vehicle
- 5 pin connector for Anti-start function
- Voltage presence indicator
- RETTBOX®-Air: Compressed air supply up to 13 bar
- More than 10,000 matings tested


#### **Main Feature**

	RETTBOX® (20 A)	RETTBOX®-Air (20 A)	RETTBOX® (32 A)	RETTBOX®-Air (32 A
Front	stainless steel	stainless steel	stainless steel	stainless steel
Вох	glassfiber reinforced polyamide	glassfiber reinforced polyamide	stainless steel	stainless steel
Protection mode (trapdoor closed)	IP55	IP55	IP55	IP55
Self-closing coupler socket	IP55	IP55	IP55	IP55
Front dimensions (LxH) in mm	114 x 184	114 x 184	132 x 188	132 x 188
Cut-out dimensions on vehicle's frame (LxHxP) in mm	83 x 163 x 94	83 x 163 x 94	103 x 173 x 145	103 x 173 x 145
Coupler socket cable supplied	4 m	4 m*	4 m	4 m*
Auxiliary contacts (optional)	2 aux	no	3 aux	3 aux
Weight (excluding coupler socket)	1 200 g	1200 g	3 200 g	3200 g
Built-in decontactor	20 A	20 A	32 A	32 A
Compressed air duct	no	up to 13 bars	no	up to 13 bars
Cable	flexible	flexible	flexible	flexible

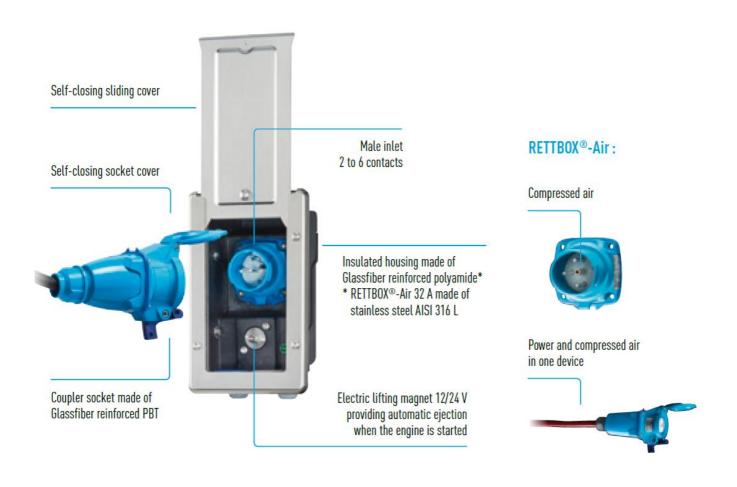

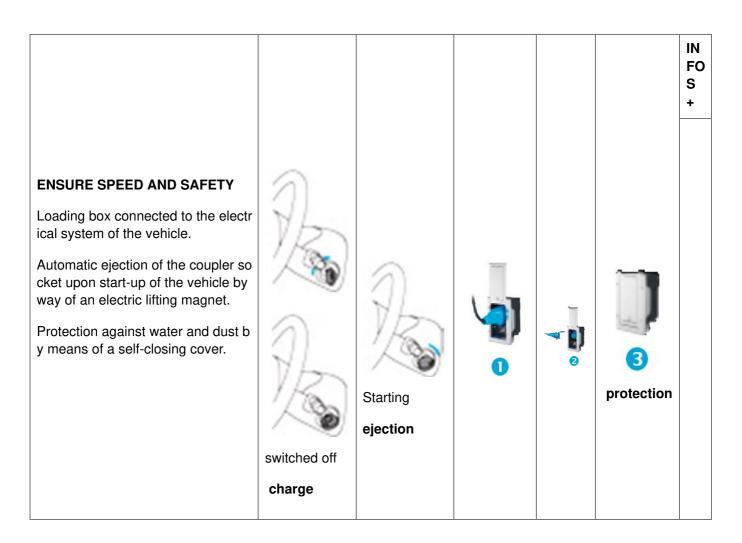


#### **INSTALLATION STEPS & DIMENSIONS**

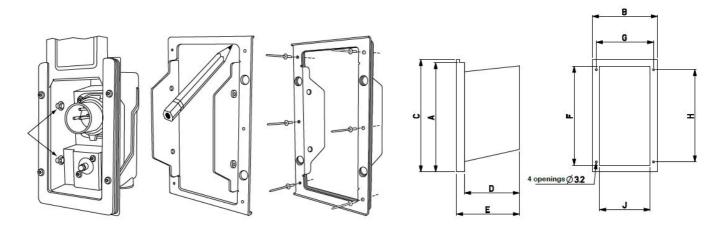

	A	В	С	D	E	F	G	Н	J
RETTBOX® 20 A	184	114	184	89	114	163	94	152	83
RETTBOX®-Air 20 A	184	114	184	89	114	163	94	152	83
RETTBOX® 32 A	188	132	197	140	151	173	116	169	103
RETTBOX®-Air 32 A	188	132	197	140	151	173	116	169	103

#### TYPICAL CONNECTING DIAGRAM RETTBOX®

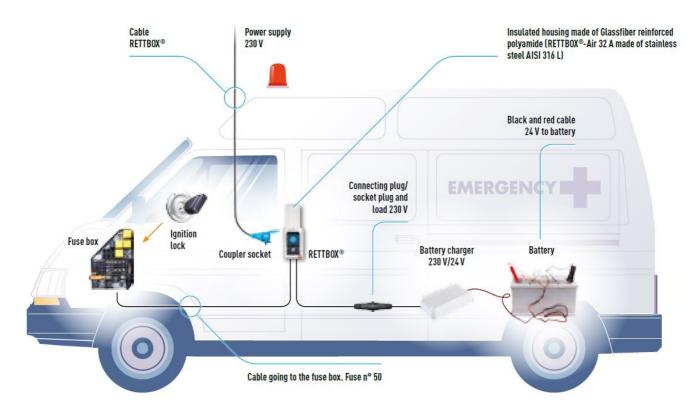


#### **WIRING DIAGRAM/RETTBOX® 20 A**



# 12/24 V



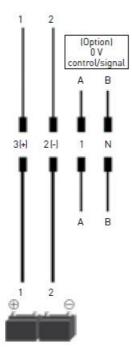

RETTB0X® 20 A 12/24 V






Due to a standardization, it was necessary to determine the color coding of the electric ejection (magnet) as follows:

BLUE = PLUS (+), BROWN = MINUS (-).

Please be sure to observe the polarity, so that the freewheeling diode will not be damaged.



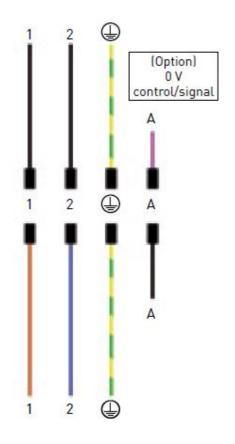




RETTBOX®-AIR 20 A / 230 V /

## 12/24 V



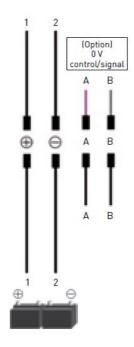

RETTBOX®-AIR 20 A / 24 V




Due to a standardization, it was necessary to determine the color coding of the electric ejection (magnet) as follows:

BLUE = PLUS (+), BROWN = MINUS (-).

Please be sure to observe the polarity, so that the freewheeling diode will not be damaged.


#### **WIRING DIAGRAM/RETTBOX® 32 A**



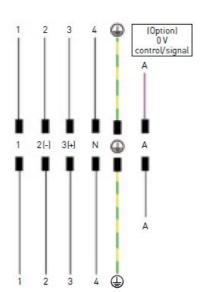






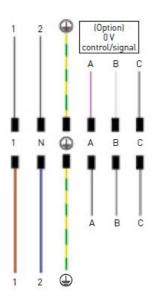








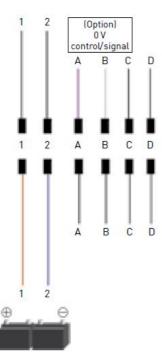

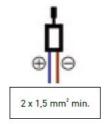




Due to a standardization, it was necessary to determine the color coding of the electric ejection (magnet) as follows:

#### BLUE = PLUS (+), BROWN = MINUS (-).


Please be sure to observe the polarity, so that the freewheeling diode will not be damaged.



**RETTBOX® 32 A/24 V** 

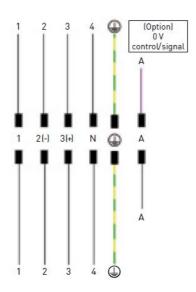




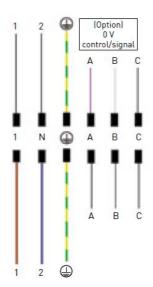







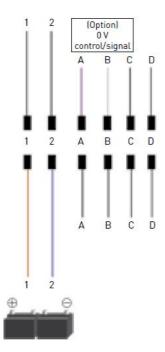







Due to a standardization, it was necessary to determine the color coding of the electric ejection (magnet) as follows:

BLUE = PLUS (+), BROWN = MINUS (-).

Please be sure to observe the polarity, so that the freewheeling diode will not be damaged.

#### **OPTIONS**

EILLING SUSPENSION SYSTEM		PART NUMBER
	(M20) RETTBOX®	611AHUTRRRL
	(M25) RETTBOX®-Air	611AHUTAAAL
	(M25) RETTBOX® 32A	381AHUTRRRL
36	(M32) RETTBOX®-Air 32A	381AHUTAAAL
PTIONAL MOUNTING BOX		
JI.	RETTBOX®/RETTBOX®-Air	611AAUFBAUA1H
ONNECTING KIT FOR COUPLER SOCK	ET CONTRACTOR OF THE CONTRACTO	
	RETTB0X®-Air	611AABZ
1		
KTENSION CORD		
_	Extension cord RETTB0X® 2m CEE 230V	6113015RK2041
	Other on request	

#### **SPARE PARTS RETTBOX® 20 A**

ETTBOX® 20 A, INLET		PART NUMBER
4.5	230 V 20 A 1Ph+N+E	6118015RRR
	12 V DC 20 A + / -	6118059RRR
	24 V DC 20 A + / -	6118089RRF
	400 V 20 A 3Ph+N+E	6118017RRF
	230 V 20 A 1Ph+N+E+2 aux	6118175RRR
AGNET FOR RETTBOX® 20 A		
The same of the sa	12 V	611AMAGRRR12
The state of the s	24 V	611AMAGRRR24
LUG CONTACT		
		611A011
OCKET COUPLER RETTBOX® 20 A WIT	THOUT CABLE	
	230 V 20 A 1Ph+N+E	6113015RRR
	12 V DC 20 A + / -	6113059RRR
(1)	24 V DC 20 A + / -	6113089RRF
	400 V 20 A 3Ph+N+E	6113017RRF
	230 V 20 A 1Ph+N+E+2 aux	6113175RRF
OCKET RETTBOX® 20 A		
	230 V 20 A 1Ph+N+E	6114015RRF
The second second	12 V DC 20 A + / -	6114059RRF
	24 V DC 20 A + / -	6114089RRF
	400 V 20 A 3Ph+N+E	6114017RRF
	230 V 20 A 1Ph+N+E+2 aux	6114175RRF
ANDLE FOR RETTBOX® 20 A SOCKET	COUPLER	
	Poly	511P0D18
CORD FOR MANUAL SEPARATION (SOC	CKET COUPLER)	
		611AZIE
7		
0 •		
OCKET CONTACT		
OCKET CONTACT		

RETTBOX®-AIR 20 A, INLET		PART NUMBER
48	230 V 20 A 1Ph+N+E access from below	6118015AAAU
	230 V 20 A 1Ph+N+E access from behind	6118015AAAH
	12 V DC 20 A + / - access from below	6118059AAAU
	12 V DC 20 A + / - access from behind	6118059AAAH
•	24 V DC 20 A + / - access from below	6118089AAAU
	24 V DC 20 A + / - access from behind	6118089AAAH
MAGNET FOR RETTBOX®-AIR 20 A		
	12 V	611AMAGRRR12
	24 V	611AMAGRRR24
COMPRESSED AIR STICK FOR RETTBOX®	-AIR 20 A INLET	
-		611AST
STRAIGHT COMPRESSED AIR COUPLER F	FOR RETTBOX®-AIR 20 A INLET	
	Straight	611AGEF
ANGLE COMPRESSED AIR COUPLER FOR	RETTBOX®-AIR 20 A INLET	
Alba.	Angle	611AWIN
<b>*</b> ***		
PLUG CONTACT RETTBOX®-AIR 20 A		
<b>U</b>		611A011

PLUG CONTACT RETTBOX®-AIR 20 A		
-		611A011
COUPLER SOCKET RETTBOX®-AIR 20 A, WI	THOUT CABLE	
	230 V 20 A 1Ph+N+E	6113015AAA
	12 V DC 20 A + / -	6113059AAA
	24 V DC 20 A + / -	6113089AAA
SOCKET RETTBOX®-AIR 20 A		
	230 V 20 A 1Ph+N+E	6114015AAA
<b>E</b>	12 V DC 20 A + / -	6114059AAA
*	24 V DC 20 A + / -	6114089AAA
HANDLE FOR COUPLER SOCKET RETTBOX <sup>6</sup>	-AIR 20 A	i i
	Poly	511P025P
MANUEL FOR ODDI ELICOCKET KETTBOX		511P0

CORD FOR MANUAL SEPARATION (SOCKET COUPLER)	
	611AZIE

•	
COMPRESSED AIR COUPLER FOR RETTBOX	®-AIR 20 A SOCKET
	611ADRU
SOCKET CONTACT	



611A021

#### SPARE PARTS RETTBOX® 32 A & RETTBOX®-AIR 32 A

RETTBOX®-AIR 32 A, INLET		PART NUMBER
	230 V 32 A 1Ph+N+E+3aux	3818187AAA
	400 V 32 A 3Ph+N+E+1aux	3818247AAA
MAGNET FOR RETTBOX®-AIR 32 A		
AL.	12 V	381AMAGRRR12
	24 V	381AMAGRRR24
COMPRESSED AIR STICK FOR RETTBO	X <sup>®</sup> -AIR 32 A INLET	
		381AST
STRAIGHT COMPRESSED AIR COUPLE	R FOR RETTBOX®-AIR 32 A INLET	
	Straight	381AGER
PLUG CONTACT RETTBOX®-AIR 32 A		
U		311A011
PLUG AUXILIARY CONTACT RETTBOX®	-AIR 32 A	311A01930
N. C.		311401730
COUPLER SOCKET RETTBOX®-AIR 32 A	A, WITHOUT CABLE	
	230 V 32 A 1Ph+N+E+3aux	3813187AAA
	400 V 32 A 3Ph+N+E+1aux	3813247AAA
OCKET RETTBOX®-AIR 32 A		
76	230 V 32 A 1Ph+N+E+3aux	3814187AAA
	400 V 32 A 3Ph+N+E+1aux	3814247AAA
ANDLE FOR COUPLER SOCKET RETT	BOX®-AIR 32 A	
	Poly	512P032P
ORD FOR MANUAL SEPARATION (SO	KET COUPLER)	
		381AZIE
~		
COMPRESSED AIR COUPLER FOR RET	TBOX®-AIR 32 A SOCKET	
THE RESERVE		381ADRU
SOCKET CONTACT RETTBOX®-AIR 32 A	(SAME ONE FOR AUXILIARIES)	
		311A021
NOSSES		

#### **WEBSITE**

• Retrieve your business contacts.

- Download our documentation related to your field of activity.
- · Learn more about our group.
- · Discover our new products.
- · Follow our current events.
- · Ask your questions online.

#### NON CONTRACTUAL DOCUMENTS AND PICTURES

All the indications appearing in this catalog are indicative and could not constitute a commitment on our part. We reserve the right to alter the specifications of our products without any prior notice in our efforts to continuously improve our product's features. For your information, the most updated version is the one on our website.

#### **Documents / Resources**



**RETTBOX 20A Plugs and Sockets** [pdf] User Guide 20A Plugs and Sockets, 20A, Plugs and Sockets

#### References

• Industrial plugs and socket-outlets for industries & ATEX/IECEx zones - MARECHAL®

Manuals+,