



REV Ritter 15GD-3A-1 Mechanical Timer Socket Instruction Manual

[Home](#) » [REV Ritter](#) » REV Ritter 15GD-3A-1 Mechanical Timer Socket Instruction Manual 

Contents

- [1 REV Ritter 15GD-3A-1 Mechanical Timer Socket](#)
- [2 INTRODUCTION](#)
- [3 PROPER USE](#)
- [4 GENERAL INFORMATION](#)
- [5 GENERAL SAFETY INSTRUCTIONS](#)
- [6 SCOPE OF DELIVERY](#)
- [7 FUNCTION](#)
- [8 COMMISSIONING AND PROGRAM SETTING](#)
- [9 TECHNICAL DATA](#)
- [10 CLEANING](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)

 


REV Ritter 15GD-3A-1 Mechanical Timer Socket





INTRODUCTION

Dear Customer, We'd like to thank you for purchasing our product. Please read the following operating instructions thoroughly before using this product for the first time and keep it handy for future reference (S1). Please check the product before use for any damage

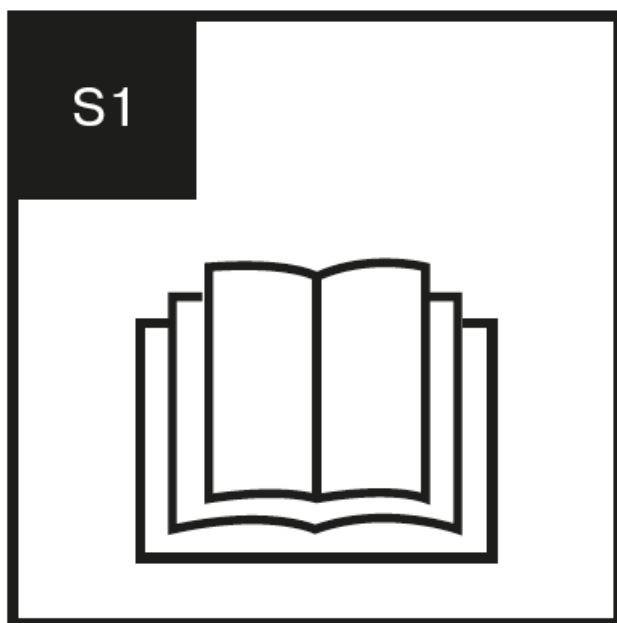

PROPER USE

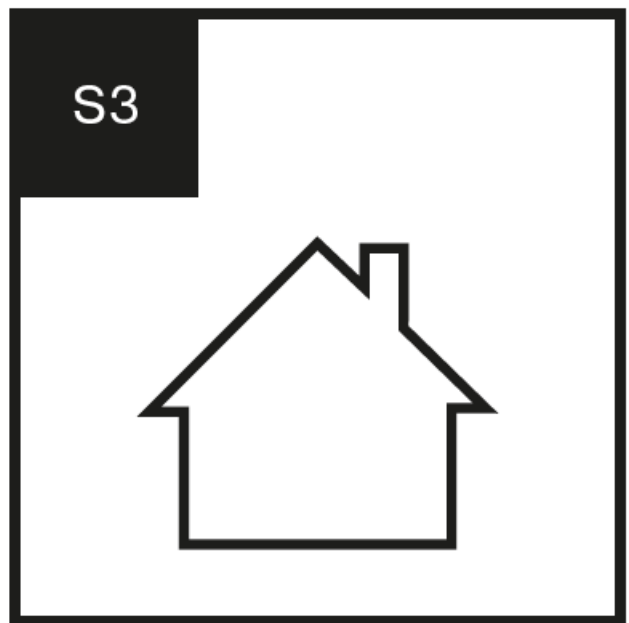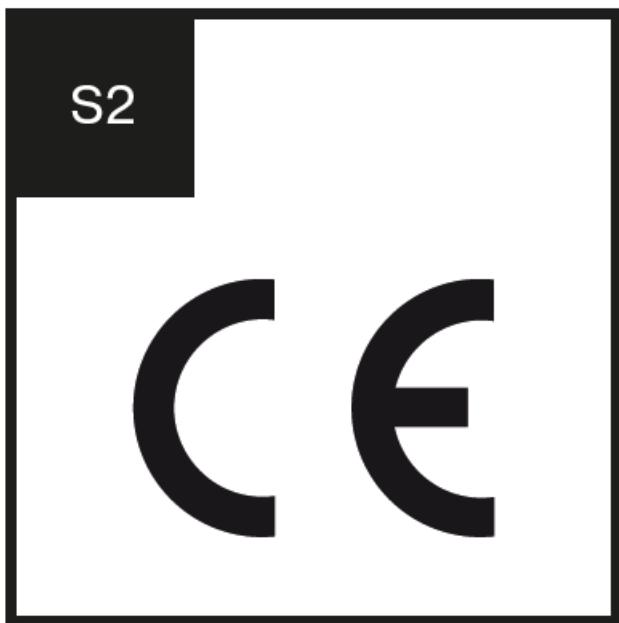  


- The product is compliant with the applicable European CE directives (S2).
- This product conforms to the appropriate European safety standards.
- The product is IP20 rated and suitable for use in dry interior spaces (S3).
- The product is intended exclusively for household use or similar purposes. It must not be used for commercial purposes!
- The product may only be used only for the purpose for which it is intended, in accordance with this user manual!
- The product is not suitable for rough use (e.g. construction sites)!
- The product is not intended for use by persons (including children) whose physical, sensory or mental abilities are limited or who lack experience and knowledge! These persons may only use the product if they are supervised by a person responsible for their safety, or if they have been inducted into how to use the product! The supervision and use of this product must be carried out by a responsible person!
- Make sure that this product is kept out of the reach of children or unauthorised persons.

GENERAL INFORMATION

- Handle this product carefully. It can be damaged by shocks, blows or by being dropped, even from a low height!
- Disconnect the product's mains power plug in the event of a fault during operation.
- Only use the supplied original parts!
- Do not use additional components!
- This product has no replaceable parts. Do not attempt to open or repair this product!

GENERAL SAFETY INSTRUCTIONS

 
S4

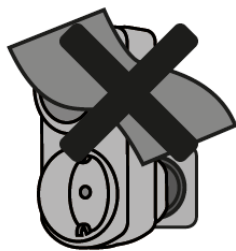


S5



 S6

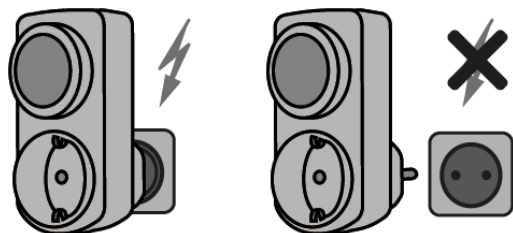

S7

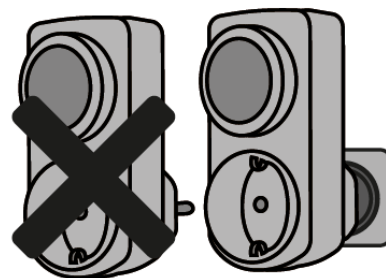 

- Observe technical data!
- Observe and keep the operating instructions!
- Pass on operating instructions to subsequent owners!
- Not intended for use by children!
- Do not operate or continue to use a damaged product!
- Must not be used in areas that represent an explosion hazard (e.g. carpentry workshop, paintshop, or similar)!
- Do not use in the immediate vicinity of flammable materials!
- Do not install in the immediate vicinity of paddling pools, fountains, ponds or similar bodies of water.
- Do not immerse in water or other liquids!
- Do not operate with wet hands!
- Never undertake repairs yourself. Repairs may only be carried out by the manufacturer or an authorised service representative.
- This product is suitable for normal household applications; it may not be used as a safety device!
- Make sure there's enough free space around the product for good ventilation! All objects in the vicinity of the product should be at least 10cm away!
- Do not operate the product when covered (S4). This could lead to a dangerous buildup of heat!
- The product must remain freely accessible (also when in use)!
- For the connection, only use regular mains sockets (230V~, 50Hz) with protective conductors of the public supply network which are easily accessible!
- Do not open the housing (S5)!
- A conversion or modification of the product affects product safety. Caution: risk of injury! A conversion or modification of the product must not be carried out!
- De-energised only when the plug is pulled out (S6)!
- Do not operate the product's buttons with electrically conductive objects!

- Do not plug one behind the other (S7)!
- Do not operate the product at, on or in the vicinity of open flames (e.g. candles)!
- Do not expose the product to direct sun and shield it from extreme heat!
- Do not operate any devices whose unattended operation could endanger life and property!
- Plugged-in power supply units must not exceed a temperature of 50°C.
- Only connect devices up to max. 3680W (ind. 460VA) total power!

SCOPE OF DELIVERY

Check the delivery for completeness and perfect condition. In the case of missing parts or damage:

- do not mount the unit!
- do not put the unit into operation!
- make a complaint to the supplier.


The deliver consists of:

 
- Product
- Instructions


FUNCTION

The programmed switching program repeats itself every 24 hours (daily timer). The smallest switching interval is 30 minutes.

COMMISSIONING AND PROGRAM SETTING

1. The black switch pins located on the edge of the turntable are all pressed downwards on delivery, i.e. in the switched-on state. Pull all switch pins upward.
2. Turn the program wheel to the right in the direction of the arrow until the marking triangle corresponds to the current time of day.
3. **Programming:** Move the side slide switch to the I position. Press the switch pins on the edge of the turntable (each represents 30 minutes of switching time). ON: Switch pins at bottom, OFF: Switch pins at top (S8). Set the side slide switch to the -position.
4. Slide switch

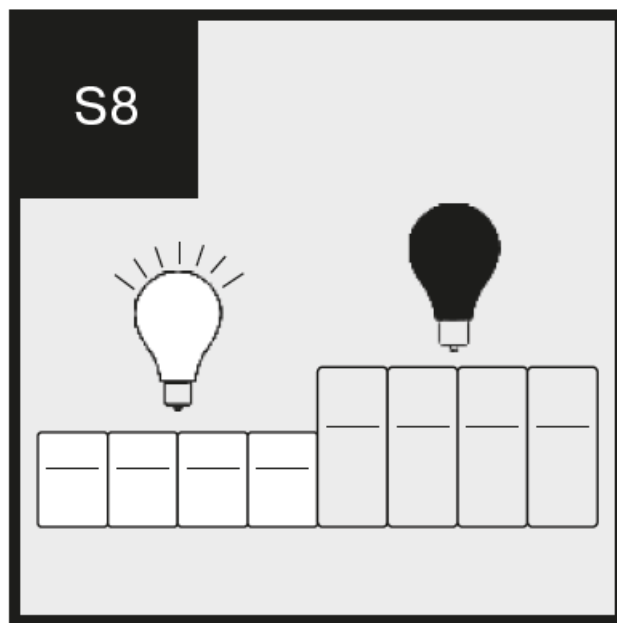

| | |
|---|----------------------|
| I | Continuous operation |
|  | Programming active |

TECHNICAL DATA

- **Rated data:** 230V~; 50Hz; 16(2)A
- **Power:** max. 3680W (ind. 460VA)
- Daily program (24h)
- 48 switching times per day
- **Minimum switching interval:** 30 minutes
- **Single-pole disconnection:** Micro contact opening width μ
- Socket outlet with increased contact protection
- **IP protection class:** IP20
- **Protection class:** I (S9)
- **Ambient temperature:** 0°C – +25°C / max. 25°C
- Continuous operation possible

CLEANING

- Unplug the product from the power outlet before cleaning!
- Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.

WEEE DISPOSAL INFORMATION

According to the European regulations, used electrical and electronic equipment may no longer be put out into unsorted rubbish. The symbol on the wheeled rubbish bin points out the necessity for separated collection. Help us to protect the environment and ensure that this unit is put out in the appropriate systems for separate collection once you do not use it any longer. DIRECTIVE OF THE EUROPEAN PARLIAMENT AND COUNCIL of 4th July 2012 concerning used electrical and electronic equipment (S10).

S9



S10




SERVICE

If you have any questions concerning our products or a complaint, then please go to www.rev.de to find out how to make contact or how to organise a return. Alternatively, send an email to service@rev.de. We'd like to point out that we are unable to process any shipments which do not have a return number and will not accept them.

You can find a multilingual version of this manual at www.rev.de. Alternatively, you can also follow the QR-code below.



Documents / Resources

| | |
|---|---|
|  | <p>REV Ritter 15GD-3A-1 Mechanical Timer Socket [pdf] Instruction Manual 15GD-3A-1, 20GD-3A, 15GD-3A-1 Mechanical Timer Socket, Mechanical Timer Socket, Timer Socket, Socket</p> |
|---|---|

References

-  [REV Ritter GmbH](#)
-  [REV Ritter GmbH](#)