



REVALL GC18 Bluetooth FM Transmitter User Manual

[Home](#) » [REVALL](#) » REVALL GC18 Bluetooth FM Transmitter User Manual 

Contents

- [1 REVALL GC18 Bluetooth FM Transmitter](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Product information](#)
- [5 Plug & Play](#)
- [6 Product specifications](#)
- [7 Return Conditions and Warranty](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

REVALL

REVALL GC18 Bluetooth FM Transmitter



Product Specifications

- Merk: REVALL
- Model: GC18
- Input: 12-24V
- Output:
 - USB: 5V/3A, 9V/3A, 12V/2.5A, 20V/1.5A
 - Type-C: 5V/3A, 9V/3A, 12V/3A, 15V/2A, 20V/1.5A
 - USB+Type-C: 5V/3A
 - Fast charging: QC3.0+FCP+AFC+PD and more
- Bluetooth version: Bluetooth 5.0+BR+EDR+BLE
- Supported files: MP3/WMA/APE/WAV/FLAC
- Play mode: USB stick/SD card/FM radio/Bluetooth
- FM frequency: 87.5MHz-108.0MHz
- Dimensions: 43.2x64mm
- Material: Aluminium+Koper+RVS+ABS+PC

Product Usage Instructions

Plug & Play

1. Install the device into the cigarette lighter socket (12V-24V).
2. Select a frequency on your radio.
3. Long press the menu button and match the frequency with the frequency of the radio. Use the left and right buttons to change the frequency.

4. Connect your mobile device to the Bluetooth (GC-18).
5. Play your favorite playlist and enjoy safe calls with your family and friends!

Frequently Asked Questions

Why is my device not connecting?

- Check if the frequency of the radio matches the frequency of the FM Transmitter.
- Check if your mobile device is connected to the Bluetooth of the FM Transmitter GC-18.

Why do I hear noise?

- Check if the frequency of the radio matches the frequency of the FM Transmitter.
- Try a different frequency connection that doesn't interfere.
- Reconnect the device in the cigarette lighter socket and reconnect with Bluetooth.
- Most car radio systems always have some noise in the connection. Try to find the right frequency with minimal noise.
- We have conducted extensive tests and the REVALL FM transmitter has minimal noise and echo, providing the best Hi-Fi music quality.

Why do I hear an echo?

- Check if the frequency of the radio matches the frequency of the FM Transmitter.
- Check during calls if the call channel is set correctly. Press the left or right button to change channels.

Why is my device not charging?

- Have you connected the device after starting the car?
- Is the device properly connected to the cigarette lighter socket?
- Is the USB cable defective?

Do you have any further questions or comments?

Feel free to contact us! Send us an email at info@revall.nl or send a message via Bol.com.

Product information



Plug & Play

1. Install the device into the cigarette lighter socket (12V-24V).
2. Select a frequency on your radio.
3. Long press the menu button and match the frequency with the frequency of the radio. By pressing the left and right button you can change the frequency.
4. Connect your mobile device with the Bluetooth (GC-18).
5. Listen to your favorite playlists and call safely with your friends and family!



Product specifications

- **Brand:** REVALL
- **Model:** GC18
- **Input:** 12-24V
- **Output:** USB: 5V/3A 9V/3A 12V/2,5A 20V/1,5A
- **Type-C:** 5V/3A 9V/3A 12V/3A 15V/2A 20V/1,5A USB + Type-C: 5V/3A
- **Fast charging:** QC3.0 + FCP + AFC + PD and more
- **Bluetooth version:** Bluetooth 5.0 + BR + EDR + BLE
- **Supported file formats:** MP3/WMA/APE/WAV/FLAC
- **Play mode:** USB stick/SD card/FM radio/Bluetooth
- **FM frequency:** 87.5 MHz – 108.0 MHz
- **Dimensions:** 43,2 x 64mm
- **Material:** Aluminium + Koper + RVS + ABS + PC

Return Conditions and Warranty

- We strive to exceed customer expectations with every order and aim to assist all our customers as promptly as possible with any issues.
- If there are quality problems experienced after ordering a product, please contact us within 30 days to find a resolution.
- Returns can be made free of charge through Bol.com and are at the customer's expense via revall.nl.
- The warranty period for all REVALL products is 12 months.
- The warranty does not apply in cases of damage caused by human factors or incorrect use of the product.
- If you have any questions or comments, feel free to reach out to us! Send us an email at info@revall.nl or a message via [Bol.com](https://www.bol.com)

FAQ

Why is my device not connecting

Check if the radio frequency matches the frequency of the FM Transmitter. Verify if your mobile device is connected to the Bluetooth of the FM transmitter GC-18.

Why do I hear static?

Check if the radio frequency matches the frequency of the FM Transmitter. Try a different frequency connection that does not interfere. Reconnect the device to the cigarette lighter socket and pair again with Bluetooth. Most car radio systems always have some static in the connection. Try to find the right frequency with minimal static. We have conducted extensive tests, and the REVALL FM transmitter has the least static and echo, providing the best HiFi music quality

Why do I hear an echo?

Check if the radio frequency matches the frequency of the FM Transmitter. During a call, check if the call channel is set correctly. Press the left or right button to change the channel


Why is my device not charging?

Did you connect the device after the car was started? Is the device properly connected to the cigarette lighter socket? Is the USB cable defective?

Do you have any questions or comments

Feel free to contact us! Send us an email at info@revall.nl or send us a message via [Bol.com](https://www.bol.com)

Documents / Resources

 <p>REVALL Bluetooth FM Transmitter User Manual Rechargeable Cable</p>	<p>REVALL GC18 Bluetooth FM Transmitter [pdf] User Manual GC18 Bluetooth FM Transmitter, GC18, Bluetooth FM Transmitter, FM Transmitter, Transmitter</p>
---	--

References

- [!\[\]\(e615ca91639aee4263e67e1cc9ac86eb_img.jpg\) De winkel van ons allemaal | bol](#)
- [!\[\]\(ff4f02ee9868b6fc73231e11f2af1336_img.jpg\) REVALL Auto Accessoires](#)
- [User Manual](#)

