

REVAMP[®]
PROFESSIONAL
Revamp Soft Curlauto
Wrap Ceramic Rotating
Curling Tong



Revamp Soft Curlauto Wrap Ceramic Rotating Curling Tong User Guide

[Home](#) » [REVAMP](#) » Revamp Soft Curlauto Wrap Ceramic Rotating Curling Tong User Guide 

Contents

- [1 Revamp Soft Curlauto Wrap Ceramic Rotating Curling Tong](#)
- [2 Product Usage Instructions](#)
- [3 FEATURES](#)
- [4 INSTRUCTIONS FOR USE](#)
- [5 CREATING PERFECT SOFT CURLS AND WAVES](#)
- [6 CLEANING & MAINTENANCE](#)
- [7 IMPORTANT SAFEGUARDS](#)
- [8 3 YEAR GUARANTEE](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

REVAMP[®]
PROFESSIONAL

Revamp Soft Curlauto Wrap Ceramic Rotating Curling Tong



Specifications:

- Ceramic 32mm barrel
- Cool tip
- Power button & temperature control button
- Temperature indicator
- Right curling button
- Left curling button
- Tong clip
- Reset button
- Swivel cable
- Heat resistant glove

Product Usage Instructions

Creating Perfect Soft Curls and Waves:

1. Open the tong clip and place one section of hair at a time into the tong clip.
2. Hold either the left or right curling button to rotate the barrel. Release the button to stop rotation.
3. Hold for a few seconds and then release the hair using the tong clip.
4. Press the reset button to return the tong clip to its original position. Repeat for perfect soft curls and waves.

Caution: Be careful to avoid contact with the scalp and skin to prevent burns.

Auto Shut-Off:

The appliance has an automatic shut-off feature for safety. If left on continuously for more than 60 minutes, it will switch off. To continue use, press the power button and adjust the temperature control. Always remember to switch off and unplug when not in use.

Cleaning & Maintenance:

Follow the maintenance instructions provided in the user manual to ensure proper care of the product.

FAQ:

- **Q: Can I use the product near water sources?**

A: No, this appliance should not be used near water sources like bath-tubs or basins to prevent hazards.

 
- **Q: What should I do if the plug is damaged?**

A: If the plug is damaged, it can be replaced with a BS 1363 plug fitted with a 13A BS 1362 fuse. Contact a qualified electrician if unsure.

AUTO REVOLVE SOFT CURL **Ceramic Rotating Curling Tong**

user guide

FEATURES

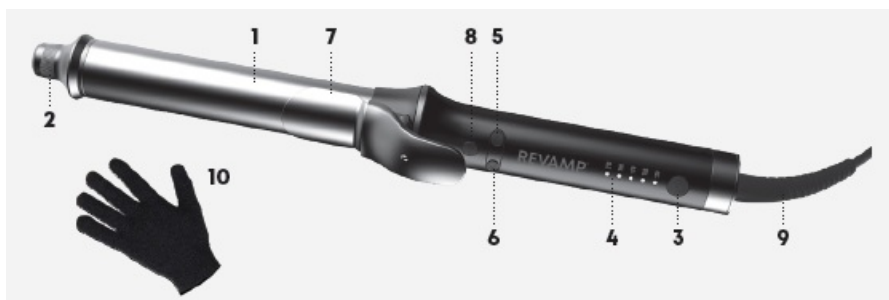

1. Ceramic 32mm barrel
2. Cool tip
3. Power button & temperature control button
4. Temperature indicator
5. Right curling button
6. Left curling button
7. Tong clip
8. Reset button
9. Swivel cable
10. Heat resistant glove

AUTOMATIC ROTATING BARREL

The Revamp SOFT CURL AUTO WRAP carefully wraps the hair for you, producing soft curls and waves at the touch of a button.

PROGLOSS™ SUPER SMOOTH OILS

Every product in the Revamp haircare range is infused with PROGLOSS™ SUPER SMOOTH OILS – enriched with Argan, Keratin and Coconut for ultimate smoothness and shine.

INSTRUCTIONS FOR USE

- Plug the appliance into a 220-240V mains power supply.
- Press and hold the power button to turn on the product. Then press the power button again to adjust to desired temperature. While heating, the LED light will blink. Once set temperature is reached, the LED light will stop

blinking and a beep sound will occur and is ready to style.

- It is important to always select the proper heat settings for your hair type.

Hair type	Temperature range
Fine hair	130°C–150°C
Medium or normal hair	170°C–190°C
Thick hair	190°C–210°C


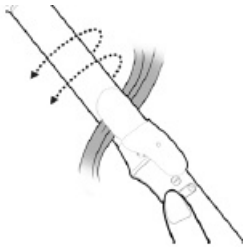 


- Use the heat resistant glove to avoid any accidental burns.

CREATING PERFECT SOFT CURLS AND WAVES

- Before use, ensure hair is clean, dry and tangle-free.
- For extra protection, apply a heat protection spray.
- Section your hair prior to styling.
- Start by sectioning the hair into strands of about 2 to 3 cm wide. Begin with the lower layers at the back.
- Open the tong clip, take one section of hair at a time and put the END of your hair into the tong clip. Close the tong clip.
- Hold the hair tightly from your head and press and hold the “left curling button” or “right curling button” to rotate. Follow it as high as you want the curl to go, ensuring that you maintain a firm grip on the hair section at all times.
- Release the curling button and hold for a few seconds, a beep will sound after 8 seconds.
- Release hair using tong clip.
- Press “reset button” to return the tong clip to the original position.
- Repeat steps for each hair section, allowing each curl to cool in between.
- Repeat this process all over the head. Remember to allow the hair to cool before combing or brushing through.
- **IMPORTANT:** Avoid using the tong close to your scalp, face, ears or neck.
- After using the SOFT CURL AUTO WRAP, switch it off and place it on the product stand or a heat resistant surface and allow to cool before storing it.
- **IMPORTANT!** This appliance must be stored out of reach of children. Children shall not play with the appliance.

CAUTION: This iron reaches a very hot temperature of 210°C. Always begin at the lowest setting and increase lowest setting only as needed for your hair type and style. Always turn off the appliance using the on/off switch and unplug it from the electrical socket.

Follow us on revamphair.com for the latest hair tips and advice.

Step 1	Step 2	Step 3	REPEAT
			
Open the tong clip, take one section of hair at a time and put the END of your hair into the tong clip. Close the tong clip.	Hold the “left curling button” or “right curling button” to rotate. Release curling button to stop rotation.	Hold for a few seconds Release hair using tong clip.	Press “reset button” to return the tong clip to the original position. Repeat for perfect soft curls and waves

Please note:

- This is a high performance product, avoid frequent use to prevent hair damage.
- Regular use of styling products may deteriorate the coating.
- Do not scratch the surface of the product as this will deteriorate the effectiveness of the coating.
- While heating, during use and cooling, place on a flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.
- The product reaches a very high temperature during operation, please style with caution when using. Make sure to keep away from the scalp and skin to avoid burns.

AUTO SHUT-OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, press the power button to switch on. Use the temperature control to select your desired temperature.

This feature should not be considered as a substitute for 'OFF'. ALWAYS REMEMBER TO SWITCH THE APPLIANCE OFF AND UNPLUG FROM THE MAINS WHEN NOT IN USE.

CLEANING & MAINTENANCE

- Switch the appliance off, unplug from the mains and allow to cool fully before cleaning.
- Wipe over all surfaces using a soft damp cloth. Do not use harsh abrasives or cleaners.
- Do not immerse the appliance in water or any other liquid.
- Ensure all parts are dried thoroughly with a soft towel before reusing.
- To prevent cord damage, do not wrap the cord around the appliance, always store the cord loosely next to the appliance.
- Store in a cool dry place.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 16 years and above. Persons with reduced physical, sensory or mental capabilities should not use this product. Persons with lack of experience and knowledge can use the product if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 16

and supervised. Keep the appliance and cable out of reach of children under 16 years.

- **WARNING:** for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable. Ask an electrician for advice.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the main socket.
- **THIS APPLIANCE SHOULD BE UNPLUGGED FROM THE MAIN SUPPLY WHEN NOT IN USE.**



- **WARNING:** This appliance must not be taken into a bathroom. It should not be used near bathtubs, basins or any other vessels containing water.
- This appliance must not be used outdoors.
- Avoid allowing any part of the appliance to come into contact with the face, neck or scalp.
- Do not use the appliance while drowsy or sleeping.
- Do not leave the appliance unattended while plugged in.
- Do not set the appliance down while still on.
- Do not operate with wet hands.
- Do not place the appliance on any soft furnishings or materials e.g. carpet, bedding, towels, rugs etc.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use any extension cord with this appliance.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- If the power cord becomes damaged, discontinue use immediately and return the appliance to your nearest authorised service dealer for repair or replacement in order to avoid a hazard.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those supplied with this product.
- Do not take the appliance apart. There are no serviceable parts inside.
- Let the appliance cool down before cleaning and storing away.
- The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

3 YEAR GUARANTEE

 
FKA Brands Ltd guarantees this product from defect in material and workmanship for a period of 3 years from the date of purchase, except as noted below. This FKA Brands Ltd product guarantee does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorised accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of FKA Brands Ltd. This guarantee is effective only if the product is purchased and operated in the UK / EU. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorised, or repair of products damaged by these modifications is not covered under this guarantee.

FKA Brands Ltd shall not be responsible for any type of incidental, consequential or special damages. To obtain guarantee service on your product, return the product post-paid to your local service centre along with your dated sales receipt (as proof of purchase). Upon receipt, FKA Brands Ltd will repair or replace, as appropriate, your product and return it to you, post-paid. Guarantee is solely through service centre. Service of this product by anyone other than the service centre voids the guarantee. This guarantee does not affect your statutory rights. For your local service centre, go to www.revamphair.com/servicecentres

WEEE explanation



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

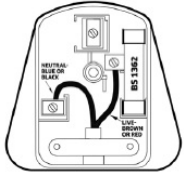

Plug (UK only)

If the plug on this appliance is damaged, it can be replaced with a BS 1363 plug, fitted with a 13A BS 1362 fuse. The recommended fuse for this appliance is 13 amp. Care must be taken when changing the plug. If in doubt, contact a qualified electrician.



SALON BRITISH BRANDS

Revamp is a trademark of Salon British Brands.

Distributed in UK by FKA Brands Limited, Somerhill Business Park, Tonbridge, Kent TN11 0GP, UK

EU Importer: FKA Brands Ltd, 29 Earlsfort Terrace, Dublin D02AY28, Ireland csupport@revamphair.com

IB-CL3000-0324-01

Documents / Resources

	<p>Revamp Soft Curlauto Wrap Ceramic Rotating Curling Tong [pdf] User Guide</p> <p>Soft Curlauto Wrap Ceramic Rotating Curling Tong, Soft Curlauto Wrap Ceramic Rotating Curling Tong, Curlauto Wrap Ceramic Rotating Curling Tong, Wrap Ceramic Rotating Curling Tong, Ceramic Rotating Curling Tong, Rotating Curling Tong, Curling Tong, Tong</p>
--	--

References

- [R Revamp Professional Hair Care Products](#)
- [R Service Centres](#)
- [User Manual](#)

[Manuals+](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.